
Blower Instructions


Comfort Glow®

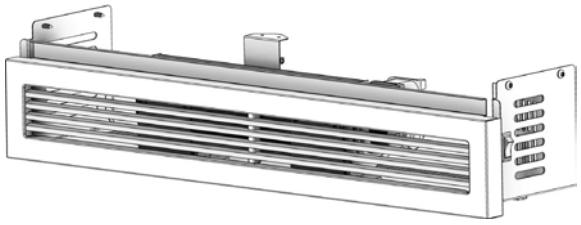


Model Number: **28-7125, 28-7126, 28-7127**

854272


When positioning the blower, ensure that the blower flange rests securely on the stove flange.

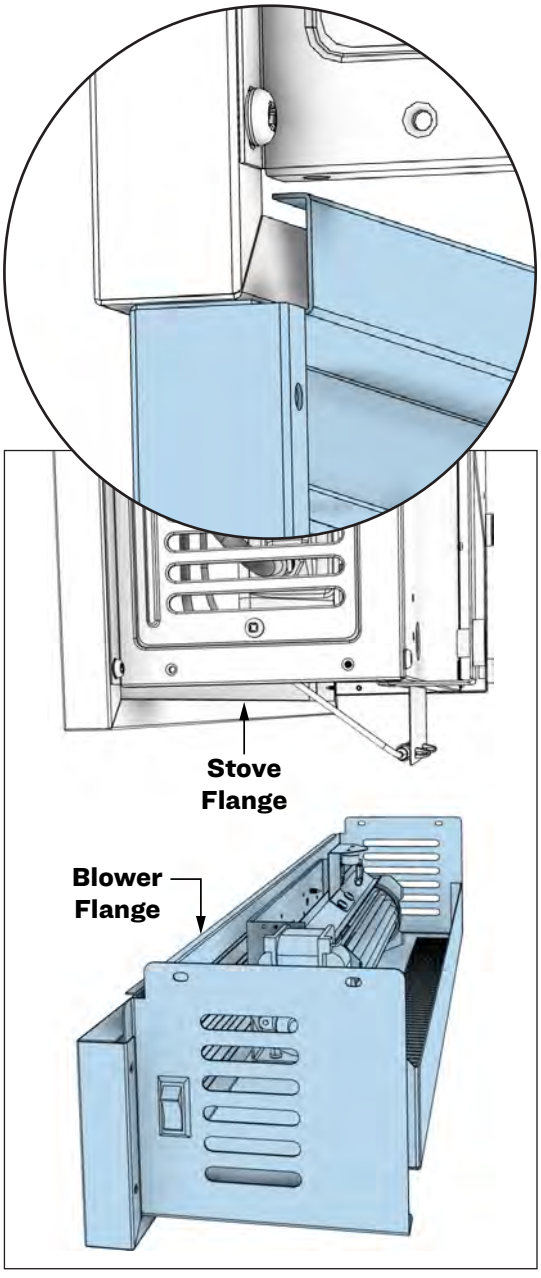

Use the provided 4 screws to secure the blower to the unit.

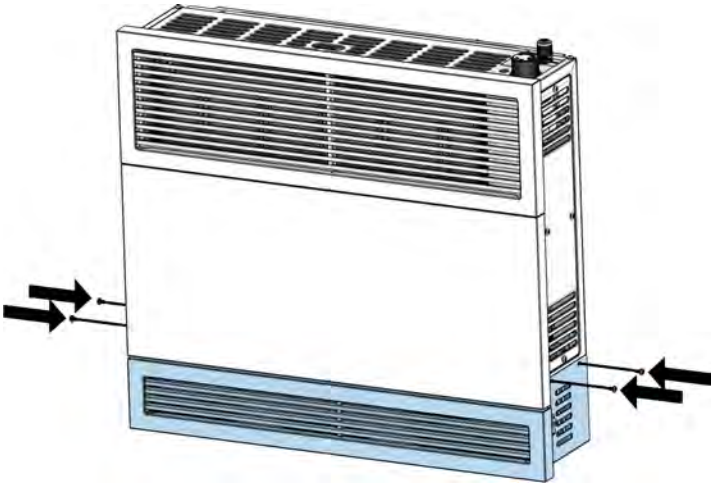


The rocker switch operates in a 3-way configuration: Auto, Off, and On. In the Auto position, the blower will automatically cycle on and off in response to temperature changes. When set to the On position, the blower will run continuously until it is manually turned off.

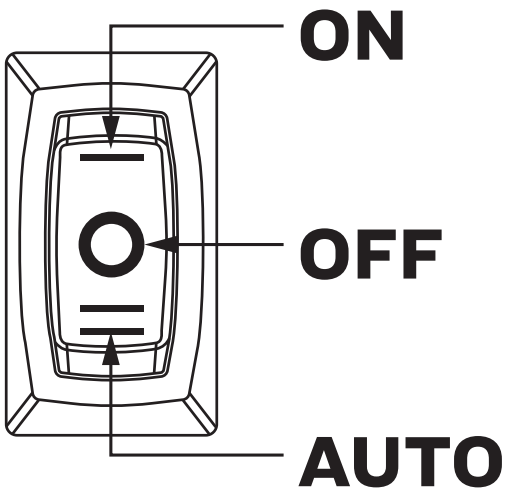

World Marketing of America, Inc, 12256 William Penn Hwy, Mill Creek, PA 17060
Email: info@worldmkting.com PH: 1-800-776-9425


DVB Instructions Pour Le Ventilateur

Comfort Glow®

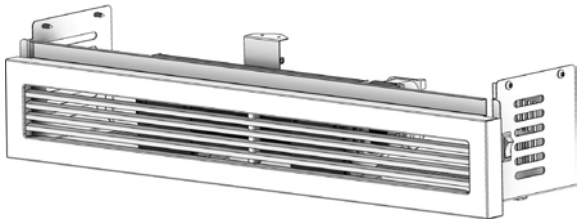


Numéro de modèle: **28-7125, 28-7126, 28-7127**


Lors du positionnement du ventilateur, assurez-vous que la bride du ventilateur repose solidement sur la bride du poêle.

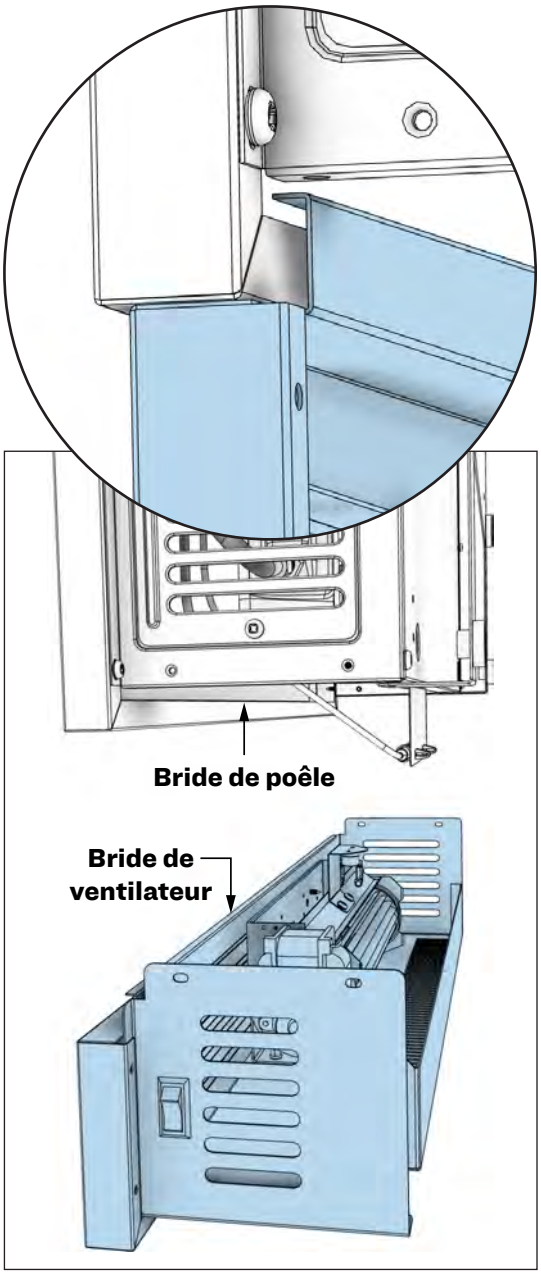

Utilisez les 4 vis fournies pour fixer le ventilateur à l'appareil.

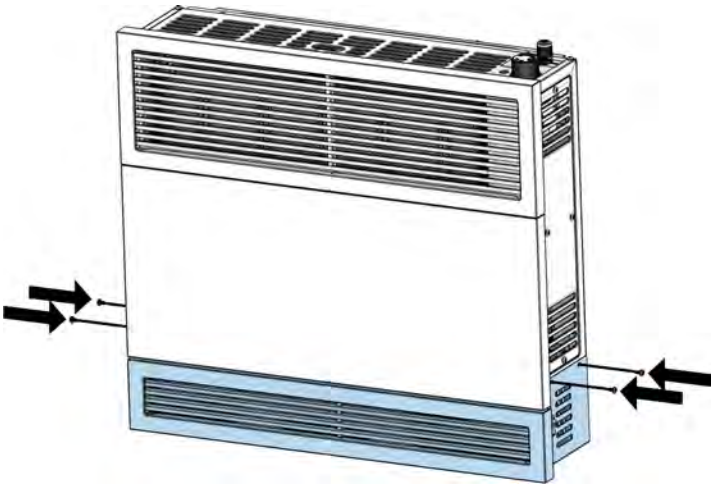

L'interrupteur à bascule fonctionne dans une configuration à 3 voies : Auto, Off et On. En position Auto, le ventilateur s'allume et s'éteint automatiquement en réponse aux changements de température. Lorsqu'il est réglé sur la position On, le ventilateur fonctionne en continu jusqu'à ce qu'il soit éteint manuellement.

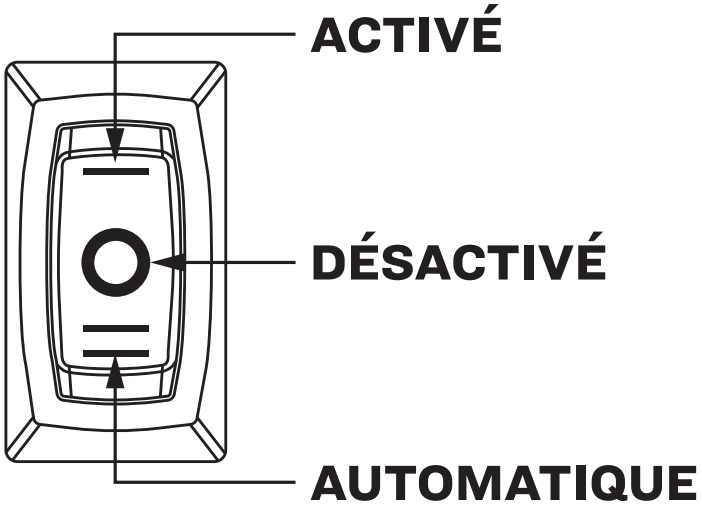

World Marketing of America, Inc, 12256 William Penn Hwy, Mill Creek, PA 17060
Email: info@worldmkting.com PH: 1-800-776-9425