




KIDS


Bubble 'N' Go Mower ³⁺

Caution!

- Always ensure your child never plays with this unit near an actual operating lawn mower.
- Only use designated bubble solution with this unit.
- Avoid spilling the bubble solution when cleaning or refilling the unit as this may cause a slippery floor surface.
- The recommended bubble solution for this unit may cause stains or leave a sticky residue on certain surfaces.
- This unit is for outside play use only.

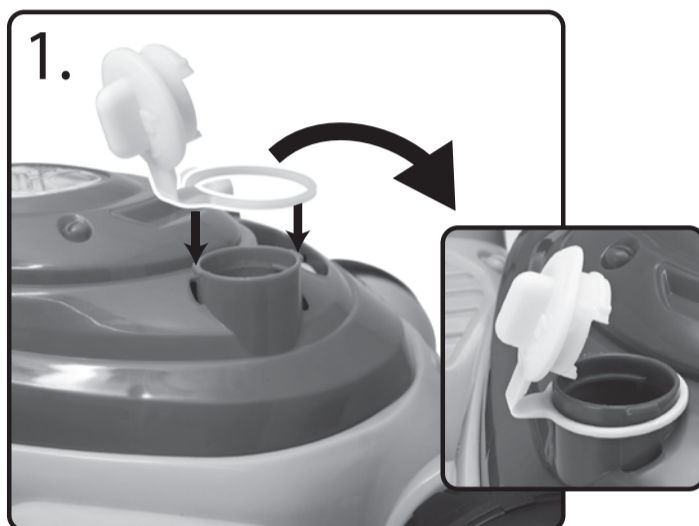


1. Apply the cap onto the unit by pushing the ring over both edges.

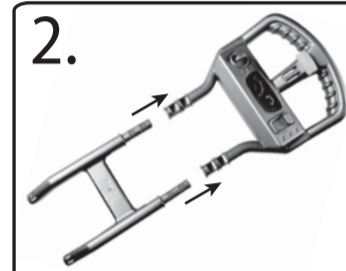

2. Slide the 2 handle sections together until they lock into place.



3. Slide the end of the handles into the slots on the back on the unit.

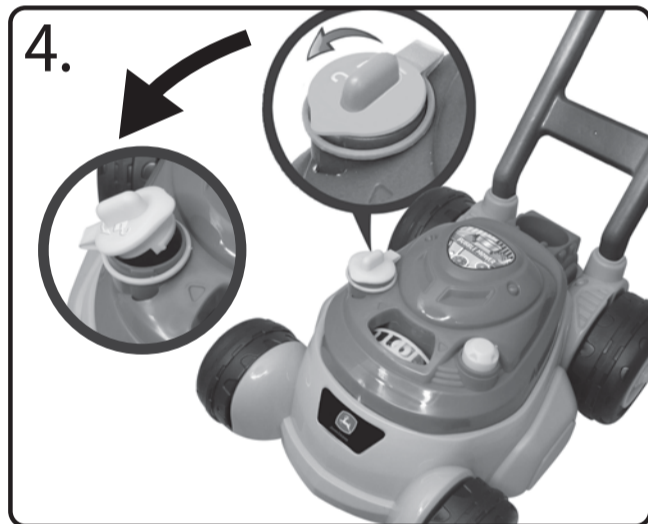

4. Twist off the cap and fill the unit with bubble solution as indicated in the figure above.



5. Twist off the cap and remove the safety seal.




- Pour in the bubble solution, taking care not spill any.
 - Twist the cap back on and begin using the mower unit.
- To reduce chance of solution spilling out during playing, suggest to only pour in not over half bottle (2 oz, or 59ml below) of bubble solutions provided, for each time of play.

WARNING:
 This toy is to be assembled by an adult.
 Harmful if swallowed.
 Please keep bubble solution away from eyes.
 After using bubble solution please wash your hands.
 Parents: Please caution your children against drinking the bubble solution and make sure they keep it out of contact with the eyes.

WARNING:
 To be used under the direct supervision of an adult.

REMOVE OR DISPOSE OF ALL PACKAGING SAFELY BEFORE GIVING TO CHILDREN
 (PACKAGE HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION)
 PRODUCT AND COLORS MAY VARY

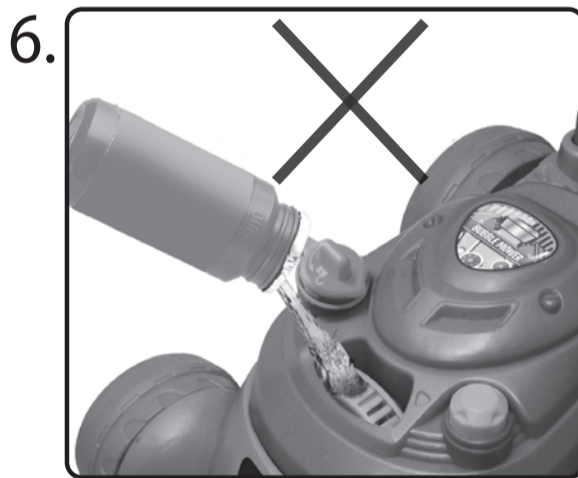

6. Never pour the bubble solution directly into the bubble reel.



7. Avoid over-filling the unit with bubble solution.



Distributed by
 Sunny Days Entertainment, LLC
 PO BOX 80644 Simpsonville, SC 29680
 Made in CHINA
www.sunnydaysent.com

Label position







Cleaning and Care



• Use clean tap water from a hose or faucet and make sure to carefully rinse the bubble reel and filler opening in the front of the unit.

• To drain out all the remaining water, lean the mower forward.

To prevent bubble solution from spilling out,
do not tip the mower over to an angle over 30 degrees:

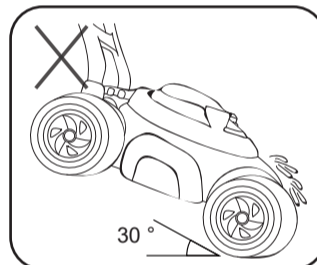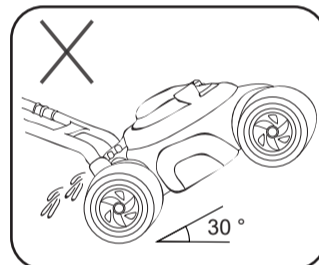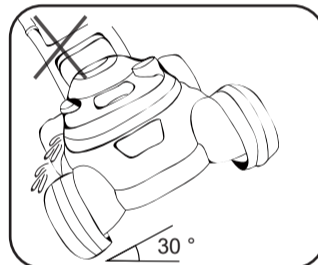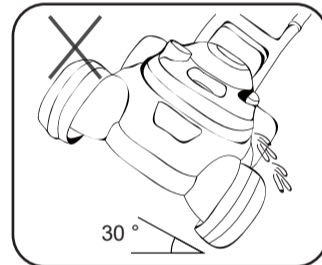

Troubleshooting

Symptom	Reason	Remedy
Bubble fluid leaks from the unit	Unit is being used on a sloped surface.	Always operate the mower on a flat, even surface.
	Bubble solution overflows the bubble chamber.	Use the filler cup to measure the correct amount of bubble solution.
Bubbles aren't produced	Dirty or stuffed up bubble chamber.	See instructions on Cleaning and Care then carefully rinse bubble chamber.
	Your walking pace is too rapid.	Walk more slowly and steadily.
	The unit hasn't been pushed far enough to produce bubbles.	You need to push the unit several steps before bubbles are produced.
	Oil-based lubricants or silicone may be present in the bubble chamber.	Always avoid using silicone or oil-based lubricants on the wheels because they prevent bubble formation even if just small amount enters the bubble chamber.
	The unit's wheels do not come in contact with the ground.	Make sure the unit goes forward with the wheels always in contact with the ground.
	Insufficient bubble solution in the bubble chamber.	Fill up the unit with bubble solution.
Foam appears in the bubble solution	Clogged bubble chamber.	Carefully clean the bubble chamber.



JOHN DEERE





ENFANTS

Tondeuse Bulle 'N' Go

3+

Attention !

- Veillez à ce que votre enfant ne joue pas avec la tondeuse à bulles à proximité d'une vraie tondeuse à gazon.
- Utilisez uniquement un liquide à bulles conçu pour ce type de jouet.
- Évitez de renverser du liquide à bulles lors du nettoyage ou du remplissage du jouet. Le sol pourrait devenir glissant.
- Le liquide à bulles recommandé pour ce jouet peut tacher les surfaces ou y laisser un résidu collant.
- Ce jouet est conçu pour un usage extérieur seulement.

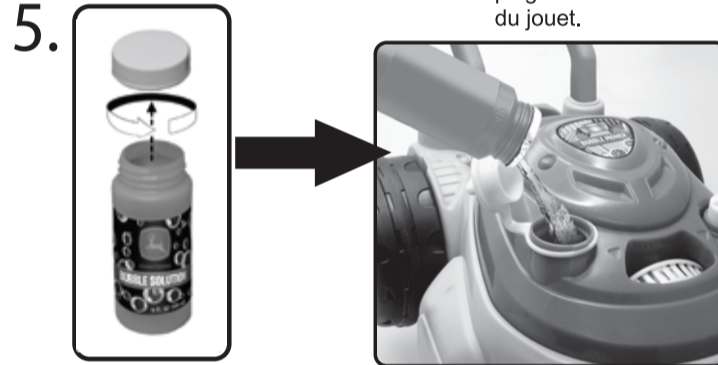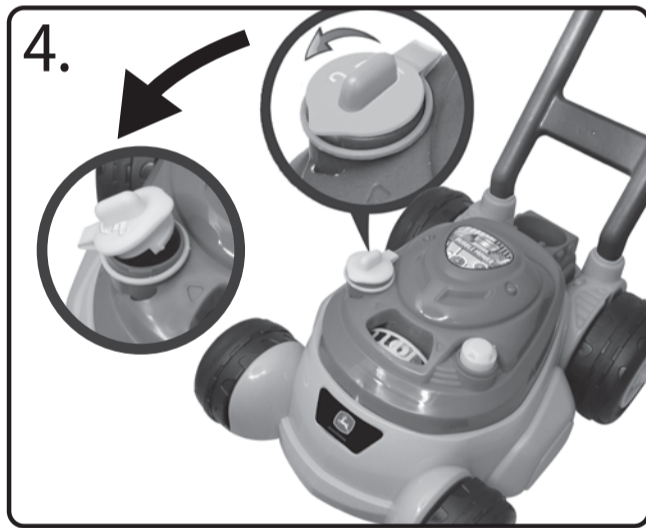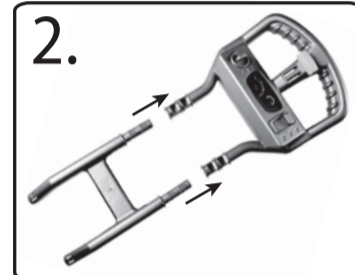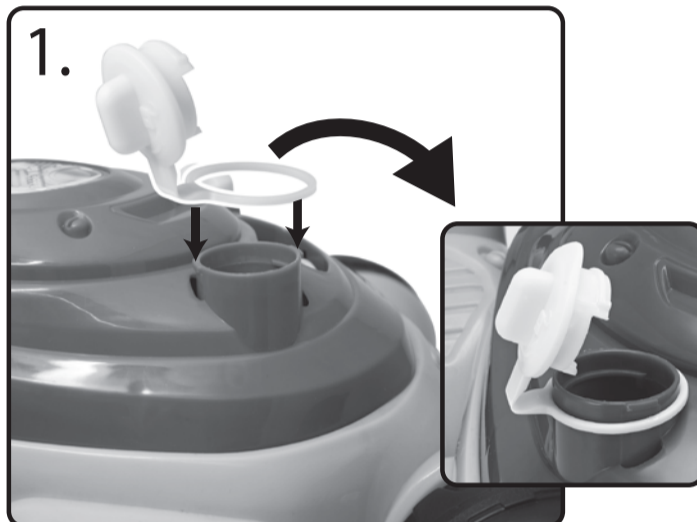

Dévissez le capuchon et remplissez la tondeuse avec le liquide à bulles comme illustré ci-dessus.



AVERTISSEMENT :

Ce jouet doit être assemblé par un adulte.

Nocif si avalé.

Évitez tout contact du liquide à bulles avec les yeux.

Se laver les mains après avoir utilisé le liquide à bulles.

Parents : Veuillez aviser votre enfant qu'il ne faut pas boire le liquide à bulles et qu'il faut éviter tout contact avec les yeux.


AVERTISSEMENT :

À utiliser sous la surveillance directe d'un adulte.

ENLEVEZ ET JETEZ DE MANIÈRE APPROPRIÉE TOUT LE MATÉRIEL D'EMBALLAGE AVANT DE DONNER LE JOUET À L'ENFANT.


(CONSERVEZ L'EMBALLAGE CAR IL CONTIENT DES RENSEIGNEMENTS IMPORTANTS)

LE PRODUIT ET LES COULEURS PEUVENT VARIER.

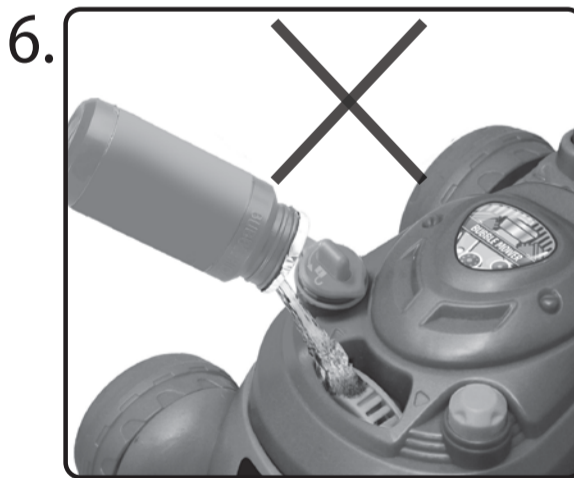

Distributeur par
Sunny Days Entertainment, LLC
PO Box 80644 Simpsonville, SC 29680
FABRIQUE EN CHINE
www.sunnydaysent.com

Emplacement de l'étiquette

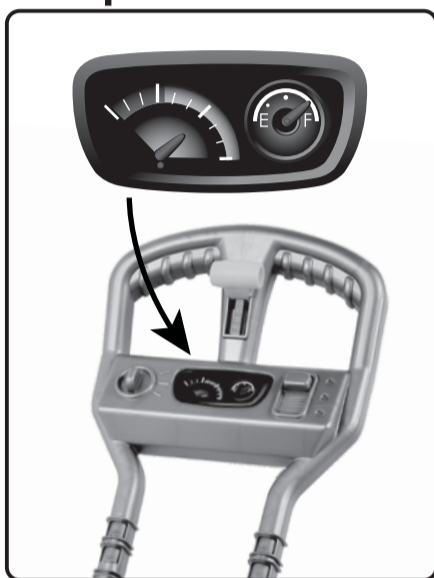





Nettoyage et entretien



• Utilisez l'eau courante propre à partir d'un tuyau d'arrosage ou d'un robinet extérieur et assurez-vous de rincer soigneusement le moulinet à bulles et l'ouverture de remplissage situés sur le devant de la tondeuse.

• Pour égoutter l'eau restante, renversez la tondeuse vers l'avant.

Pour éviter que la solution à bulles ne se répande,
ne basculez pas la tondeuse à un angle supérieur à 30 degrés.

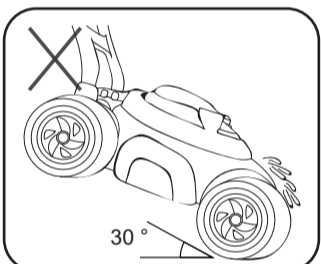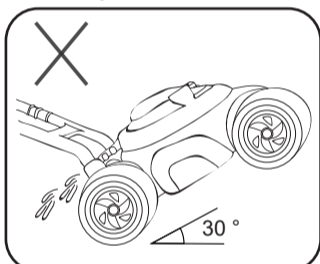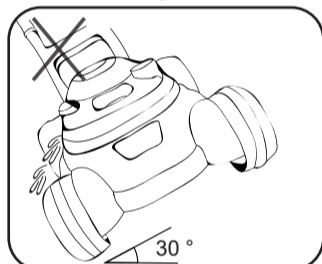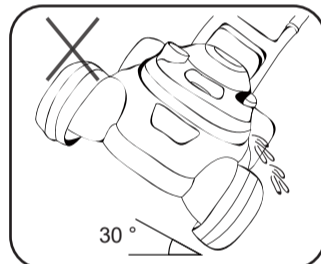

Dépannage

Symptôme	Cause	Solution
Fuite de liquide à bulles	Le jouet est utilisé sur une surface inclinée.	Toujours utiliser la tondeuse sur une surface plate et uniforme.
	Le liquide à bulles déborde du réservoir à bulles.	Utiliser un gobelet de remplissage pour mesurer la bonne quantité de liquide à bulles.
Aucune formation de bulles	Réservoir à bulles sale ou obstrué.	Lire les instructions de nettoyage et d'entretien, puis rincer soigneusement le réservoir à bulles.
	Le pas est trop rapide.	Marcher plus lentement et de façon constante.
	La tondeuse n'a pas été poussée assez loin pour former des bulles.	Pousser la tondeuse pendant plusieurs pas pour former des bulles.
	Le réservoir à bulles peut contenir des traces de lubrifiant à base d'huile ou du silicone.	Ne jamais utiliser de silicone ni de lubrifiant à base d'huile sur les roues. La présence de ces produits même en petite quantité dans le réservoir à bulles peut empêcher la formation de bulles.
	Les roues ne touchent pas le sol.	S'assurer que lorsque la tondeuse avance, les roues restent toujours en contact avec le sol.
	Pas suffisamment de liquide à bulles dans le réservoir.	Remplir le réservoir de liquide à bulles.
De la mousse se forme sur le liquide à bulles	Réservoir à bulles obstrué.	Nettoyer soigneusement le réservoir à bulles.