WARNINGS:

- Recommended for indoor use only: DO NOT expose the product to wind, rain, or other moisture sources.
- Wipe the product clean with a soft, dry cloth when needed.
- Store the product in a cool, dry place when not in use.
- Always fly in an open area away from people, pets, fragile objects, and overhead obstacles such as ceiling fans and light fixtures.
- Turn the product off when not in use to conserve battery life, if applicable.
- Keep the product away from heat sources, open flame, and direct prolonged sunlight.
- Do not use near water or in wet conditions unless specifically designed for water use.
- Do not modify, disassemble, or otherwise alter the product.
- Discontinue use if the product becomes damaged, overheats, or malfunctions.
- Keep fingers, hair, loose clothing, and small objects away from moving parts, where applicable.
- Adult supervision is recommended during setup, charging, and battery installation, where applicable.
- Use only the included or recommended accessories and charging components, where applicable.
- Follow all operating instructions before use. Keep packaging materials away from children and dispose of them properly.
- Not suitable for children under the recommended age listed on packaging.
- Discontinue use if product becomes damaged or malfunctions.
- Installation of batteries & charging should always be supervised by an adult.
- Failure to insert batteries in the correct polarity may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- For best results, use alkaline batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Recycle or dispose of batteries properly according to local regulations.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."
Instruction manual shall include,
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help."

FCC Radiation Exposure Statement:The device has been evaluated to meet general RF exposure requirement.The device can be used in the portable exposure condition without restriction.

30 DAYS LIMITED WARRANTY:


FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group
613 First Street
La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Manufactured by Flipo Group Limited La Salle, IL
Questions or Comments? Call: (815) 223-9942 • Email: info@flipo.com
MADE IN CHINA

Heli | RC Helicopter with Altitude Hold

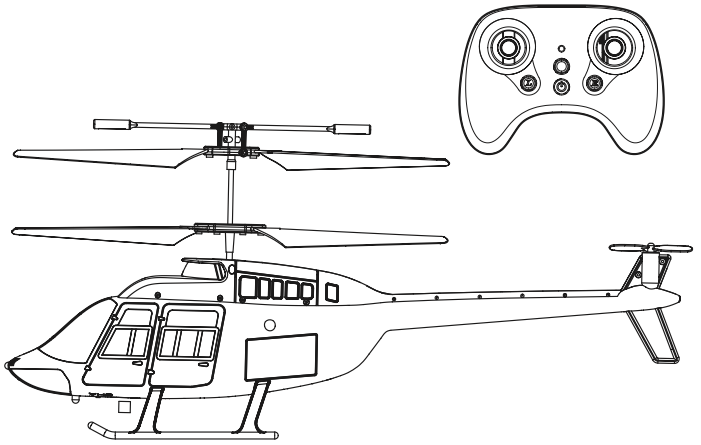

Contents:


1 x Heli RC Helicopter
1 x 2.4GHz Remote Control
1 x USB-A to USB-C Charging Cable

FOR AGES 8+ | Model: TOY-RCHELI

Instruction Manual

Please read this instruction manual carefully before using.

Remote Control Functions

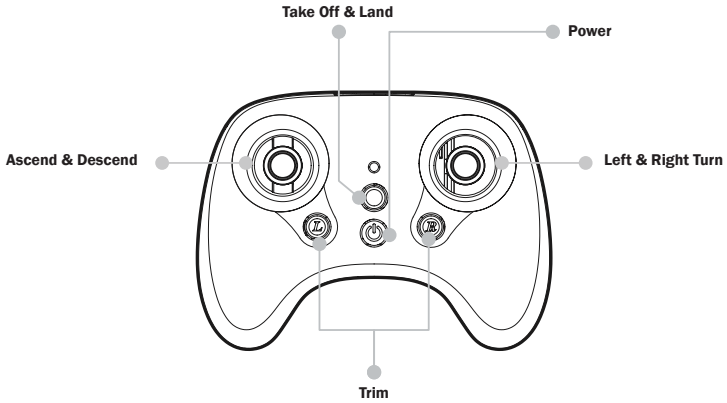

Battery Installation & Charging

Before first use

Charge your helicopter fully using ONLY the included charging cable.

Helicopter

1. To charge, plug the USB-C of the charging cable into the USB-C charging port on the underside nose of the helicopter.
2. Plug the USB-A end of the charging cable into a USB power source or a USB wall adapter connected to an AC outlet.
3. When charging, the white LED charging indicator light adjacent to the USB-C charging port on the helicopter will light. When charging is complete, the light will turn OFF.
4. When the helicopter's battery becomes low, flight performance may decrease. Land the helicopter immediately and recharge before further use.

Remote Control

1. Locate the battery compartment cover on the back of the remote control.
2. Loosen the screw and remove the battery compartment cover.
3. Insert 4 AAA batteries according to the polarity graphic located inside the battery compartment.
4. Replace the battery compartment cover and tighten the screw until snug.

Operation

Pairing The Helicopter & Remote

1. Move the helicopter power switch located on the bottom of the helicopter next to the charging port to the ON position and place the helicopter on a flat surface, in a large open area free from obstructions, with the nose facing away from you.
2. Note: The blue LED indicator light on the underside of the helicopter's nose will now begin flashing to indicate power is ON and ready to pair with the remote control.
3. From approximately three feet behind the helicopter, press and hold the power button on the remote control for approximately 1-2 seconds.
4. The red LED indicator light on the remote control will now begin flashing.
5. Move the left thumb joystick fully down, then fully up, and then fully down again, then release the left thumb joystick back to the center.
6. The blue indicator light on the helicopter will flash briefly, then both the blue indicator light on the helicopter and the red indicator light on the remote control will stay steady ON, indicating the remote control and the helicopter are paired.
7. The helicopter is now ready to takeoff.

Flight & Remote Control Functions

Note: Following a crash or propeller obstruction, the power indicator light may flash, and the remote control may become unresponsive. If this occurs, push the left control stick fully downward to reset the helicopter and resume operation.

Left thumb joystick

Ascend

Push the left thumb joystick up once and then release to start the rotors. Press and hold the left thumb joystick up a second time to increase the speed of the main rotors, and the helicopter will ascend.

Hover

When desired altitude is reached, release the left thumb joystick back to center and the built-in altitude control system will maintain the helicopter at its current altitude.

Descend

Push the left thumb joystick down and the speed of the main rotors is decreased, and the helicopter descends.

Right thumb joystick

Push the right thumb joystick forward to move the helicopter forward.
Push the right thumb joystick backward to move the helicopter backward.
Push the right thumb joystick right to turn right.
Push the right thumb joystick left to turn left.

One-button takeoff/landing button

Locate the one-button takeoff/landing button located in the center of the remote control between the power button and the red indicator light.
When the helicopter is at rest, press and hold the one-button takeoff/landing button for approximately 1-2 seconds and the helicopter takes off slowly and hold at an altitude of approximately three feet (one meter).
Press and hold the one-button take-off/landing button a second time for approximately 1-2 seconds and the helicopter will land.
When using the one-button takeoff and land button, all other joystick controls will work as stated above.

Trim Adjustment

1. The trim buttons are located below the left and right thumb joysticks on the remote control.
2. During flight, if the helicopter keeps spinning clockwise, tap the Left (L) trim button repeatedly until the spinning stops.
3. If the helicopter keeps spinning counterclockwise, tap the Right (R) trim button repeatedly until the spinning stops.