IMPORTANT SAFETY INSTRUCTIONS
READ AND FOLLOW ALL SAFETY INSTRUCTIONS

CAUTION:

- The product and its adapter are intended for INDOOR & OUTDOOR use.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources.
- Do not use product outdoors in case of extreme weather conditions.
- Keep the product well ventilated. Do not cover product with cloth, paper, or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with the outdoor/indoor transformer that is provided.
- Do not leave product unattended when children are present.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Never operate the product if it has a damaged cord or plug. In case the external flexible cable or cord of the adapter is damaged: **DO NOT USE THAT DAMAGED ADAPTOR, DO NOT OPEN TO REWIRE! THROW ADAPTOR AWAY.**
- Use of product in extreme weather conditions if not recommended.
- Do not use this product for any purpose other than its intended use.
- Do not secure wiring of the product with sharp hooks or nails.
- Not intended for permanent installation.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where children can reach it.


CARE AND MAINTENANCE


- Before using or reusing, inspect product carefully. Discard any product that has cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.

ASSEMBLY INSTRUCTIONS

1. **Remove all the parts from carton (as below).**
   - **Blow Mold Figurine**
   - **2PCS Sandbag (sand not included)**
   - **Ground Stake Kit**

2. **Inserting the batteries**
   - **Unscrew the cover for the battery compartment cover and insert 3. AA size batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the battery compartment.**
   - **Screw tight to close the battery compartment cover.**
   - **Move the switch to "ON" position to light the mechanism.**
   - **Move the switch to the "OFF" position to turn off the lights.**

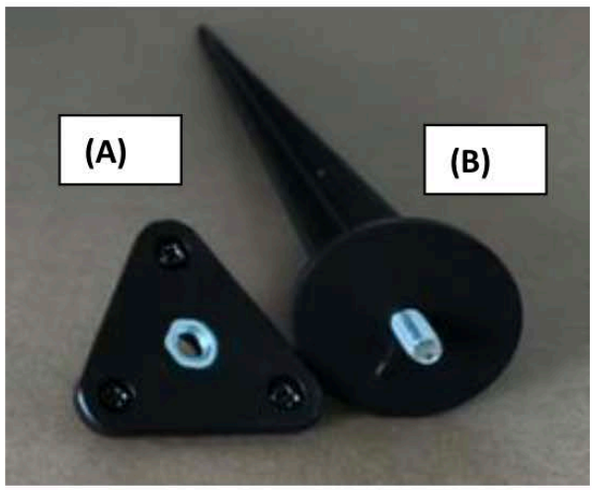

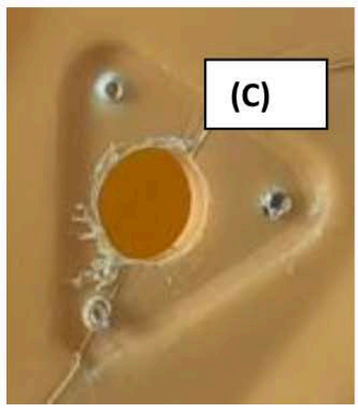

3. **If displaying your blow mold outdoors on a soft surface, use the provided ground stakes to stabilize the figurine**
   - **Align the stake holders with the pre-drilled holes on the blow mold (A & C)**
   - **Secure each stake holder using the included screwdriver and three screws**
   - **Insert the ground stake into the stake holders (B)**
   - **Your blow mold is now ready for display**

4. **If you choose to display your blow mold on hard surfaces, the included sandbags can be filled with sand and placed against the base or lower portion of the figure to provide additional stability and prevent movement.**

DO NOT CONNECT THE POWER SUPPLY TO THE DECOR WHILE IN PACKAGING.

TROUBLESHOOTING

If the product does not light:

1. Make sure batteries are inserted correctly. Make sure to align the "+" and "-" as marked inside the battery compartment.
2. Switch is in "OFF" position. Move the switch to the "ON" position.
3. Batteries are exhausted. Change to new batteries.

BATTERY INSTRUCTIONS

1. Do not dispose of batteries into a fire. Batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. Replace batteries of the same brand.
5. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to lea.
6. Remove fully discharged batteries immediately.
7. Remove all the batteries for storage of the unit to avoid battery leakage.
8. Batteries should be recycled or disposed of as per state and local guidelines.

SAVE THESE INSTRUCTIONS!