
8 Function Warm White LED Pre-Lit Tree

ASSEMBLY:

Note: Before you start to assemble your tree, please choose a location near an electrical wall outlet.

Thank you for purchasing this Instant Connect Tree. Carefully follow the instructions below on how to quickly and easily set up your new tree. Before assembling, choose an appropriate location near a wall outlet.


1. Assemble the tree stand and place on a level surface.

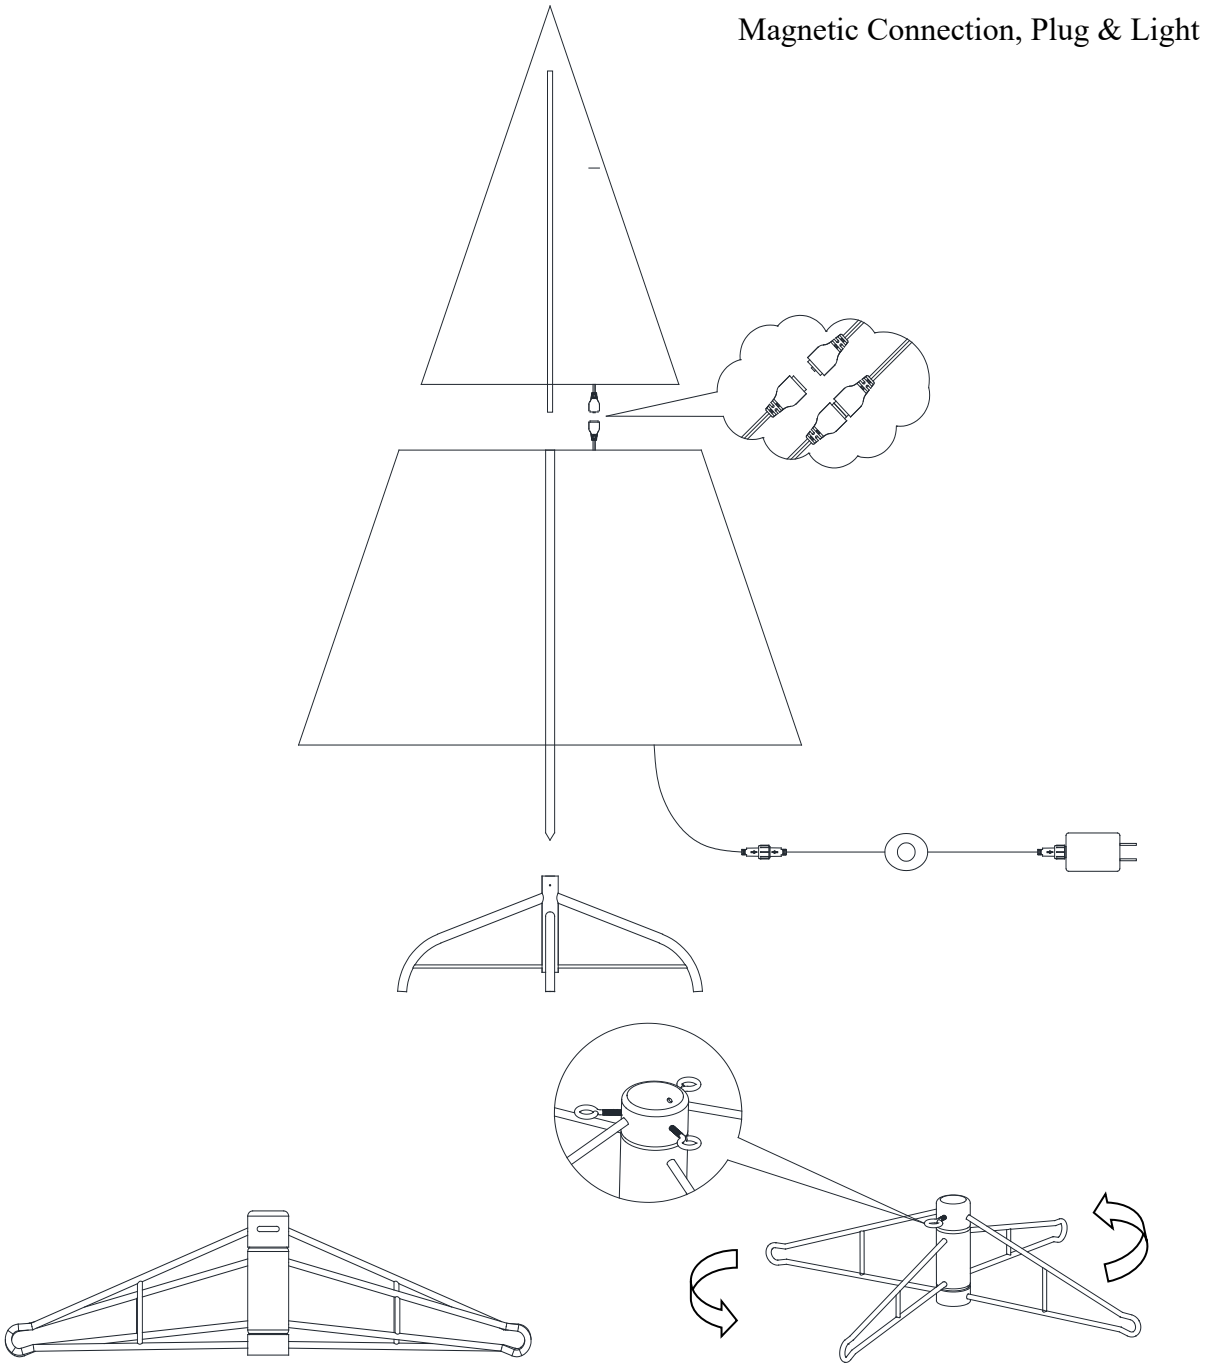

2. Connect the control box outlet with the transformer
3. Each tree section is numbered with a tag (e.g. SECTION A, B,). Please identify all sections before assembling.

4. Insert the bottom section into the assembled stand. Make sure the pole is firmly inserted and secured into the stand.
5. Insert the middle section(s) to the lower section(s) until the top is placed.
6. Allow the branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges as illustrated in Figure a.
7. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem as illustrated in Figure a. Repeat pattern for each branch.

Fig. a

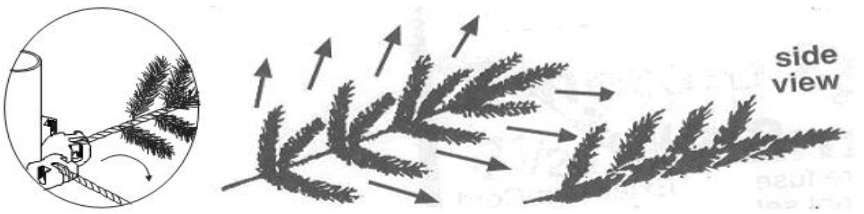


8. Magnetic Connection Instructions

   a. This product is equipped with a magnetic plug design. No precise alignment is required. Simply bring the magnetic connectors of two light strings close to each other, and they will automatically attract and lock together, powering on the lights simultaneously.

   b. To ensure stable electrical connection, please keep the connector surfaces clean and free of foreign objects. To disconnect, gently pull the connectors apart. Easy to operate and safe to use.

.★ MODE – 8 Functions

- ✧ Combination
- ✧ In Wave
- ✧ Sequential
- ✧ Slow Glow
- ✧ Chasing/Flash
- ✧ Slow Fade
- ✧ Twinkle/Flash
- ✧ Steady On

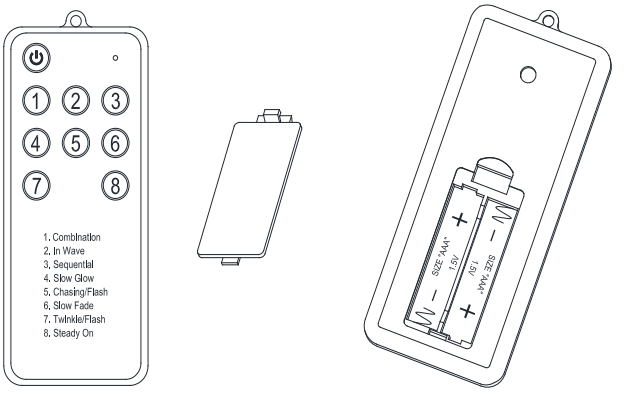

REMOTE CONTROL USE AND BATTERY INFORMATION

You may also change the lighting functions using the included remote control and two AAA battery. Begin by placing the included battery in the remote control. Remove cover of the battery compartment and insert the battery according to the +/- directions. After ensuring the tree is plugged in and turned on using the foot pedal switch, press the button on the remote to cycle through the 8 lighting functions, listed on the next page.

NOTE:

1. The controller has memory function when switching off the power. It would be the same mode as last time when you switch on again.
2. The controller is integrated in the foot switch and can be switched by pressing the foot switch.

CAUTION! – This situation is unlikely to happen, but if any broken or burned bulb is found. Please DO NOT change or replace the bulb. This light bulb is irreplaceable.

BASIC PRECAUTIONS SHOULD BE FOLLOWED WHEN USING THIS PRODUCT:
(Inspect product carefully before using or re-using):

1. This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electrical shock it should not be played with.
2. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
3. Do not cover product with clothes, paper or any material when product is being used.
4. Do not hang ornaments or other objects from cord, wire, or light string. Hang ornaments only on the tree itself.
5. For your safety, unplug the product when leaving the house, retiring for the night, or left it unattended.

STORAGE: Disassembled tree can be stored in its original box. Store tree in a cool dry place where the temperature does not exceed 100 degrees Fahrenheit.

★.TROUBLE SHOOTING:

If any lights stop working on your pre-lit tree, please check whether all plugs are properly connected and power cord is plugged into wall outlet.

a. Check all plugs are properly connected and power cord is plugged into wall outlet.

This product is for indoor use only.