
DAPPER

User Manual

Commercial Box & Wand Carpet Extractor

Model No:- DP-CCE1208

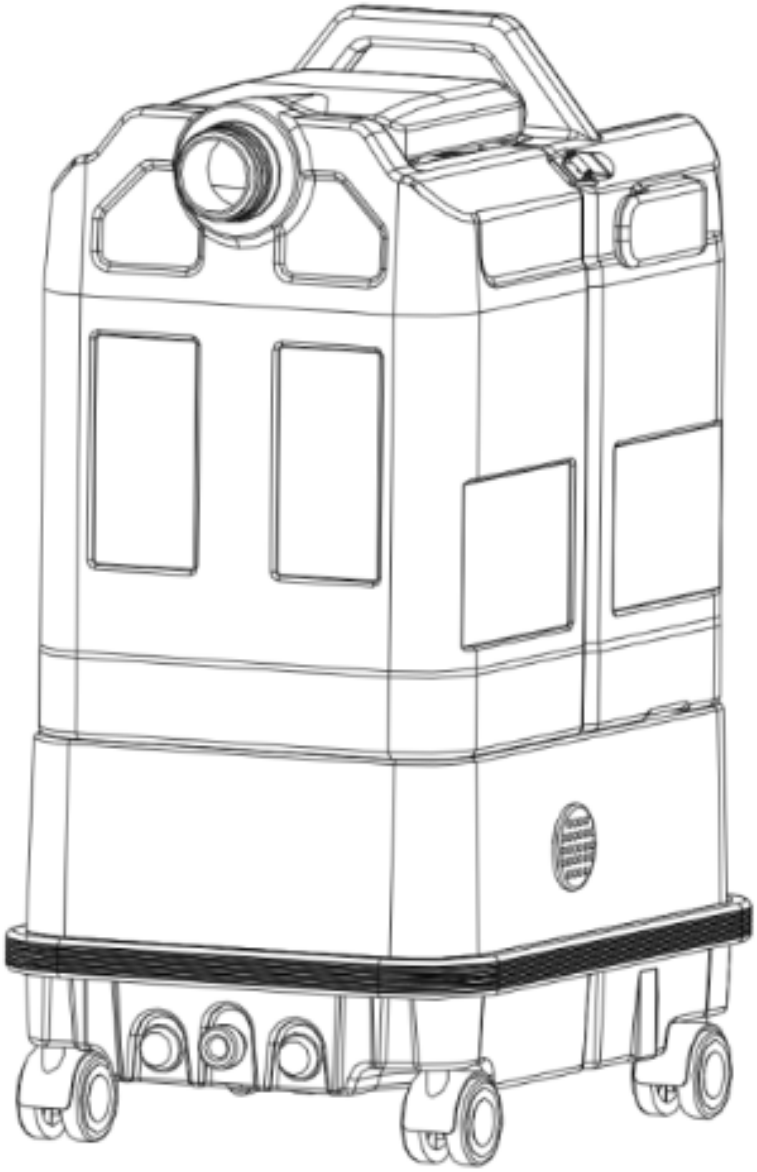

For any service-related issues, please contact us:
Phone Number: 718-301-8243
Email address: support@dapper-supply.com

CONTENTS

Safety 4

Assembly 5

Technical Data 6

Operation 7

Maintanence 9

Warranty 11

SAFETY

PRODUCT OVERVIEW

These are compact, lightweight carpet cleaning machines designed to meet professional standards.

KEY ADVANTAGES

- Easy Handling: Equipped with 4 swivel wheels for effortless movement.
- User-Friendly: Simple and quick operation.
- Recovery Tank: Designed for easy drainage.
- Maintenance: Components are easy to access and service.
- Dirty Water Detection: Includes an electronic probe for accurate monitoring.
- Metal Filter: Stainless steel filters provide water and vacuum motor protection.
- Durable Casing: Built with high-density polyethylene for extra strength.
- Powerful: Features dual vacuum motors for enhanced performance.
- Extended Autonomy: Holds up to 24 liters of solution for longer usage.

IMPORTANT SAFETY INSTRUCTIONS

Before using the cleaner, ensure you have read and understood all instructions provided.

Only trained individuals should operate this equipment after thoroughly reviewing the safety guidelines in this manual.

PRODUCT IMPROVEMENTS

The manufacturer reserves the right to make design changes to enhance product quality and performance. Some minor modifications may not be reflected in this documentation.

SERVICING


For repair or warranty inquiries, please contact your local service center.

ASSEMBLY

SETUP FOR USE



Step 1:
Connect the vacuum hose and the spray hose to the appropriate accessories

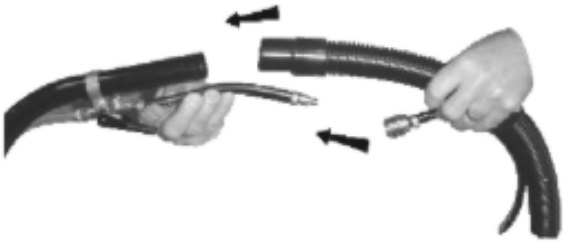

Step 2:
Ensure both tanks are clean before use.



Step 3:
Fill the solution tank with the correct amount of detergent and water. Do not overfill. Using warm water is recommended for better cleaning results.

IMPORTANT:
Only use the detergent recommended for this machine. Do not use regular shampoo, washing powder, or any unsuitable cleaning products.

Step 4 – Rinsing After Use:
After every use, rinse the tanks by filling the solution tank with clean water and using the spray accessory to flush the system. This helps remove any leftover detergent from the internal water circuit.

Before draining (via the bleed screw located underneath the machine), make sure to:
Turn off the suction, spraying, and heating functions
Unplug the machine from the power outlet

Technical Data

Specification	Value
Length	20.87 inches
Width	14.76 inches
Height	30.31 inches
Weight	42.33 pounds
Solution Tank Capacity	5.94 gallons (US)
Recovery Tank Capacity	6.60 gallons (US)
Hose Length	16.4 feet
Power Cord Length	32.8 feet
Pump Power	40 watts
Spray Pressure	0–66.7 psi
Flow Rate	0.26–0.53 gallons/minute
Voltage	120 VAC
Frequency	60 Hz
Vacuum Motor Power	1700 watts
Vacuum Suction	3.84 psi
Current Draw	16 amps
Noise Level	75 dB(A)

OPERATION



Step 1: Powering the Machine

Once the machine is properly set up (as described in the previous sections), use the switch with 2 settings to choose the desired operation mode

Spray Mode: Activates cold water spray

Vacuum Mode: Activates the vacuum motor and starts wastewater suction

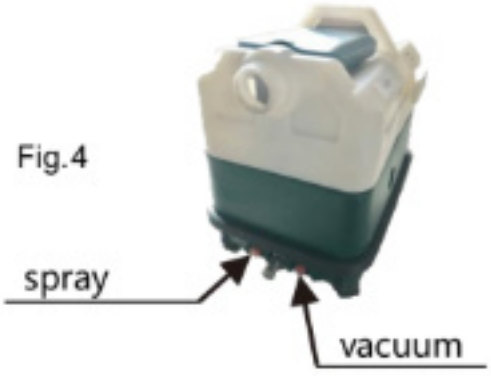


Fig.4



Fig.5

Step 2: Connecting and Starting the Unit

1. Plug the power cord into a main power outlet
2. Turn on the unit by selecting either Spray and/or Vacuum mode
3. Spray is activated when you press the handle trigger on the cleaning accessory
4. Maintain steady pressure while cleaning for best results



Note: Depending on the accessory used (especially low-flow ones), adjust the pump flow using the water flow control valve. When the valve is fully open, the pump runs continuously.

Step 3: Priming the Spray System
To prepare the spray system for use:

- Fill the solution tank with water and detergent
- Attach the spray accessory
- Turn on the unit and select the Spray function
- Press the accessory handle switch to activate spraying
- A continuous water jet will confirm the system is primed properly

Important: The pump should automatically start when you press the spray switch on the accessory handle.

MAINTENANCE

Care & Maintanence

- For a drier surface, perform an additional round of vacuuming after the initial cleaning.
- For tough stains, apply a stain remover before using the machine.
- On heavily soiled areas, spray detergent solution and allow it to sit for a few minutes before starting the cleaning process.
- Avoid over-saturating fabrics during spraying to prevent soaking and potential damage.

IMPORTANT SAFETY & OPERATION TIPS

Do not operate the machine if the clean water tank is empty.
Always prime the spray system before activating the heating function.

DRAINING & CLEANING PROCEDURE (After Each Use)

- Vacuum out any remaining solution using the flexible hose.
- Empty the recovery tank by removing the top cover and disconnecting the vacuum hose. Lift the tank out carefully.
- Fill the solution tank with clean water and spray using the accessory to rinse the internal spray system.
- Rinse the solution tank with clean water and vacuum out the rinse water.
- To release residual spray pressure:
  -Turn off the pump.
  -Hold the spray tool over the dirty water tank.
  -Press the handle until all remaining liquid has been released.
- Rinse the recovery tank thoroughly with clean water before storing.

Main Troubles & How to Solve Them:

Problem	Solution
Spraying pump and vacuum are not working or turn off suddenly	▪ Check the main fuse, power cable, and plug connection. ▪ Turn off the machine and empty the recovery tank.
No spray or uneven spray	▪ Inspect the spray pipe and nozzle for clogs. ▪ Ensure there is enough water in the clean water tank. ▪ If the tank has water, allow a few seconds for the pump to build pressure. ▪ If the tank is empty, refill it as per instructions. ▪ If the spray system is still not functioning, the pipe, nozzle, or water filter might be blocked—switch off the machine and clean all relevant parts.
Reduced vacuum power	▪ The dirty water tank may be full and needs to be emptied. ▪ The hose or attached accessories could be clogged—detach and check for blockages. ▪ Ensure the machine is connected to a power source that meets the specifications on the manufacturer's identification plate.

Important Safety Instructions

- Always switch off and unplug the machine before performing any maintenance or service.
- Inspect the power cable for any damage before plugging in the machine.
- Never operate the unit if the top cover filter is missing or removed.
- Do not vacuum:
  -Solvents
  -Acids
  -Explosive liquids
  -Hot ashes or debris
- This machine is not suitable for vacuuming hazardous dust.
- Do not use outdoors while raining.
- Never store the machine in damp environments or outdoors.
- If foam or liquid leaks from the machine, immediately switch off and unplug the power cord.

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period.

This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

1. Product failure due to power outages, interruptions, or inadequate electrical service.
2. Damage incurred during transportation or handling.
3. Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
4. Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
5. Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
6. Cleaning and maintenance not performed according to the user manual.
7. Use of incompatible accessories or components.
8. Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER