
DAPPER

User Manual

Commercial Cool Water Pressure Washer 4350 Psi

Model: DP-CPW1138

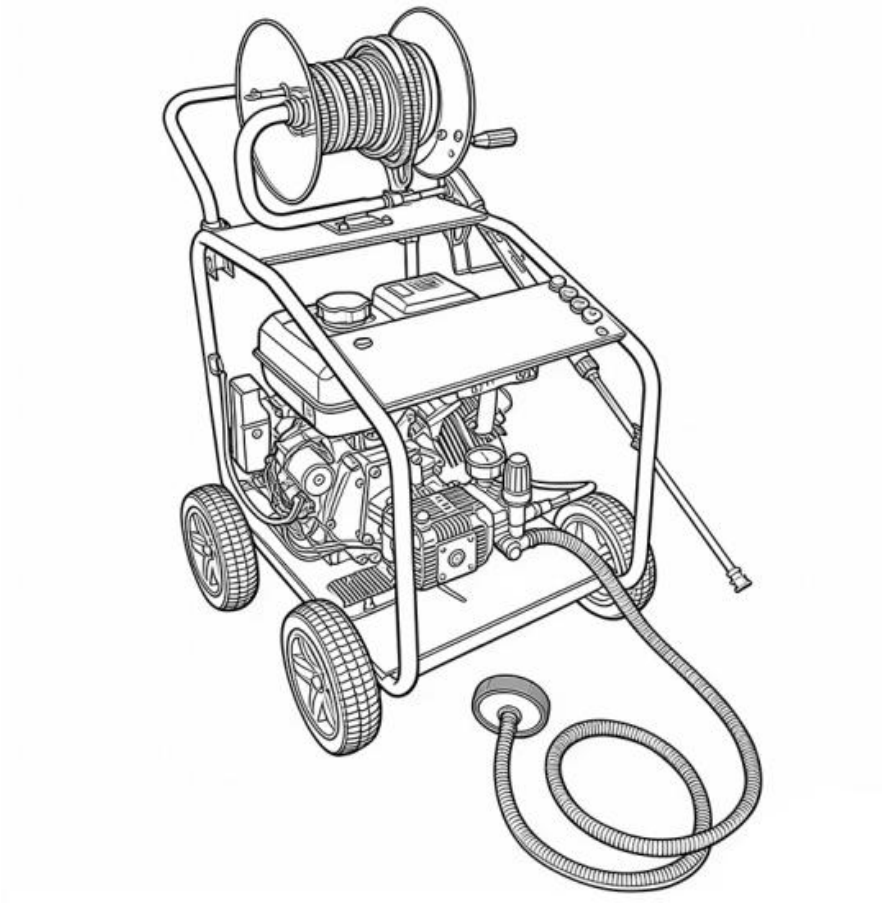


For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

Contents


PARTS LIST 4
ASSEMBLY 5
SPECIFICATIONS 5
OPERATION 6
WARRANTY 8

PARTS LIST

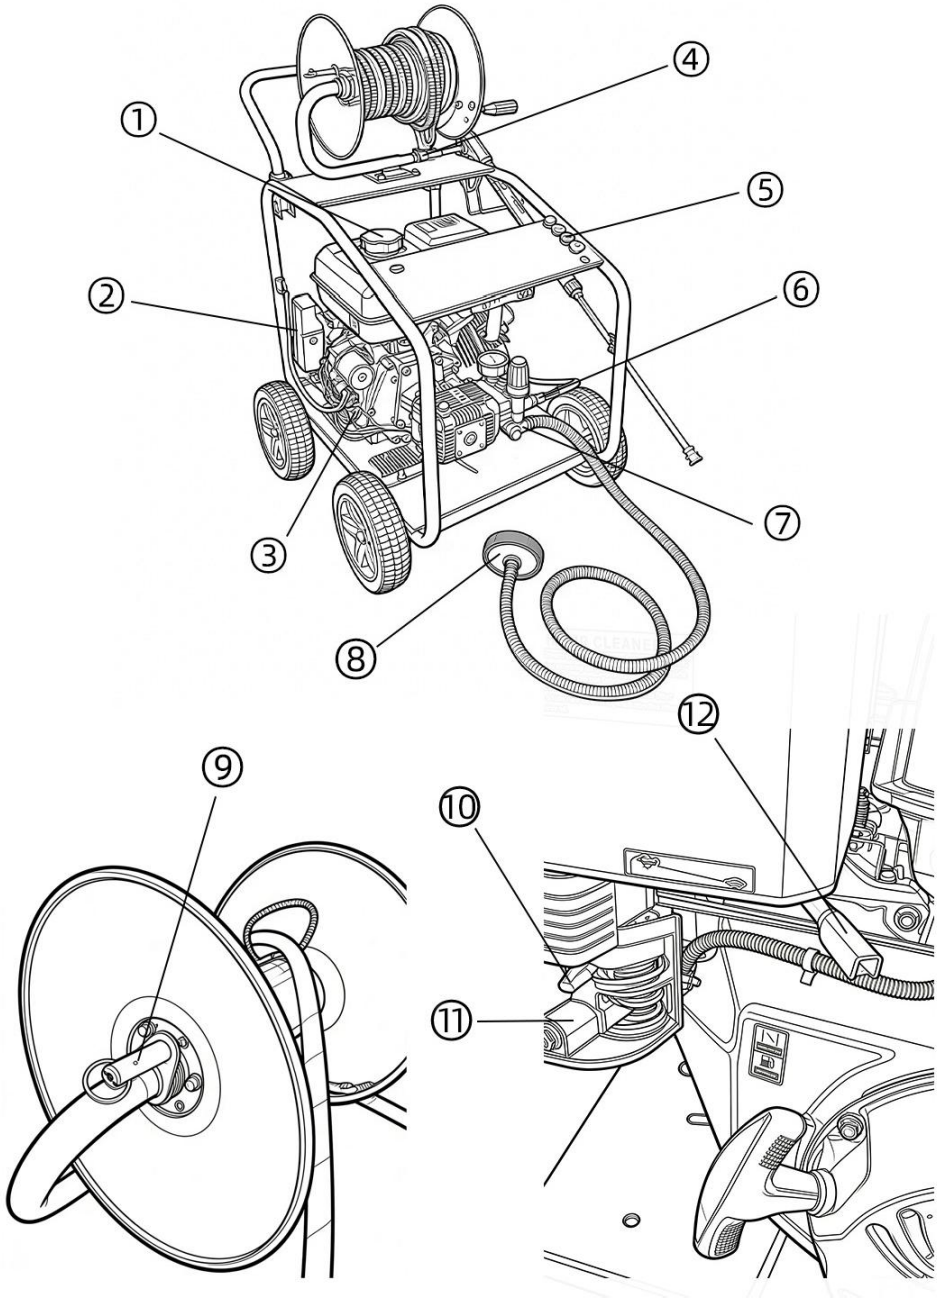

- Gasoline Tank
- Engine Start Button
- Oil Filler Cap
- Hose Reel Water Inlet
- High-Pressure Nozzle
- High-Pressure Outlet
- Water Inlet
- Inlet Filter
- Hose Reel Lock
- Choke Lever
- Gasoline On-Off Valve
- Throttle Lever

ASSEMBLY

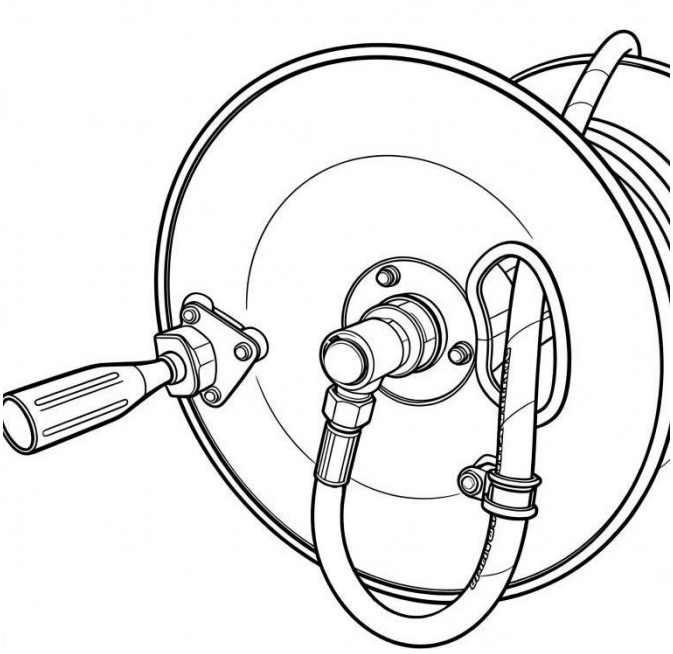

Dear User, before using the machine, please refer to the pictures above and assemble the unit accordingly.
After receiving the machine, please install the discharge hose onto the hose reel according to thei nstructions in the picture above before first use.

Pullout the hose reellock.

Then, rotate the reel clockwise to wind the outlet hose onto it.

SPECIFICATIONS

Commercial Cool Water Pressure Washer 4350 psi	
Model number:DP-CPW1138	Stress:4350psi
Flowrate:5gallons/min	Fuel:gasoline
Power:8kw	Rotational speed:3600min

OPERATION

1. Install the Hose Reel

Mount the hose reel onto the machine. Connect one end of the outlet hose to the water gun, and the other end to the hose reel.

2. Connect the High-Pressure Lines

Take the 1-meter high-pressure hose (included) and connect one end to the pump's high-pressure outlet. Connect the other end to the hose reel's water inlet.

3. Add Engine Oil & Fuel

Open the engine oil filler cap and add standard gasoline engine oil to the specified level.
Add gasoline to the gasoline tank.

4. Prime the Water System

Attach the inlet hose (with its filter installed) to a water tank. Turn on the water supply and let it flow through the system to prime the pump and expel air from the inlet hose. This ensures quicker water output from the pump head.

Important: Ensure the filter is fully submerged and not floating on the water surface.

5. Start the Engine

1. Ensure the water gun trigger is in the OFF (closed) position.
2. Start the gasoline engine using the ignition key.
3. Let the engine run, allowing any remaining air to purge from the system
4. through the water gun (you may briefly open the trigger if necessary, pointing it in a safe direction).

6. Final Setup

Once water flows steadily without air bubbles, release the water gun trigger to stop the flow. Finally, install the desired nozzle onto the water gun.You are now ready to begin washing.

7. Gasoline Engine Starting Procedure

Preparation:

1. Move the Throttle Lever to the mid-position.
2. Turn the Fuel Valve to the ON position.
3. Cold Engine Start (if needed):
4. If the engine is cold, engage the Choke.

Important: Once the engine starts, immediately disengage the choke to prevent

engine damage.

Starting & Operation:

1. Start the engine (via key or pull-start).
2. After a stable idle is achieved, adjust the Throttle Lever to a medium-high position for normal operation.

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

1.Product failure due to power outages, interruptions, or inadequate electrical service.

2.Damage incurred during transportation or handling.

3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.

4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.

5.Unauthorized product modifications, repairs performed by unauthorized providers, or useof non-approved replacement parts.

6.Cleaning and maintenance not performed according to the user manual.

7.Use of incompatible accessories or components.

8.Any costs associated with repairs or replacements under these excluded circumstanceswill be the responsibility of the consumer.

DAPPER