
DAPPER

User Manual

Commercial Hot Water Pressure Washer 4350 Psi

Model: DP-CPW1140

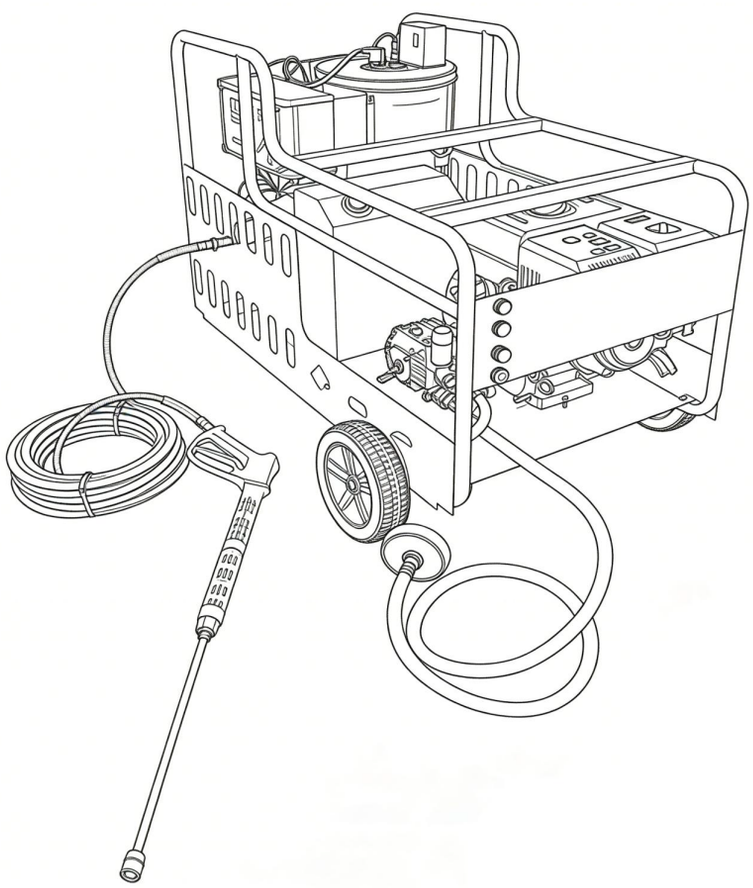

For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

Contents

Parts List **5**


Assembly **6**

Specifications **6**

Operation **7**

Warranty **8**


Parts List

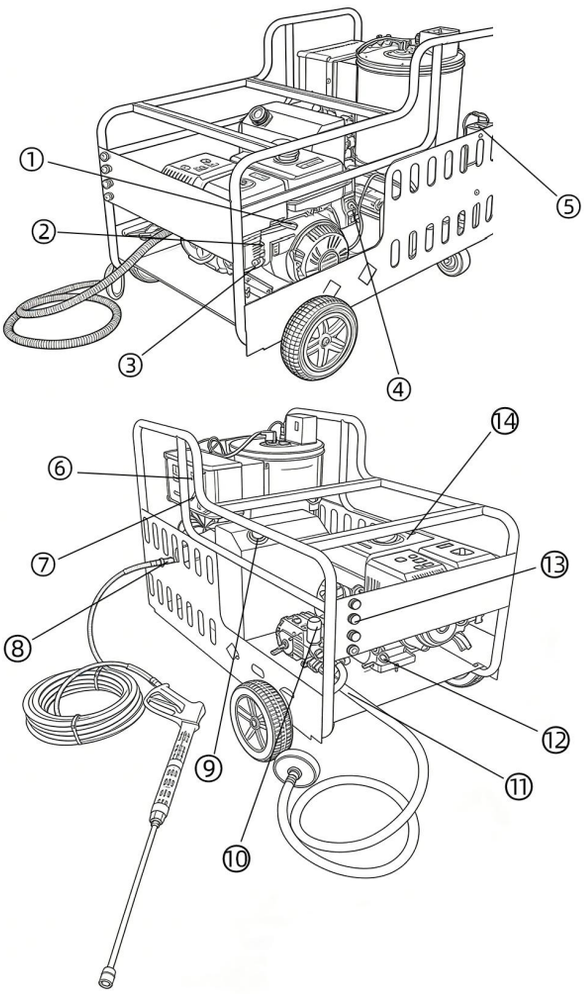

1. Accelerator
2. Damper
3. Oil Switch
4. Start Switch
5. Boiler Control Power Switch
6. Temperature Control Switch
7. Boiler Control Switch
8. Water Outlet
9. Boiler Diesel Fuel Tank
10. Pressure Regulating Valve
11. Water Inlet
12. Engine Oil Inlet
13. High-Pressure Nozzle
14. Gasoline Tank

Assembly

Dear User, before using the machine, please refer to the pictures above and assemble the unit accordingly.

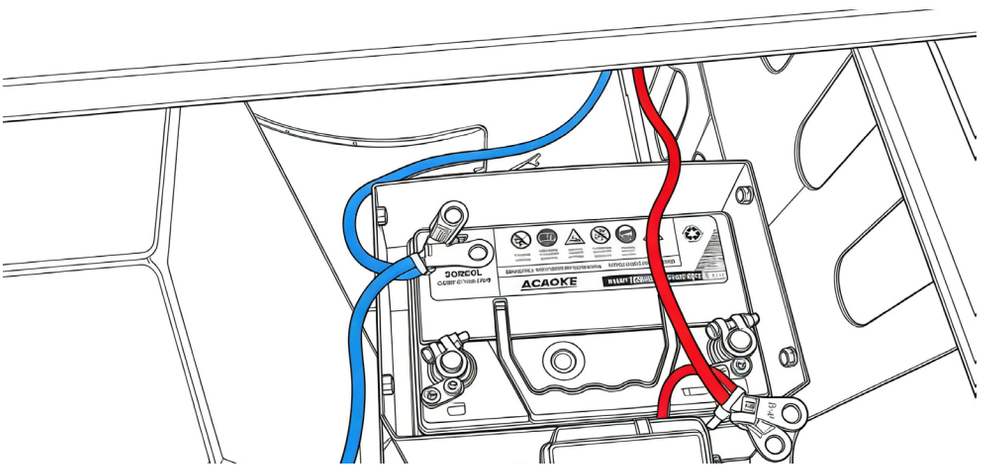

Connect the inlet and outlet hoses as shown in the diagram.

Connect the battery power cables to the correct terminals.

Specifications

Commercial Hot Water Pressure Washer4350Psi	
Model number: DP-CPW1140	Stress:4350psi
Flowrate:5 gallons/min	Fuel: gasoline
Power:8.8kw	Rotational speed:3600min

Operation

1. Water Intake Preparation

Place the end of the water inlet hose with the filter into the water tank.
Important: Ensure the filter is fully submerged and not floating on the water surface.

2. Add Engine Oil & Fuel

Open the engine oil filler cap and add standard gasoline engine oil to the specified level.
Add gasoline to the gasoline tank.
Add diesel to the boiler fuel tank.

3. Startup & Operation Sequence

Turn on the boiler's power switch.
Start the gasoline engine.
Once the gasoline engine runs smoothly:

Open the water gun trigger to purge air from the system, then install the desired nozzle.
Adjust the unloader valve to set the desired operating pressure.
Turn on the boiler switch and set the temperature.

4. Automatic Operation Mode:

Once switched on and set, the boiler enters automatic mode.
It will ignite automatically when water is flowing and the temperature is below the set point.
It will shut off automatically when the gun is closed or the set temperature is reached.
It will re-ignite automatically if the temperature drops approximately 10°C
below the set point.

5. High-Temperature Operation Safety Warning

When performing high-temperature tasks, you MUST wear heat-resistant clothing and a heat-resistant face shield.

6. Gasoline Engine Starting Procedure

Preparation:
1. Move the Throttle Lever to the mid-position.
2. Turn the Fuel Valve to the ON position.
3. Cold Engine Start (if needed):
4. If the engine is cold, engage the Choke.

Important: Once the engine starts, immediately disengage the choke to prevent engine damage.

Starting & Operation:

- Start the engine (via key or pull-start).
- After a stable idle is achieved, adjust the Throttle Lever to a medium-high position for normal operation.

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

1.Product failure due to power outages, interruptions, or inadequate electrical service.

2.Damage incurred during transportation or handling.

3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.

4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.

5.Unauthorized product modifications, repairs performed by unauthorized providers, or useof non-approved replacement parts.

6.Cleaning and maintenance not performed according to the user manual.

7.Use of incompatible accessories or components.

8.Any costs associated with repairs or replacements under these excluded circumstanceswill be the responsibility of the consumer.


DAPPER