
DAPPER

User Manual

Commercial Hot Water Pressure Washer 2610Psi

Model: DP-CPW1139

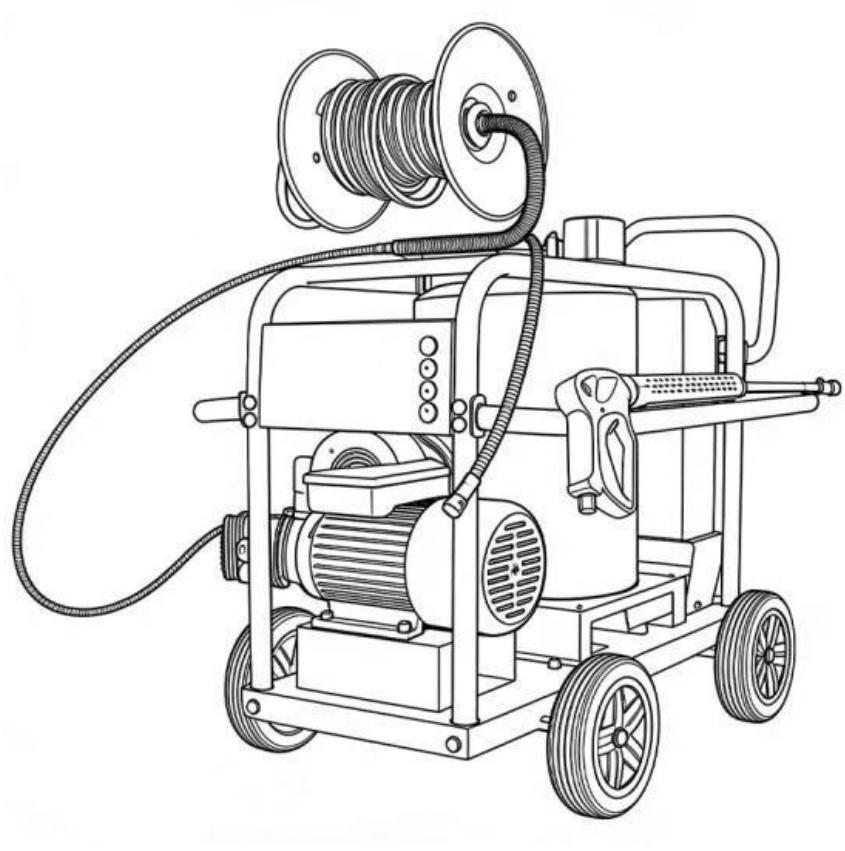


For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

Contents


PARTS LIST 4
ASSEMBLY 5
SPECIFICATIONS 5
OPERATION 6
WARRANTY 7

PARTS LIST

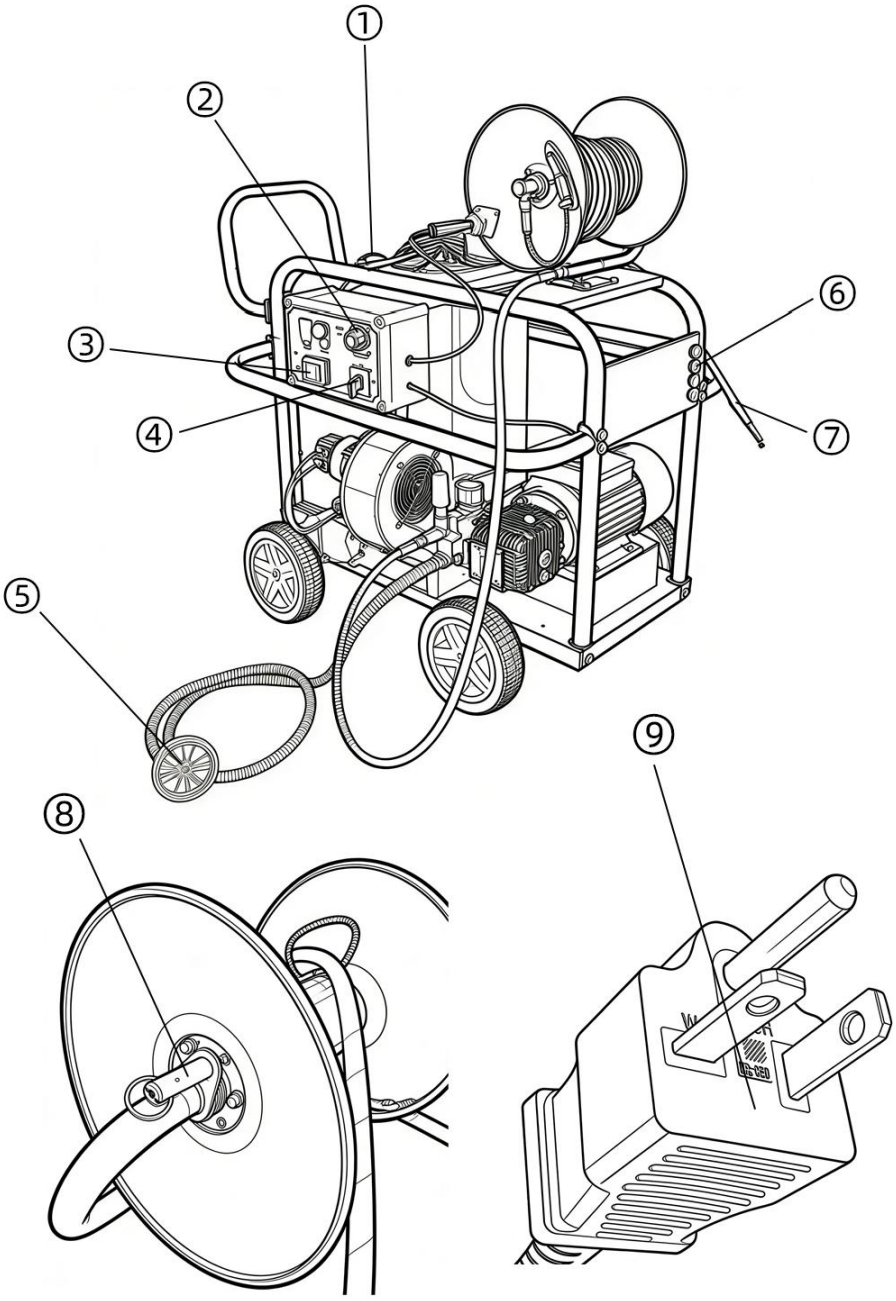

1. Burner Diesel Tank
2. temperature control
3. Pump ON/OFF Switch
4. Burner ON/OFF Switch
5. Inlet Water Filter
6. High-Pressure Nozzle
7. High-Pressure Hose
8. Hose Reel Lock
9. Power Plug

ASSEMBLY

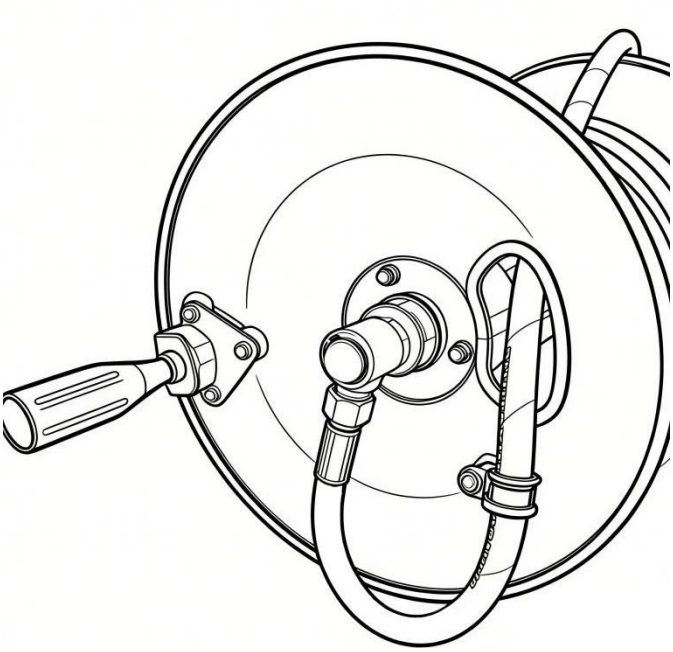

Dear User, before using the machine, please refer to the pictures above and assemble the unit accordingly.

1. After receiving the machine, please install the discharge hose onto the hose reel according to the instructions in the picture above before first use.
2. Pull out the hose reel lock.
3. Then, rotate the reel clockwise to wind the outlet hose onto it.

SPECIFICATIONS

Commercial Hot Water Pressure Washer 2610Psi	
Model number:DP-CPW1139	Stress:2610psi
Flow rate: 4 gallons/min	Voltage:120V-60HzSingle-phase
Power:2.2 kw	Rotational speed:1450min

OPERATION

1. Power Supply & Initial Setup

- The machine operates on a 20A, 120V, 60Hz power supply.
- Connect the high-pressure hose from the hose reel to the high-pressure gun.
- For hot water operation: Fill the boiler's diesel tank with diesel fuel.

2. Water Intake Preparation

- Place the end of the water inlet hose with the filter into the water tank.
- Important: Ensure the filter is fully submerged and not floating on the water
- surface.

3. Startup & Priming Sequence

- Press the green button on the water pump switch.
- Open the spray gun trigger.
- Observe the inlet hose. Once all air is purged from the hose, release the gun trigger.
- Remove the high-pressure nozzle from the machine panel and install it onto the spray gun.
- You are now ready to begin washing.

4. Hot Water Boiler Operation (Optional)

The boiler features a dual-control system.
To use hot water:

- Turn on the boiler switch.
- Set the desired temperature on the controller.

Automatic Operation Mode:
Once switched on and set, the boiler enters automatic mode.
It will ignite automatically when water is flowing and the temperature is below the set point.
It will shut off automatically when the gun is closed or the set temperature is reached.
It will re-ignite automatically if the temperature drops approximately 10°C below the set point.

5. High-Temperature Operation Safety Warning

When performing high-temperature tasks, you MUST wear heat-resistant clothing and a heat-resistant face shield.

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

1.Product failure due to power outages, interruptions, or inadequate electrical service.

2.Damage incurred during transportation or handling.

3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.

4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.

5.Unauthorized product modifications, repairs performed by unauthorized providers, or useof non-approved replacement parts.

6.Cleaning and maintenance not performed according to the user manual.

7.Use of incompatible accessories or components.

8.Any costs associated with repairs or replacements under these excluded circumstanceswill be the responsibility of the consumer.

DAPPER