VEVOR

Upgrade · The Home Creator Way

Floor Support Jacks

MODEL: 204A-0040-00-00/ 204A-0045-00-00/ 204A-0045-01-00/ 204A-0080-00-00/ 204A-0080-01-00/ 204A-0050-00-00/ 204A-0080-02-00/ 204A-0110-00-00

VEVOR Support Center

1	204A-0040-00-00		**2**	204A-0045-00-00	
3	204A-0045-01-00		**4**	204A-0080-00-00	
5	204A-0080-01-00		**6**	204A-0050-00-00	
7	204A-0080-02-00		**8**	204A-0110-00-00	

MODEL: 204A-0040-00-00/ 204A-0045-00-00/ 204A-0045-01-00/ 204A-0080-00-00/ 204A-0080-01-00/ 204A-0050-00-00/ 204A-0080-02-00/ 204A-0110-00-00

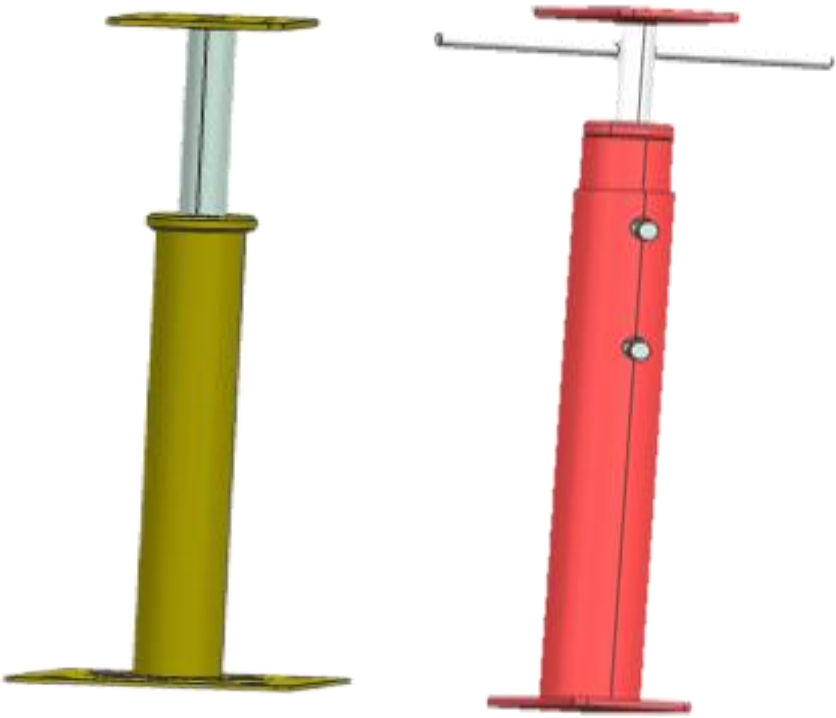


Photo for reference

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTION AND PRECAUTIONS

⚠WARNING:

1. It is strictly prohibited to place support rods on uneven, sloping roads and platforms;

2. Use according to the calibrated load capacity, and overloading is strictly prohibited;

3. Strictly observe the placement during use and pay attention to personal safety.

4. When using a jack, it is important to choose a suitable jack model to ensure its load-bearing capacity and height requirements.

5. Warning-To reduce the risk of injury, user must read instructions manual carefully.
6. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children shall not play with the appliance.
9. This product shall not be used by children. Keep the product and its cord out of reach of children.
10. This product is intended to be used in household and similar applications such as: Support the bottom of heavy furniture & appliances, house basements, garden terraces, etc.
11. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
12. Please use the product according to the intended use, warn of potential injury from misuse.

Instructions for use:

Model: 204A-0040-00-00

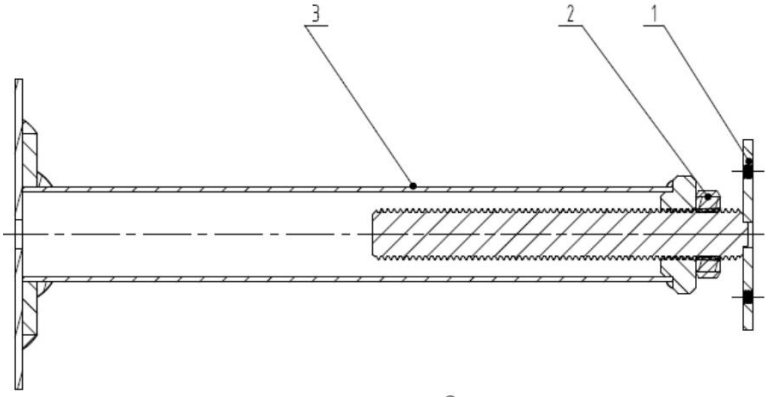


Photo for reference

Item list:

1. Height adjusting assembly; 2. Hexagonal nut; 3. Support seat

Use step

1. Place the support rod vertically on a flat surface (it is strictly prohibited to place it on inclined or uneven road surfaces);

2. Rotate component “1”(Height adjusting assembly) to the desired height, then clockwise lock hexagonal nut onto the plane of support seat 3;

Model: 204A-0080-00-00/ 204A-0080-01-00/ 204A-0080-02-00

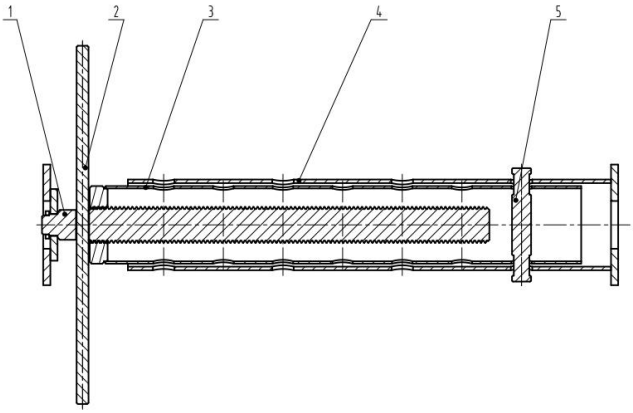


Photo for reference

Item list:

1. Height adjusting assembly; 2.Handle rocker; 3. Inner cylinder support group 4.Support seat 5. Safety pin

Use step

1. Place the support rod vertically on a flat surface (it is strictly prohibited to place it on inclined or uneven road surfaces);
2. Insert component “1”(Inner cylinder support group) into component “4” (Support seat), adjust the required height, and then insert Safety pin 5 to fix it. Use Handle Rocker to screw out Height adjusting assembly 1 clockwise to the desired position.

⚠WARNING:

Make sure to insert all the safety pins!

Model: 204A-0045-00-00/ 204A-0045-01-00/ 204A-0110-00-00

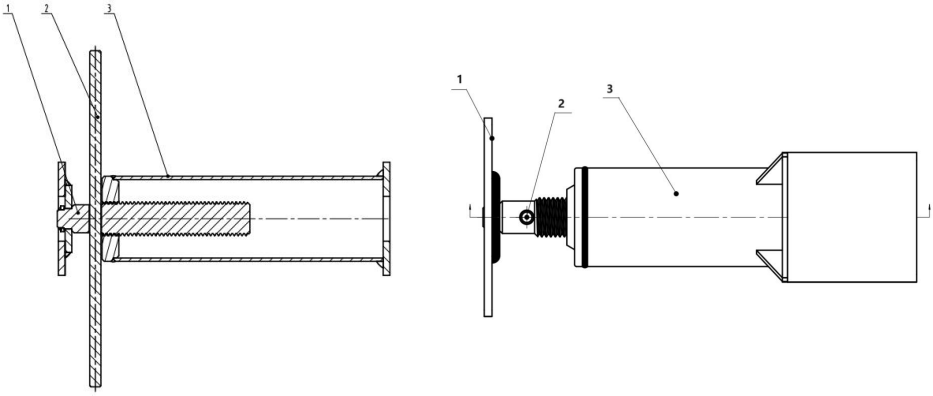


Photo for reference

Item list:


1. Height adjusting assembly; 2.Handle rocker; 3. Support seat

Use step

1. Place the support rod vertically on a flat surface (it is strictly prohibited to place it on inclined or uneven road surfaces);

2. Use component “2” (Handle rocker) to adjust component “1” (Height adjustment). Tighten component “3” (Support seat) to prevent it from shaking. After adjusting and rotating the assembly to the desired height.

Model: 204A-0050-00-00

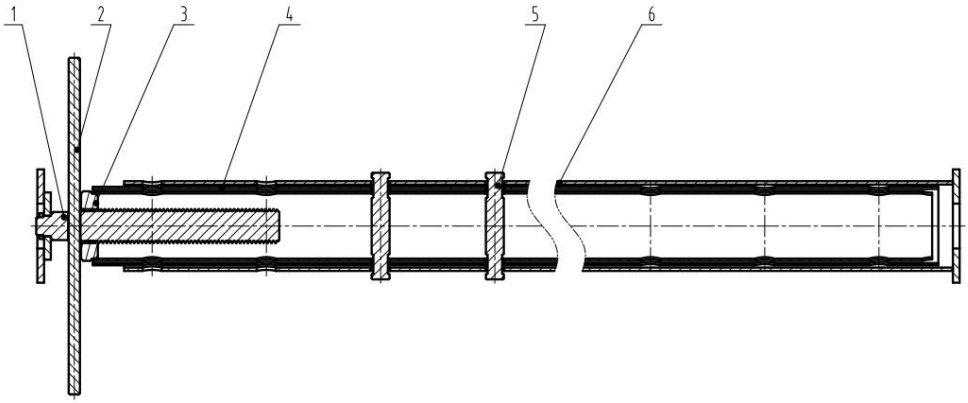

Item list: 1. Height adjusting assembly 2. Handle rocker
3.Inner cylinder support group 4. Outer cylinder support seat
5. Safety pin 6. Support seat

Use step

1. Place the support rod vertically on a flat surface (it is strictly prohibited to place it on inclined or uneven road surfaces);
2. Insert component “4” (Outer cyclone support seat) into component “6” (Support seat), adjust the required height, and then insert component “5” (Safety pin) to fix it. Insert component “3” (Inner cyclone support group) into component “4” (Outer cyclone support seat), adjust the required height, and insert component “5” (Safety pin) to fix it. Use component “2” (Handle Rocker) to screw out component “1” (Height adjusting assembly) clockwise to the desired position.

⚠WARNING:

Make sure to insert all the safety pins!



MODEL LIST

SN	Model	Adjustable size	Max loading	Outer pipe diameter / dimension
1	204A-0040-00-00	12~16inches / 0.3~0.4m	2500lbs	1.6inch / 4cm
2	204A-0045-00-00	12~16inches / 0.3~0.4m	9700lbs	2.8inch / 70mm
3	204A-0045-01-00	12~16inches / 0.3~0.4m	9700lbs	2.8inch / 70mm
4	204A-0080-00-00	19~36inch / 0.48~0.91m	18000lbs	2.8inch / 70mm
5	204A-0080-01-00	53~93inch / 1.35~2.36m	18000lbs	2.8inch / 70mm
6	204A-0050-00-00	54~150inch / 1.37~3.81m	11200lbs	3.15inch/80mm
7	204A-0080-02-00	56~100inch / 1.42~2.54m	18000lbs	2.8inch / 70mm
8	204A-0110-00-00	13.2~18.7inch / 0.34~0.47m	24700lbs	102x102mm

Maintenance and upkeep

1. After use, careful inspection should be carried out to check for any damage to the components and test the performance of the jack. If any abnormalities are found, timely repair should be carried out.

2. Wipe the surface of the jack clean to prevent debris from corroding the surface of the components and affecting normal use. If there are rust spots, rust removal should be carried out to avoid damage to the jack.

3. Apply lubricating grease and rust-proof grease to the jack and store it in a dry and ventilated place.



