
OUTDOOR WOOD PELLET PATIO HEATER with Glass Tube

ITEM: CSL600
SKU: 88600

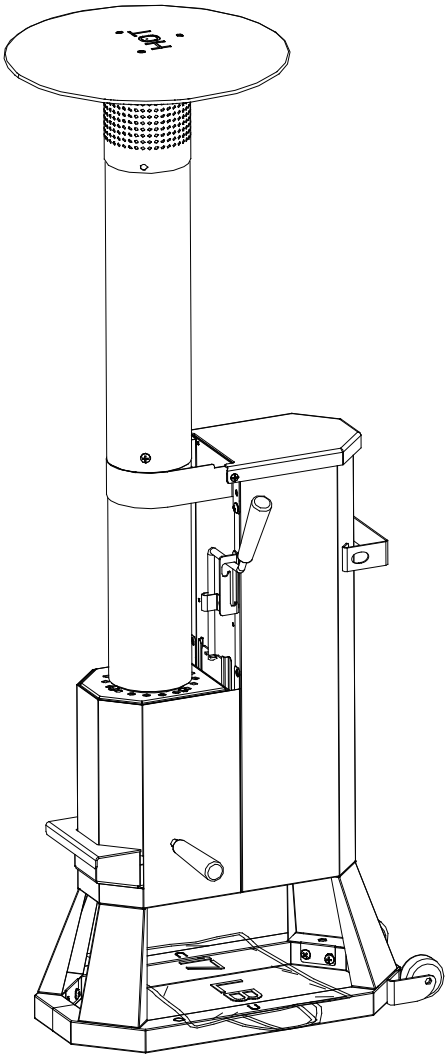

⚠ WARNING

⚠ FOR OUTDOOR USE ONLY

⚠ PLEASE READ THIS ENTIRE MANUAL BEFORE INSTALLATION AND USE OF THIS PELLET FUEL BURNING APPLIANCE.
FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN PROPERTY DAMAGE, BODILY INJURY OR EVEN DEATH.
CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTION REQUIREMENTS IN YOUR AREA.

CALIFORNIA PROPOSITION 65 WARNING

This product can expose you to chemicals, including carbon monoxide, which are known to the State of California to cause birth defects or other reproductive harm.

For more information go to www.P65warnings.ca.gov

Customer Service
Monday through Friday
9:00 am to 5:00 pm, EST
Toll Free: 1-800-719-8199
Email:service@nuukusa.com

IMPORTANT SAFETY WARNINGS

WE WANT YOU TO ASSEMBLE AND USE YOUR HEATER AS SAFELY AS POSSIBLE.

⚠ THE PURPOSE OF THIS SAFETY ALERT SYMBOL IS TO ATTRACT YOUR ATTENTION TO POSSIBLE HAZARDS AS YOU ASSEMBLE AND USE YOUR HEATER.

WHEN YOU SEE THE SAFETY ALERT SYMBOL, PAY CLOSE ATTENTION TO THE INFORMATION WHICH FOLLOWS!

⚠ READ ALL SAFETY WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND OPERATINGYOUR HEATER.

⚠ WARNING

1. **Improper installation, adjustment, service or maintenance can cause injury or property damage.**
2. **Read all instructions and guidelines carefully and thoroughly before installation, use or service.**
3. **Failure to follow these instructions could result in fire.**

⚠ WARNING

Maintain a safe distance away from the heater as it is extremely hot during operation.
Children and pets should be supervised at all times when the heater is lit.

⚠ DANGER

⚠ NOT for use in or on boats or recreation vehicles.
Do not move the weight bag. Keep it securely placed on the leg base at all times.

⚠ DANGER



1. Do not store or use gasoline, liquid propane or any other flammable vapors or liquids in the vicinity of this appliance

A MAJOR CAUSE OF FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES TO COMBUSTIBLE MATERIALS). IT IS OF UTMOST IMPORTANCE THAT THIS PRODUCT BE INSTALLED ONLY IN ACCORDANCE WITH THESEINSTRUCTIONS.

TABLE OF CONTENTS:

General Warnings **3-4**

Operating the Heater **4-5**

Proper Care and Maintenance **6**

Transporting and Storage. **6**

Assembly Instructions. **7-15**

Warranty Information . . . . . **Back Cover**



DANGER: **Indicates an imminently hazardous situation which, if not avoided, will resuft in death or serious injury.**



WARNING: **Be alert to the possibility of serious bodily injury if the instructions are not followed. Be sure to read and carefully follow all of the messages.**



CAUTION: **Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.**

GENERAL WARNINGS:

⚠ WARNING

When using, basic safety precautions should always be followed, including the following:

- **Always place heater on a level, non-combustible surface.**
- **Operate only per manufacturer's instructions.**
- **Keep all combustible materials at least 36 inches (91cm) away from the heater at all times.**
  Do not use this heater under any overhang or near any combustible structures.
  Minimum clearance from side and back of unit to combustible materials:
  36 inches (91cm) from side and 36 inches (91cm) from back.
- **DO NOT use on wood decks.**
  Set up this heater on a hard, non-combustible, smooth, level surface.
- **Keep a fire extinguisher on hand. Refer to your local authority to determine proper size and type.**

Creosote Formation and Removal

When wood pellets are burned slowly, they produce tar and other organic vapors that combine with expelled moisture to form creosote.

The creosote vapors condense in a relatively cool oven flue and exhaust hood of a slow burning fire.

As a result, creosote residue accumulates on the flue lining and exhaust hood.

When ignited, this creosote makes an extremely hot fire.

- **Do not attempt to touch heater during use.**
- **Alert both children and elders to the hazard of high surface temperatures.**
- **Never leave appliance unattended. Hot while in operation. Keep children, clothing and furniture away.**
  Contact may cause burns.
- **Do not use accessories or attachments not recommended by the manufacturer, as they may not be compatible with this appliance, and may cause damage or injury.**
- **Do not use this appliance for anything other than its intended use.**
- **NEVER add cooking pellets to a hot fire pot by hand. You could be seriously burned.**
  If the hopper runs out of pellets or your fire goes out, let the heater completely cool before relighting.
- **Use only wood pellets (cooking grade or heating grade wood pellets).**
- **Always store wood pellets away from heat.**
- **NEVER use gasoline, gasoline-type lantern fuel, or similar liquids to start or "freshen up" a fire in this appliance.**
  Keep all such liquids well away from the appliance when in use.
- **This heater is not for use indoors.**
  Do not use inside a building, garage or any other enclosed area.
- **This product is not designed for commercial use.**
- **Beware of high winds. Strong winds can knock over the heater.**
- **This product is not designed for tabletop use. Do not set this product on a tabletop.**
- **Keep appliance clean. See Proper Care and Maintenance section for cleaning instructions.**
- **Do not operate this heater while under the influence of drugs, alcohol, or while fatigued.**
- **Do not use in the presence of explosive or flammable gases, vapor or other substances.**
- **Do not use this heater unless it is completely assembled and all parts are securely fastened and tightened.**
- **Use only identical replacement parts.**
- **Do not attempt to move this appliance while it is in use.**
- **Do not use this product for indoor heating, as toxic fumes will accumulate.**
- **Keep heater covered when not in use — store out of the reach of children.**
- **Do not clean this product with a water spray.**

Follow these guidelines to prevent this colorless, odorless gas from poisoning you, your family or others.

- **Know the symptoms of carbon monoxide poisoning: headache, dizziness, weakness, nausea, vomiting, sleepiness and confusion. Carbon monoxide reduces the blood's ability to carryoxygen. Low blood oxygen levels can result in loss of consciousness and death.**
- **See a doctor if you or others develop cold or flu-like symptoms while cooking or in the vicinity of this appliance. Carbon monoxide poisoning, which can easily be mistaken for a cold or flu, is often detected too late.**
- **Alcohol consumption and drug use increase the effects of carbon monoxide poisoning.**
- **Carbon monoxide is especially toxic to pregnant women and unborn children, infants, the elderly, smokers, and people with blood or circulatory system problems, such as anemiaor heart disease.**

OPERATING THE HEATER:

⚠ WARNING

Read and follow all warnings and instructions contained in the preceding sections of this manual.

BREAKING IN YOUR HEATER:

- **In manufacturing and preserving the components of your heater, oil residue may be present on the surfaces.**
- **Please follow the "Initial Lighting Instructions" to cure the paint on your heater.**

⚠ WARNING

- **DO NOT leave your heater unattended while in use.**
- **DO NOT move heater when in use.**
- **Do not move the weight bag. Keep it securely placed on the leg base at all times.**

LIGHTING THE HEATER

WARNING

Before lighting, read and comply with all warnings and safety instructions in this manual.

— DO NOT leave the heater unattended during operation.

— DO NOT move or relocate the heater while it is in use or hot.


— Use only cooking-grade or heating-grade wood pellets; Never use gasoline, flammable liquids, or non-recommended fuels.


— Keep children, pets, clothing, furniture, and all combustible materials at least 36 inches (91 cm) away from the heater.

— This heater is FOR OUTDOOR USE ONLY; Do not operate indoors, in garages, tents, vehicles, or enclosed spaces.

— Always keep the weight bag positioned on the leg base to help prevent accidents during outdoor use.

Post-Lighting & Operation Notes

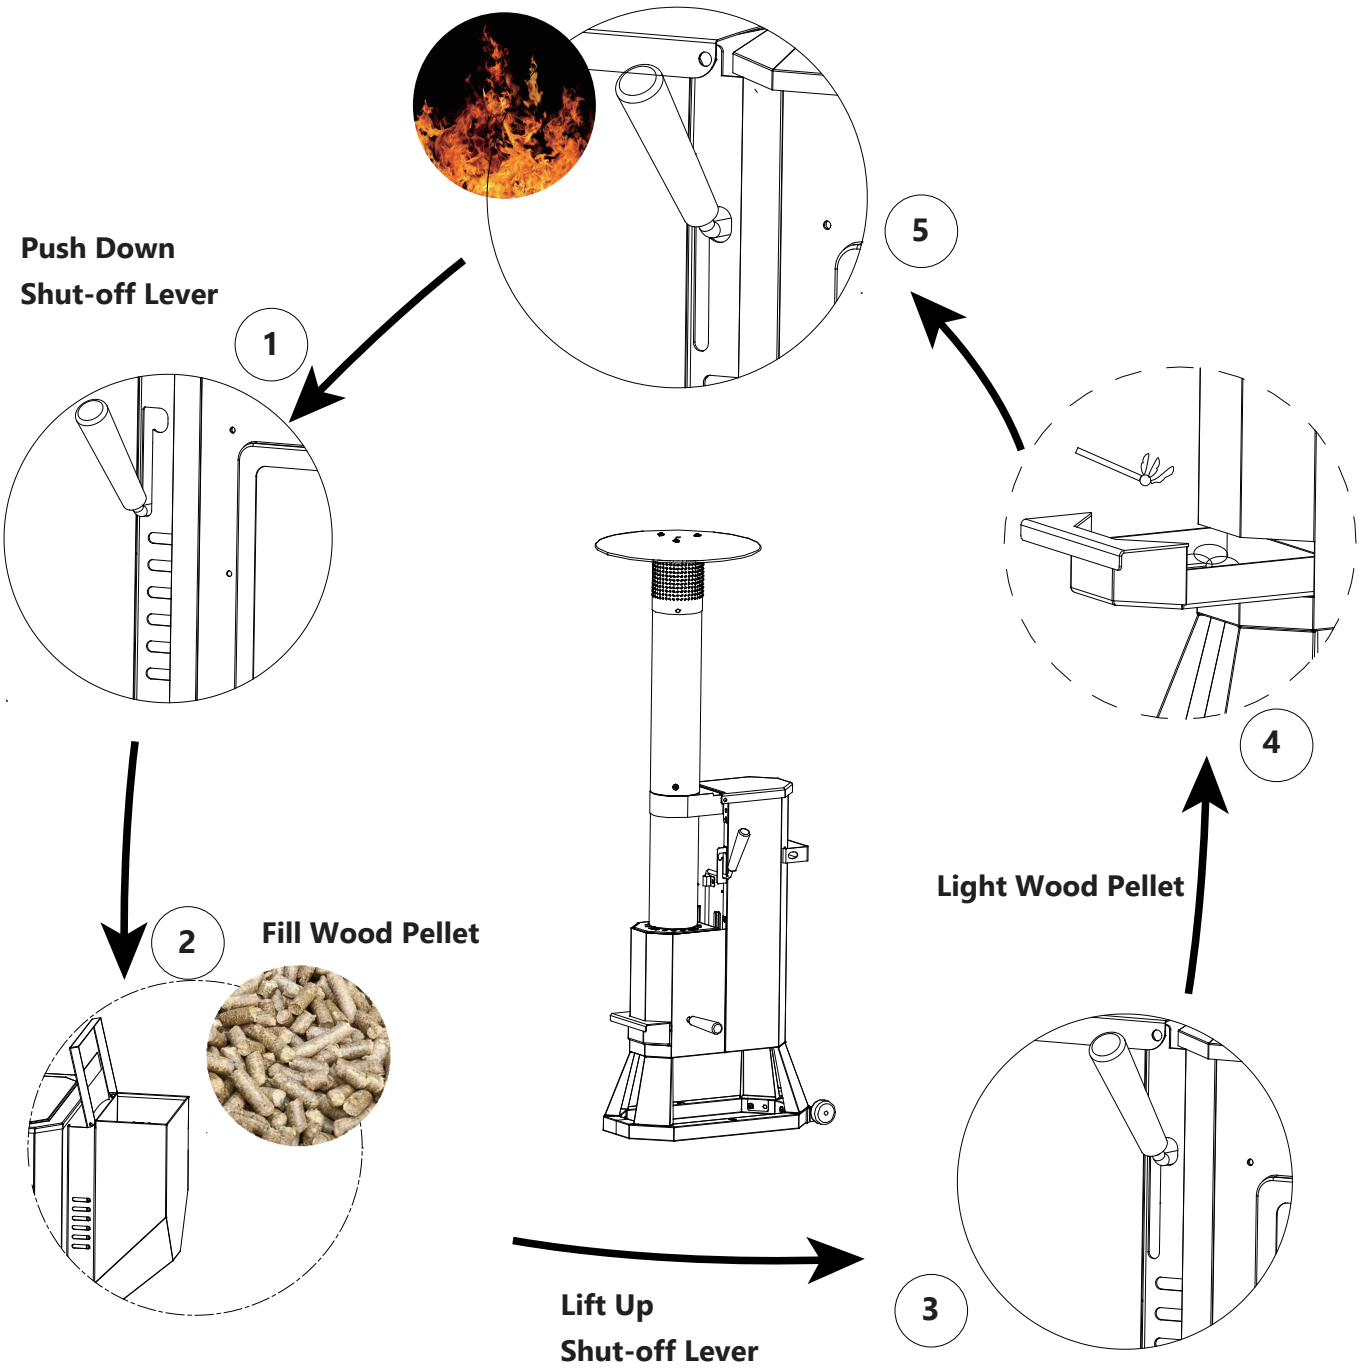

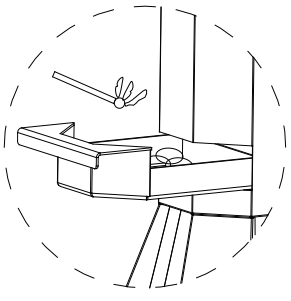

Use one of the following materials to ignite your heater:

* **Fire Starters**
* **Lighter Cubes**
* **Lighter Fluid**
* **Fire Starter Gel**

NOTE: Ensure that wood pellets have entered the burn chamber before starting the ignition process.

Initial Lighting (First-Time Use Only)

This procedure cures the high-temperature paint and removes manufacturing residues.

Smoke during initial firing is normal.

1. **Push the shut-off lever (located on the side of the pellet hopper) fully down to the closed position.**
2. **Fill the hopper approximately 1/2 full with wood pellets.**
3. **Lift the shut-off lever upward and lock it into position.**
4. **Light wood pellet (refer to above page instruction); allow them to burn completely.**
5. **Let the heater run undisturbed until it shuts off naturally, then allow the unit to cool completely before regular use.**

Standard Operating Lighting Instructions

1. **Confirm the heater is fully assembled, all hardware is tightened, and it is placed on a level, non-combustible surface.**
2. **Push the hopper shut-off lever fully down to close the pellet feed.**
3. **Fill the hopper with wood pellets (pellets will not feed into the firepot with the lever closed).**
4. **Lift the shut-off lever upward and lock it to allow pellets to flow into the firepot.**
5. **Add charcoal starter, approved lighter fluid or gel into ash tray.**
6. **Ignite above fule material using a butane lighter or long match, then push ash tray back to position.**
7. **Do not move or touch the heater during operation**.

Proper Care & Maintenance

CAUTION: Always allow the heater to cool completely before cleaning, maintenance, or moving.

This procedure cures the high-temperature paint and removes manufacturing residues. Smoke during initial firing is normal.

1. Fuel & Hopper Care

Empty all wood pellets from the hopper during long-term storage. Moisture can cause pellets to swell, clog the firepot and chute, and impair combustion.

2. Ash Disposal

Collect ashes only in a sealed metal container. Place the closed container on a non-combustible surface, well away from all combustibles, until ashes are fully cooled and ready for disposal.

3. Rust Prevention & Surface Cleaning

Keep the unit clean and covered when not in use to minimize rust. Wipe interior and exterior with a soft, damp cloth. Buff minor rust spots, clean, and touch up with high-temperature paint. Wipe soot from the glass as needed.

4. Firepot & Burner Cleaning

Periodically remove the firepot and burner fence to clear ash buildup. A wet/dry vacuum is recommended for efficient cleaning. Ensure the heater is cold before service.


5. General Maintenance

Keep the appliance clear of combustibles, gasoline, and flammable liquids/vapors.
Inspect and tighten all fasteners (nuts, bolts, screws) at least twice yearly or after prolonged storage.









6. Cleaning Notes



Do not use water spray or harsh corrosive cleaners.
Some components may have sharp edges-wear protective gloves if needed.

EXPLODED VIEW

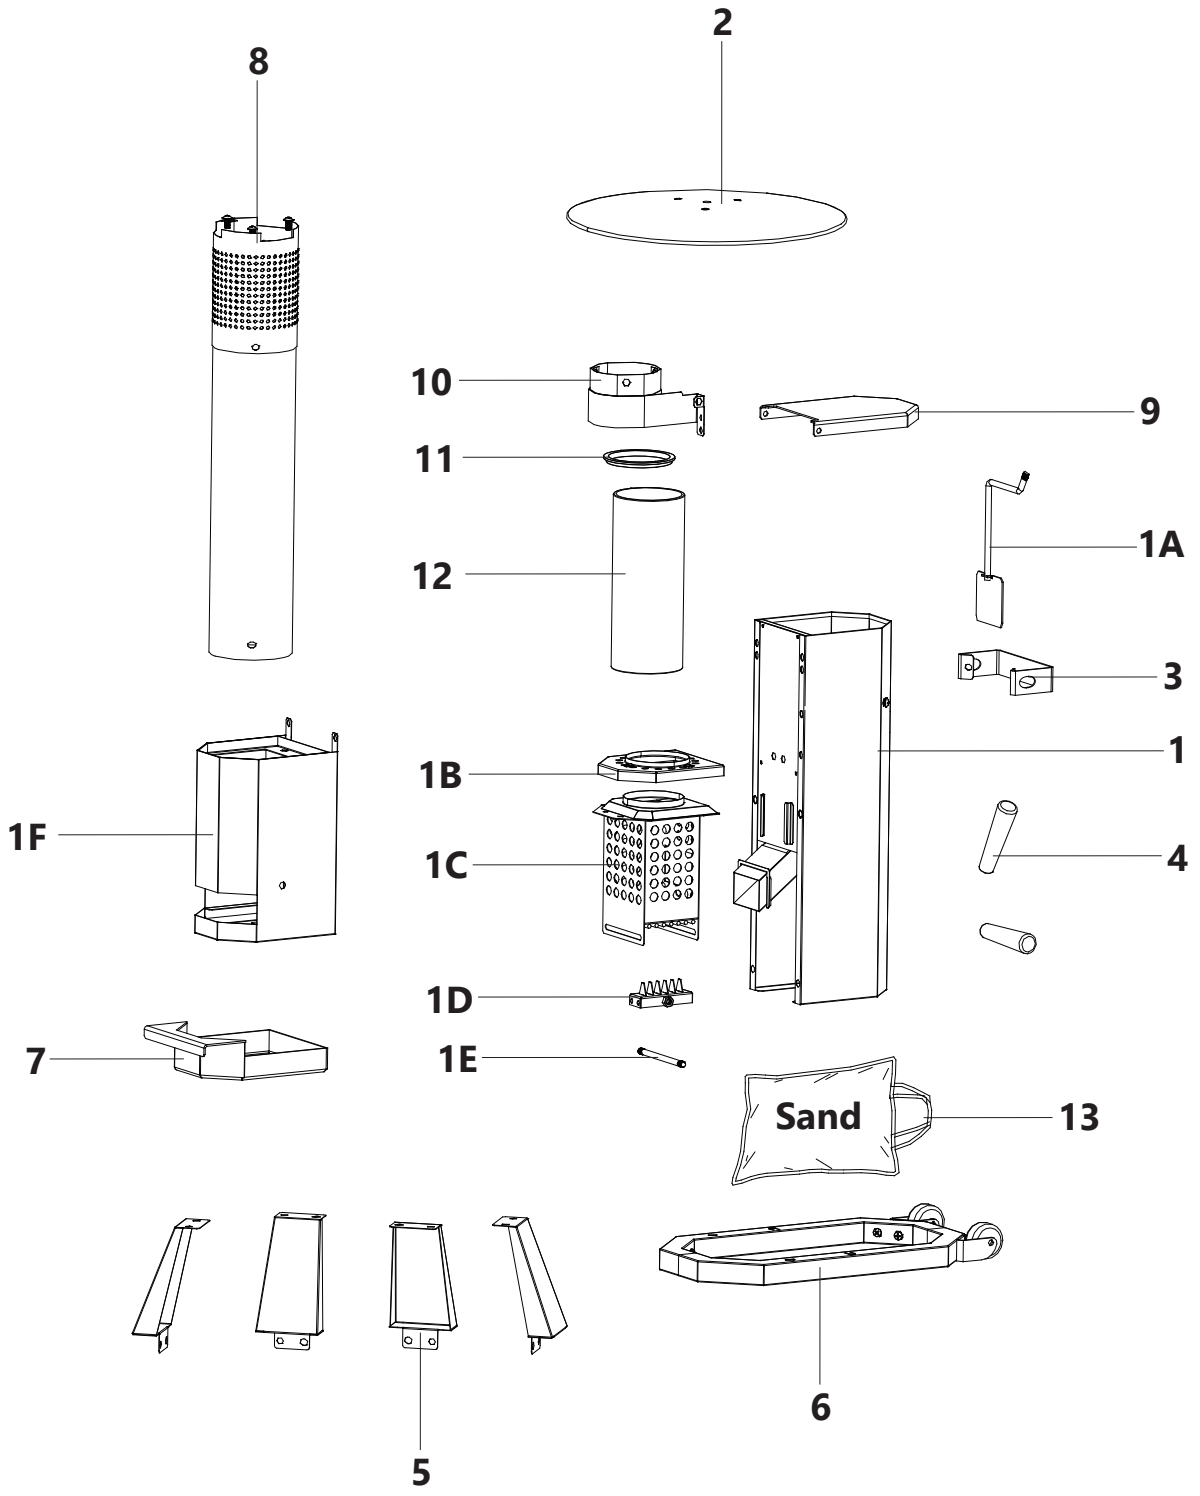

Parts and Hardware

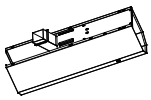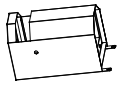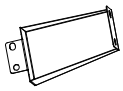PART	PICTURE	DESCRIPTION	QTY
1		Pre-assemble	1
1B		Pre-assemble	1
1D		Pre-assemble	1
1F		Pre-assemble	1
3		Side Handle	1
5		Leg	4
7		Ash Tray	1
9		Hopper Lid	1
11		Pre-assemble	1
13		Weight Bag (Sand)	1

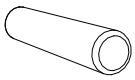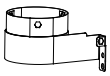PART	PICTURE	DESCRIPTION	QTY
1A		Pre-assemble	1
1C		Pre-assemble	1
1E		Pre-assemble	1
2		Reflector	1
4		Handle Cap	2
6		Base Assembled	1
8		Chimmney Top	1
10		Connection Kit	1
12		Glass Tube	1

Hardware

PART	PICTURE	DESCRIPTION	QTY
A		Bolt M6x12	26
B		Bolt M6x12	6

PART	PICTURE	DESCRIPTION	QTY
C		M6 Setp Screw	2


Assembly Instruction

STEP 1: Install Part 5-Leg onto Part 6-Base Assembled using Eight Bolt M6 X 12 (A).
Please pay attention about the "U" sign.

AX8


'U' means Upside.
Make sure you can see U when install feet

If install feet incorrect, wheel might not work.

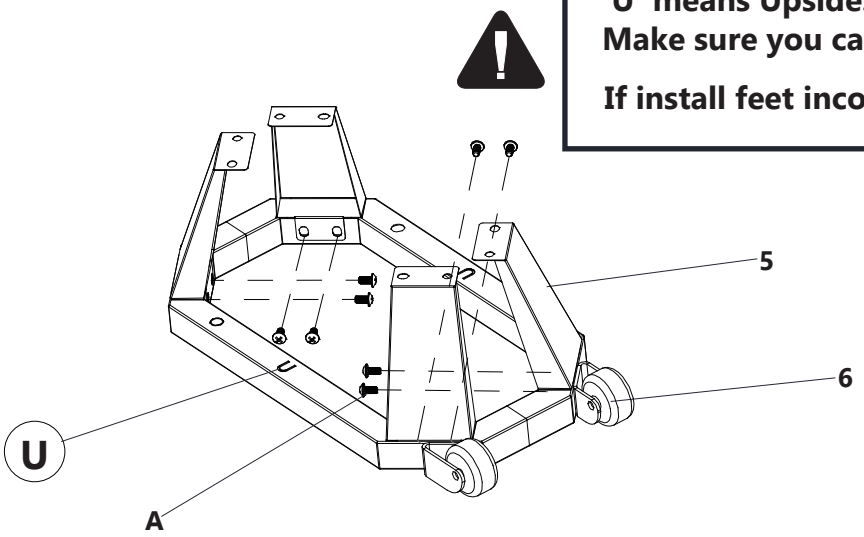

STEP 2: Turn the assembled unit upside down and secure the four legs using Screws A


AX4

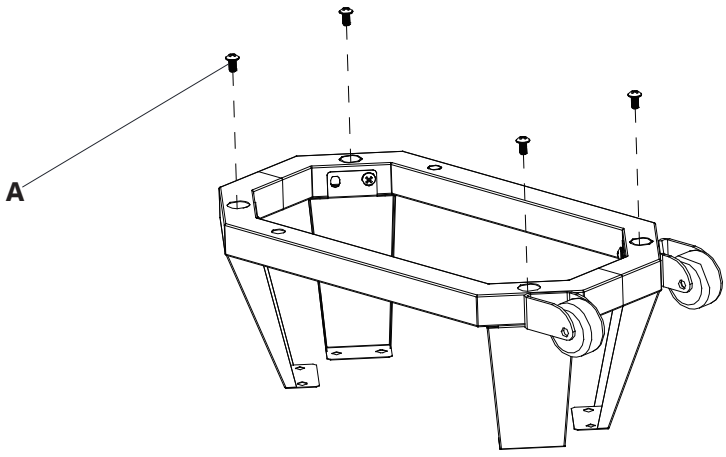


Assembly Instruction

STEP 3: Install assembled base set onto mainbody, using Eight Bolt M6 X 12 (A)

AX8

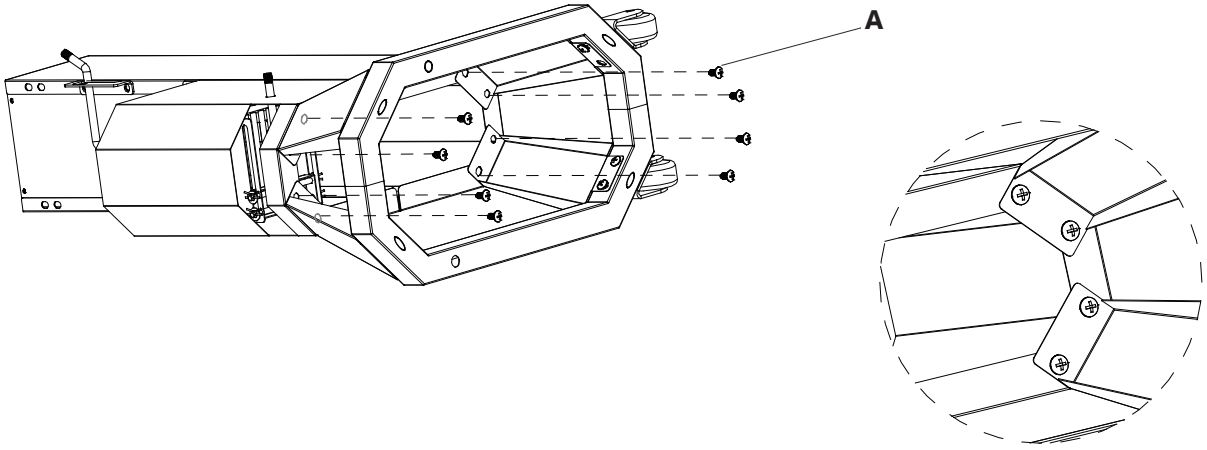


STEP 4: Place Part 12- Glass Tube & Part 1B- Glass Tube Base on the position, see pic shown as below.

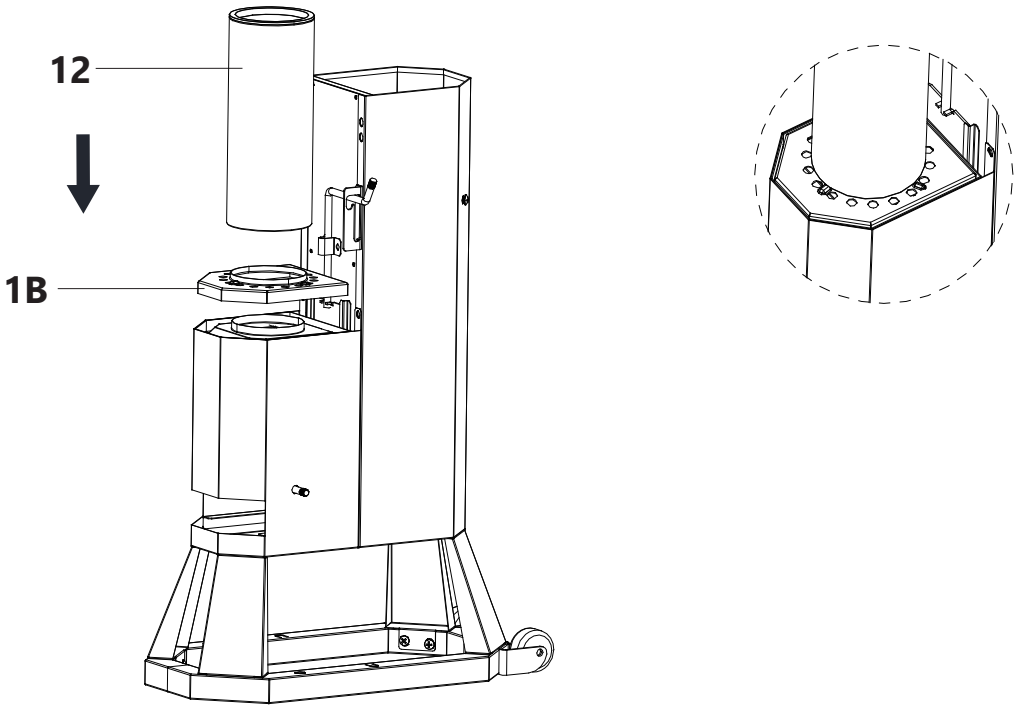

Assembly Instruction


STEP 5: Install Part 10-Connection Kits to Mainbody, using Four Bolt M6 X 12 (A).

AX4

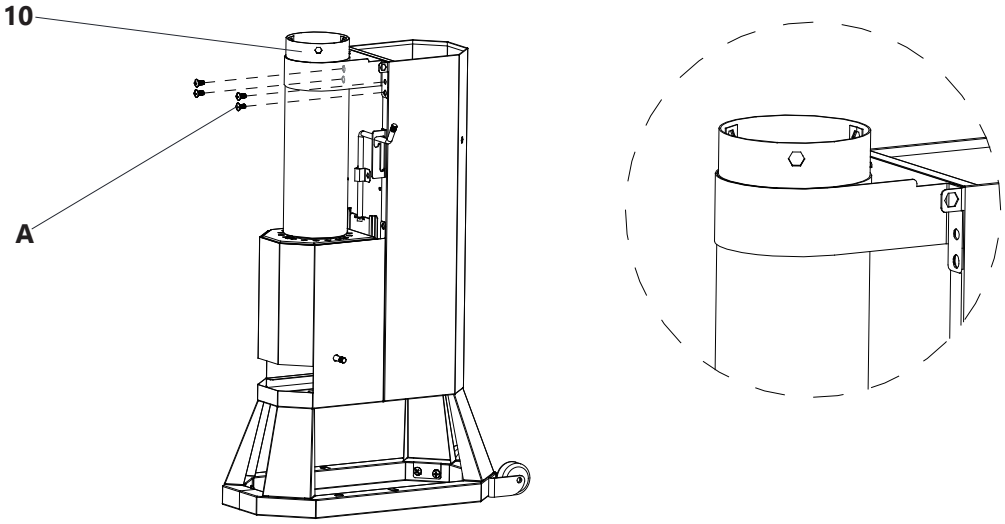

STEP 6: Install part 9-Hopper Lid onto Hopper, using Two M6 Step Screw (C).


CX2

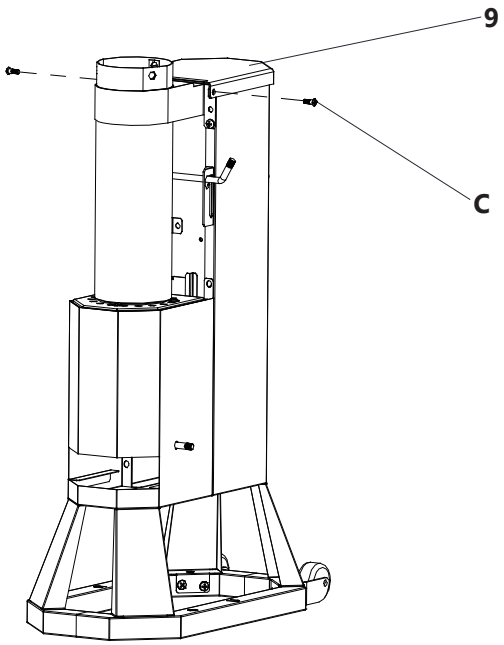

Assembly Instruction


STEP 7: Install Part 3-Side Handle onto main body, using Two Bolt M6X12 (A)

AX2

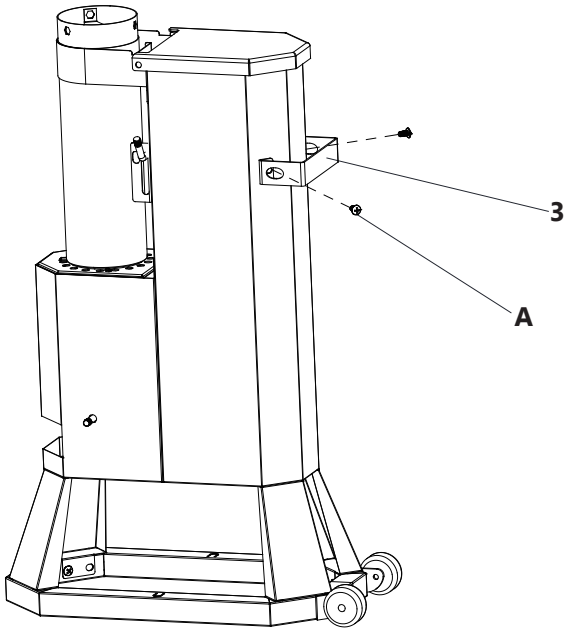

STEP 8: Install Part 4-Handle Cap onto handle.


Note: Two handle need to be installed!

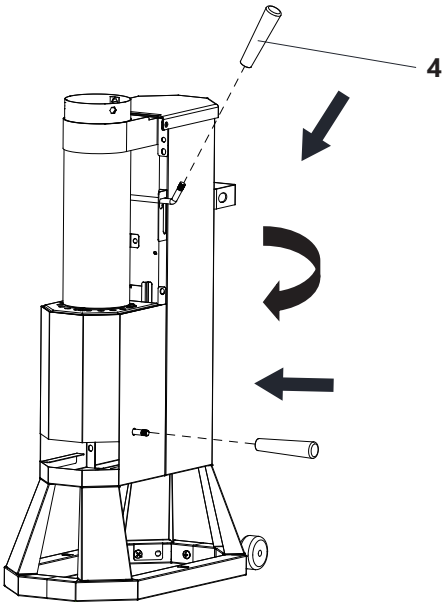

Assembly Instruction


STEP 9: Install Part 2-Reflector Top on Part 8-Chimmney Top, using Three Bolt M6X12 (B)

BX3

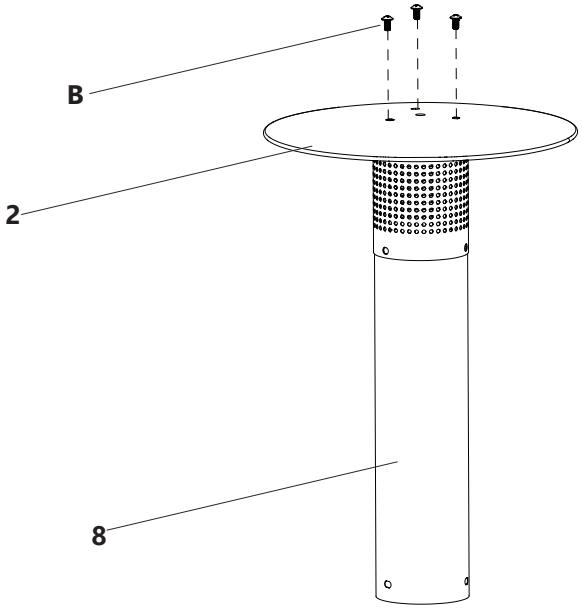


STEP 10: Install assmebled chimmney set to body, using Three Bolt M6X12 (B)


BX3

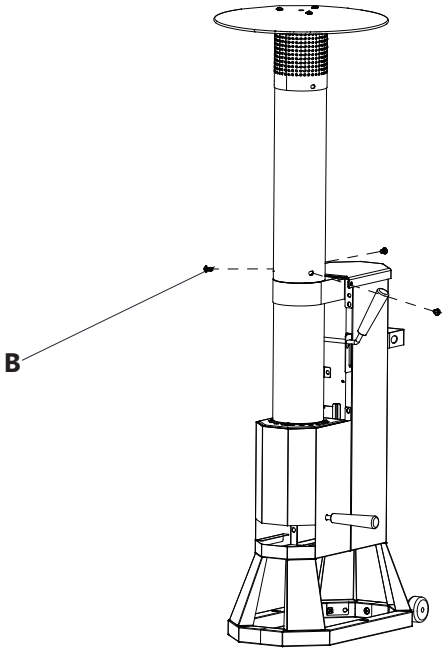

Assembly Instruction


STEP 11: Insert Part 7-Ash tray into main body.

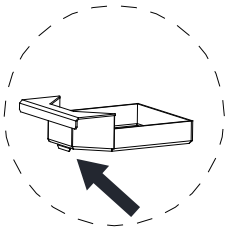

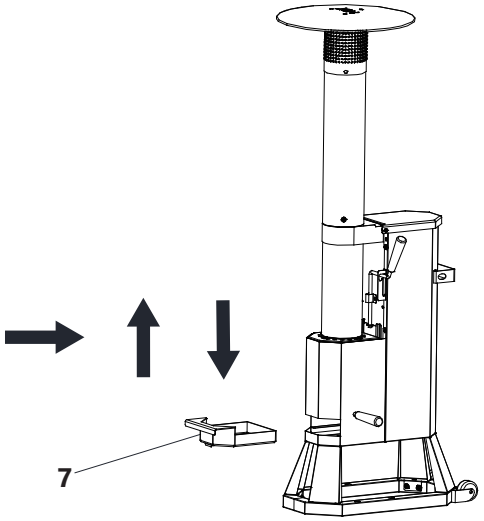

Installing the Ash Drawer
IMPORTANT: Note the stop tab shown in the illustration before installing the ash drawer.
1. Slide the ash drawer into the unit.
2. When the drawer reaches the stop tab and can no longer move forward, slightly lift the front of the drawer.
3. Continue sliding the drawer inward.
4. Lower the drawer into its final position.
NOTE: The stop tab is designed to prevent the ash drawer from accidentally sliding out during movement or use.
It helps keep the drawer securely in place.

FINISH PRODUCT

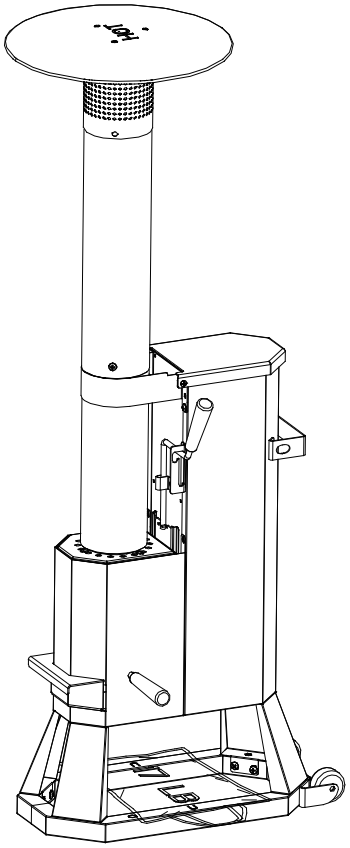

WARRANTY

This ONE-YEAR LIMITED WARRANTY is extended by the manufacturer to the original retail purchaser of the CSL600 Outdoor Wood Pellet Patio Heater. The manufacturer warrants this heater to be free from defects in material and workmanship under normal household use and proper maintenance for a period of one (1) year from the date of original purchase.

WHAT IS COVERED

- Defects in materials and workmanship under normal intended use.

- At the manufacturer's sole discretion, the manufacturer will repair or replace defective components or the entire unit that fails during the warranty period.

WHAT IS NOT COVERED

This warranty does NOT apply to:

• Damage resulting from accident, abuse, misuse, alteration, modification, or improper operation.

• Damage caused by failure to follow instructions in this manual, improper installation, or inadequate maintenance.

• Normal wear items including surface scratches, rust, discoloration, heat-induced finish damage, and cosmetic deterioration from outdoor exposure.

• Damage from weather, water intrusion, creosote buildup, animal infestation, or improper storage.

• Damage caused by use of non-recommended fuels, unauthorized accessories, or non-genuine replacement parts.

• Labor, transportation, or service costs associated with diagnosis, repair, or replacement.

• Units used for commercial, industrial, or non-residential purposes.

WARRANTY

WARRANTY CLAIMS

To make a valid warranty claim:

1. Retain the original sales receipt or proof of purchase as evidence of the purchase date.

2. Contact the manufacturer's Customer Service Department to initiate a claim.

3. Provide requested information and follow instructions for return or inspection as directed.

GENERAL PROVISIONS

- **This warranty is valid only in the United States and is non-transferable and non-assignable to subsequent owners.**
- **The manufacturer's total liability under this warranty is limited to repair or replacement of the defective product or part.**
- **This warranty is in lieu of all other warranties, express or implied, including but not limited to implied warranties of merchantability or fitness for a particular purpose, to the fullest extent permitted by applicable law.**
- **Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**

WARRANTY

NUUK LLC (NUUK USA)
1-YEAR WARRANTY

Proof of purchase is required to access this warranty program, which is in effect from the date of purchase.

NUUK USA warranty coves one year from the date of purchase. NUUK will assist you to get the replacement parts, replace the unit. ALL warranties are limited to the original purchase only. This warranty does not cover any liability for used good purchase. The purchaser must follow the usage instruction.

Warranty Provisions

· This warranty is non-transferable and does not cover failure due to misuse, improper installation or maintenance.
· This warranty is for replacement of defective parts only. We are not responsible for incidental or consequential damages or labor costs .
· This warranty does not cover damage caused by abrasive or chemical cleaners, or any damage to other components used in the installation or operation of the table.

· Paint is not warranted and may require touch-up.

NUUK customer service team

Phone: 1-800-719-8199
Monday through Friday
9:00 am to 5:00 pm, Eastern Time Zone

Email: service@nuukusa.com

NUUK USA
nuukusa.com