英文说明书

印刷说明:
1. 使用80克白纸
2. 黑色印刷
3. 分辨率：每英吋不低于150像素
4. 胶板印刷
5. 双面印刷

The LP-gas cylinder(s) used with the stove shall be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation or Transport Canada, the Standard for Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods, CAN/CSA B339.

Limited One Year Warranty

This product is warranted against manufacturing and workmanship defects for a period of one (1) year from the original date of purchase. This warranty will be annulled if the appliance has been modified or if used not in accordance with this user's guide in regards to operation and safety guidelines. Asialord will not be responsible for damages to material, bodily harm or any accident or injury resulting from negligence or operation not in accordance with user's guide in regards to operation and safety guidelines.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

What This Warranty Does Not Cover? This warranty does not cover normal wear of parts, parts that are not genuine parts from the supplier, or damage resulting from any of the following: negligent use or misuse of the product; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than the supplier or an authorized service center. Further, the warranty does not cover fire, flood, hurricanes and tornadoes. Warranty void if damage to the product results from the use of a part other than a genuine part from the supplier.

THE SUPPLIER SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. THE SUPPLIER SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service? The contacts of the warranty service are displayed in the official website http://www.asialord.com. If your product is defective and is within your warranty period, please contact the warranty service team in order to obtain service.

Do not mail products with fuel in tanks, or with disposable propane cylinders.

Toll Free Number: 1-800-719-8199

Email: service@nuukusa.com

ITEM: HTK1800
SKU: 89018

Important: Read the instruction carefully before using.
Familiarize yourself with the appliance before connecting it to the gas container.
Please keep this instruction for future reference.

⚠ DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.


Using it in an enclosed space can kill you.


Never use this appliance in an enclosed space such as a camper, tent, car or home.

FOR YOUR SAFETY


Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

IF YOU SMELL GAS:
1. Do not attempt to light the appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

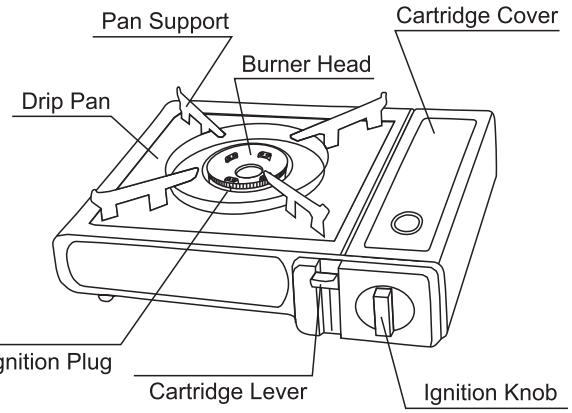

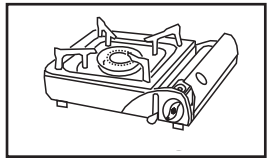

8 oz. Butane

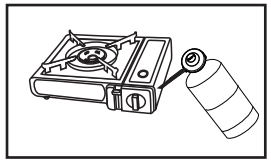

16.4 oz. Propane

⚠ DANGER ⚠

DO NOT leave the butane canister in the butane compartment when the propane tank is being used. ALWAYS REMOVE THE BUTANE CANISTER AFTER USE.

⚠ WARNING

BEFORE INSERTING A CARTRIDGE, ALWAYS ENSURE THAT THE PAN SUPPORT/DRIP TRAY HAS ALREADY BEEN PLACED UPWARDS IN THE RIGHT POSITION.



CORRECT



REMOVED


Manufactured for and distributed by PRICEZONE City of Commerce, CA 90040

WARNING - PLEASE READ CAREFULLY PRIOR TO USE

Read these Instructions for Use carefully. Familiarise yourself with the appliance before connecting the gas container. Keep these instructions for future reference.


WARNING

- It should be used in a well ventilated location in accordance with National Requirements.
- Do not use in wind, breeze or draught.
- Do not spray aerosols in the vicinity of this cooker while it is in operation.
- Avoid boil over and spillage. Do not overfill cooking vessels.
- Do not use cooking utensils greater than 200mm diameter.
- Always remove unit from all packaging materials prior to use.
- Do not use or place near other heat sources such as heaters, electrical appliances or flammable articles.
- Do not touch the burner head, drip pan, pan support / trivet etc. immediately after use or during use.
- Do not smoke while operating the appliance.
- The unit must only be used on a flat horizontal, stable, non-slip and non-combustible surface.
- During operation the unit must not be left unattended and must be controlled by the operator at all times.
- Do not carry or move the cooker while operating.
- Keep this appliance away from combustible materials during operation. Keep minimum clearances of: Rear 900mm, Sides 900mm, Top 1200mm.
- Check that seals between the appliance and the gas container are in place and in good condition before connecting the gas container.
- Do not use this appliance if it has damaged or worn seals.
- You can use tweezers to pull the bad seal out and put in a new one, or you can call the after-sales service centre for advice.
- If you suspect that the unit is faulty, do not use.
- Do not use this appliance if it is leaking, damaged or does not operate properly.
- Ensure gas cartridge is removed from unit for storage.
- Do not leave this appliance unattended while it is in operation.
- This appliance is to be used for cooking only. Do not use as a space heater. Do not use as a drying apparatus to dry clothing, towels, etc. Do not use to start a wood fire.
- Do not use multiple appliances to heat a single utensil.
- Do not heat multiple utensils on this single unit.
- Do not modify this appliance.
- Max. pan ϕ200mm with water.
- Forbidden to use griddle plate.
- Do not attempt any repairs yourself. This appliance must only be serviced by an authorised person.

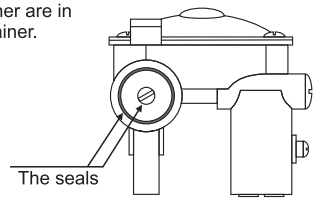

GAS CARTRIDGE PRECAUTIONS

- Do not leave or store fuel cartridge in a place where the temperature exceeds 30°C. Do not store in direct sunlight or heat. Do not leave in the trunk/boot of a vehicle. Do not puncture or incinerate even when empty as canister may explode.
- Gas containers shall be changed in a well-ventilated location, preferably outside, away from people and away from any sources of ignition such as naked flames, pilot flames, electric heaters or electric equipment.

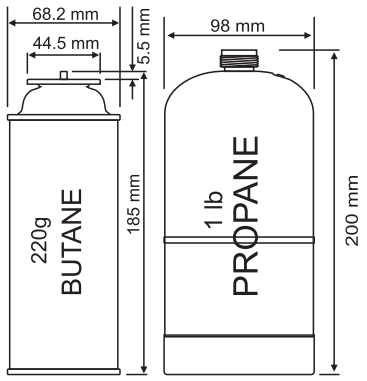

Size of the right gas cylinders

- Gas containers must be stored outdoors in a well-ventilated area out of the reach of children. Any indoor storage shall comply with Section 2 of AS/NZS1596 - “Minor storage and usage” of LP Gas.
- This appliance shall only be used with the gas cylinders described in this manual. It may be hazardous to attempt to fit the stove to other types of gas containers.
- If cartridge becomes empty during operation, the flame will gradually diminish to eventually extinguish.
- How to check if gas cartridge is empty: The cartridge should be light in weight, approximately 105gm. If shaken gently, there should be no sign of liquid inside.

TROUBLE SHOOTING

Troubles / Causes	Cartridge would not install	No gas supplied in “MAX” position	Smell gas in “O” position	Low flame	Uneven flame	No ignition Faulty ignition	Extinction in operation	Trouble shooting
Ignition knob is not turned to “O” position	●							Turn ignition knob completely to “O” and reset cartridge.
Safety device activated		●				●	●	Refer to explanation for safety device.
Ignition knob malfunction		●	●	●		●		Contact local agent to repair.
Clogged nozzle		●		●		●		Contact local agent to repair.
Cartridge incorrectly installed	●	●	●			●		Fit cartridge guide into cartridge slot.
Clogged burner holes				●	●	●		Use a metal brush to clean it.
Bent or rusty electrode						●		Clean electrode.
No gas		●		●	●	●	●	Replace fuel cartridge.

SPECIFICATIONS

Type of gas: Butane, Propane
Appliance category: Vapour pressure
Nominal heat input: Butane 7200 BTU/hr
Propane 6500 BTU/hr

AFTER SALES

Keeping the stove area clear and free from combustiable materials, gaslone, and other flammable vapors and liquids.

Not obstruscting the flow of combustion and ventilation air.

We will not accept any liability in respect of any misuse not in accordance with any instructions contained in this booklet.

When you encounter a problem, you can always call the manufacturer who will tell you the nearest after-sales service centre available to you.

How to Use the Brass Connector to Connect the Stove to a Big Gas Cylinder

Preparation:
1. Connect the brass connector to a gas hose.
2. Connect the other end of the hose to a gas cylinder.
3. Make sure there is no leak at both fittings at the both ends of the hose.

How to use the big cylinder as fuel supplier:
1. Release the small butane cartridge. Turn the knob to the close position.
2. Take the cartridge out from the stove.
3. Pull the brass connector (together with hose) though the hole on the back panel. Screw the brass connector onto the regulator.
4. Connect the other end of the hose onto the big gas cylinder.
5. Make sure no leak everywhere.
6. Open the valve on the gas cylinder.
7. Turn the knob to ignite the stove. No need to push the lever down when using big cylinder.
8. When finish, close the valve on the cylinder first. Then close the stove.
9. Dissemble the grass connector and get it away from the stove.
10. Keep the brass connector and the hose in a safe place for next use.

DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odour.

Using it in an enclosed space can kill you.


Never use this appliance in an enclosed space such as a camper, tent, car or home.

The cylinder supply system be arranged to provide for proper fuel withdrawal from the operation cylinder.

The stove shall not be exposed to flammable vapors or liquids during lighting.

- Max. pan ϕ200mm with water.
- Forbidden to use griddle plate.

Note: Observe flame height and color when lit. Flame should have a blue center and yellow tip.

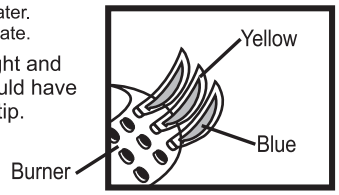

CAUTIONS FOR USE - PLEASE READ CAREFULLY PRIOR TO USE

• PROCEDURE FOR CHECKING GAS LEAKAGE

Turn the cooker off immediately if you smell a strong gas odour and/or hear a “hissing” sound. This indicates that there may be a gas leak from the gas cartridge or appliance. If this is evident:

1. Turn the ignition knob to the “O” position and unlock the gas cartridge by releasing the cartridge lock lever to the upward position. If safe to do so, remove and isolate the gas cartridge.
2. Open all windows or move the appliance to a well-ventilated location away from any ignition source. Do not use or turn on/off any electrical or gas appliance including telephones. Do not light flames or use any equipment that could cause sparks or flames.
3. If there is a gas leak on the appliance and you cannot stop the gas flow or remove the gas cartridge, relocate the appliance to a well-ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame. Do not inhale the gas at any time.
4. Do not attempt to ignite the cooker any further.
5. Contact your dealer or licensed plumber for service

• AUTO SAFETY DEVICE

In the case of long term or excessive heat near the fuel cartridge, pressure will build up to set off the safety device. The gas cartridge is automatically ejected in the event of over-pressure in the gas cartridge and the flame will be extinguished. The unit will not operate until the gas pressure of the cartridge returns to the normal range.

• HOW TO RESET THE AUTO SAFETY DEVICE

1. Turn the control knob to the “O” position.
2. Remove the gas cartridge.
3. Turn the ignition knob to the “MAX” position and wait 5 minutes to release any excess gas inside the unit.
4. Return the ignition knob back to the “O” position.
5. Push the cartridge lever down to the “LOCK” position and then release it back to the “RELEASE” position.
6. Determine the cause of over-pressure, i.e. Stove used in strong direct sunlight, an oversized pot/pan has been used, insufficient ventilation, etc.
7. Make necessary adjustments to location, pot/pan used, and if necessary, allow the gas cartridge to cool before re-installing. Another option is to install a fresh cool gas cartridge.
8. Follow the procedures for installing the gas cartridge and ignition, then re-ignite.

• CLEANING & MAINTENANCE

1. The unit must be cleaned after each use and maintained at least once every six months. The unit must only be serviced by a licensed plumber or gas fitter. For repairs, spare parts or service of the appliance, please contact us or any licensed plumber or gas fitter.
2. When you notice small flame or no flame when you use a new cartridge, it may be that the injector is too dirty or even blocked. You can clean the injector with a needle thinner than 0.47mm or you can call the after-sales centre for advice.

• COOKER BODY

1. After using the unit, it may be very hot. Please wait for at least 10 minutes before you move or store it.
2. Ensure the unit is clean at all times. Only clean the unit after the gas cartridge is removed and the unit has cooled. Clean the cooker body using a damp cloth. Use kitchen detergent if necessary. Wipe dry.

• PAN SUPPORT AND DRIP PAN

Remove the pan support and drip pan and clean with warm water and kitchen detergent if necessary.

• BURNER HEAD AND SURROUNDINGS

Soil, dirt, oil, dust, grime etc. can clog the burner and affect the flame. Clean the burner head with a metal brush and keep out of water.

• IGNITION PLUG

Keep clean and dry. Clean with a dry cloth.

• STORING OF THE APPLIANCE

When the appliance is not in use, please keep it in a safe place where,
1. it can’t be pressed by other appliances,
2. it is safe from dust and dirt,
3. it can be kept dry,
4. it is safe from heat and direct sunlight.

HOW TO USE ON BUTANE CARTRIDGE

1. PUT THE PAN SUPPORT CORRECTLY LIKE THE PICTURE

2. HOW TO INSTALL BUTANE CARTRIDGE

2.1 Open the cartridge cover.

» The cartridge must be FineFlame butane cartridge complying with EN 417.

2.2 Make sure ignition knob is in “O” position and cartridge lever is in “RELEASE” position.

» If the ignition knob is not completely in “O” position, the cartridge cannot be engaged into “LOCK” position.

2.3 Place the cartridge into the compartment. Align the cartridge properly by inserting the cartridge guide tab of the unit into the cartridge slot on the rim of the canister.

2.4 Lock in place by pushing the cartridge lever down to “LOCK” position and then close the cartridge cover.

2.5 Check that the cartridge is positioned properly, and the cartridge lever is in the “LOCK” position.

2.6 Check gas leak at the connection with soap water. Bubble means leak and the stove can’t be used any more.

2.7 You can now turn on the unit.

CAUTION: Incorrect positioning of the gas cartridge will cause the burner to break and/or leak which will produce hissing sound, and a smell of gas. In this case, please follow the description in part “Procedures for Gas Leakage”.

3. HOW TO IGNITE

Turn the ignition knob counter-clockwise until you hear a “click” sound.

» If the burner does not light, repeat the ignition procedure.

Phenomenon of flaring may occur during warm up period or if the appliance is moved. The flaring will stop within one minute or when it’s moving stops.

4. HOW TO CONTROL FLAME

The size of the flame can be regulated by turning the ignition knob slowly toward “O” position from “MAX” position.

5. HOW TO EXTINGUISH

Turn the ignition knob clockwise to “O” position. The flame is automatically cut off and no gas will be supplied.

» The flame will be extinguished before the ignition knob is turned completely to “O” position.


» Check to ensure the flame is extinguished.

6. HOW TO REMOVE BUTANE CARTRIDGE

Raise the cartridge lever up to the “RELEASE” position. Open the cartridge cover and then take the cartridge out. Ensure the ignition knob is at “O” position.

7. HOW TO BURN OFF REMAINING FUEL

Some fuel may remain in the gas cock after the unit has been turned off. For your safety, with the cartridge lever in “RELEASE” position, turn ignition knob to “MAX” position to burn off any remaining fuel.

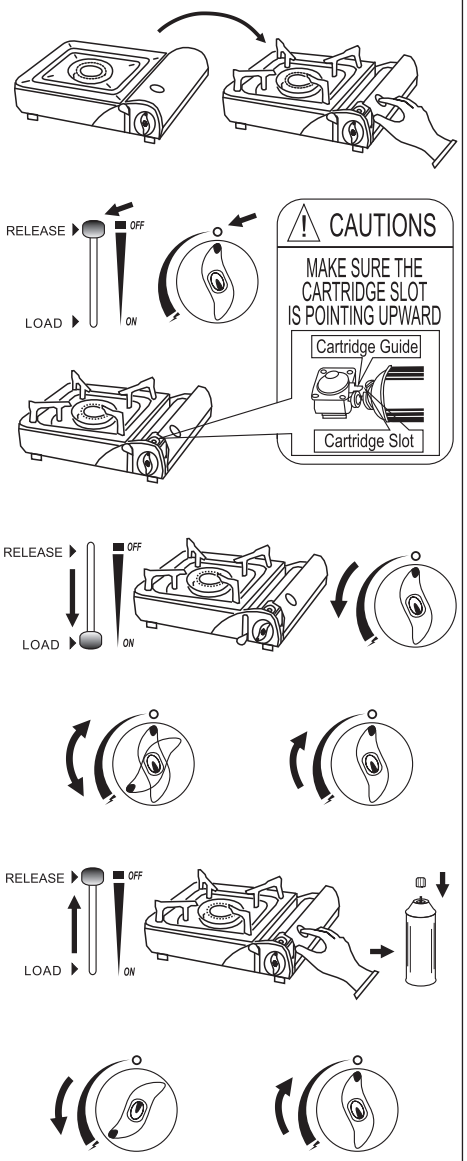

USE OF THE APPLIANCE WITH PROPANE CYLINDER

Propane adapter to be used with propane cylinder ONLY!

1. Make certain the control/ignition knob is in the off position.

2. Remove any butane fuel canister if present.

3. Thread the brass fitting of the propane adapter onto the side gas inlet of the stove. Brass fittingshould be snug (hand tighten only). Make sure the Propane adapter is connected to the stove first, then connect to propane cylinder.


4. Remove plastic cap from top of propane cylinder.

5. Screw propane cylinder into REGULATOR. Make sure propane adapter is securely connected-before igniting.

6. Check the connection between the propane cylinder and gas inlet of stove with soapy water. Bubbles indicate a leak.

7. Make sure stove is placed on a fiat, sturdy surface before igniting

8. Close gas canister.

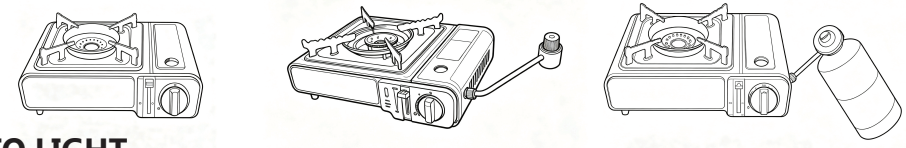

TO LIGHT

1. Turn control knob counterclockwise until you hear the ignition clicking sound. Burner should light up

2. Adjust filame to the desired heat level with control knob.

TO TURN OFF

1. Turn control knob clockwise to the OFF position.

2. Disconnect propane adapter from the propane cylinder first, THEN disconnect the propane adapterfrom the stove.

TO STORE

1. Be sure stove is cool.

2. ALWAYS - remove propane cylinder from regulator before storing stove and replace plastic cap on cylinder.

Always detach propane cylinder outdoors away from ignition sources.

Store stove in a dry, cleanand safe place.

3. Unscrew propane adapter from the side gas inlet of the stove.

4. Cylinders must be stored outdoors out of children.