70x7 mm  490 mm

100 mm

## Description




1. Power Indicator Light
2. LED Light Switch
3. Left and Right Oscillation Switch
4. Timing Indicator Light
5. Timing Switch
6. Mist Switch
7. Variable Speed Dial
8. Water Bucket
9. Water Level Window
10. Remote Control Mount
11. Output
12. Input
13. Water-resistant Accessories
14. Water Pumping Pipe

## Button Description

| Button | Description |
|---|---|
| | Turn on the switch clockwise, adjust the wind speed without a pole, turn the switch counterclockwise until the machine is turned off |
| | Adjust the light |
| | Set a timer for 1H, 2H, 4H, or 8H |
| | Turn on the mist effect |
| | Make the fan head automatically oscillate left and right |

## Product Features

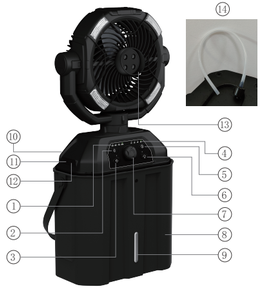1. Automatic left and right head oscillation.
2. Large battery capacity with an output port to charge other devices.
3. Stepless speed adjustment.
4. Drip-proof accessory included to prevent dripping in mist mode.
5. Three LED lighting modes.
6. Timer settings for 1 hour, 2 hours, 4 hours, or 8 hours.
7. Remote control functionality.
8. Suitable for both indoor and outdoor use and can also be hung upside down as a fan and/or LED light.

## How to use the fan

1. To turn the device on, rotate the switch clockwise.
2. To turn it off, rotate the switch counterclockwise.
3. Press the light switch to cycle through the three adjustable light modes.
4. Press timer switch to set a timer for 1 hour, 2 hours, 4 hours, or 8 hours.
5. Press mist switch to activate mist function and adjust mist volume between 2 and 4 nozzles.
6. Attach anti-drip accessory to prevent dripping while in mist mode.
7. Press left/right oscillation switch to enable automatic oscillation of fan head.
8. Charging indicator lights (25%, 50%, 75%, 100%) will flash during charging.
9. Battery is fully charged when the indicator stops flashing.
10. This product includes a remote control that can operate the fan within a 10-meter range

## How to use the remote control




**⚠ WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury may occur if ingested.
- A swallowed button cell or coin battery can cause internal chemical burns in as little as 2 hours.
- **KEEP** new & used batteries **OUT OF REACH OF CHILDREN.**
- Seek **IMMEDIATE MEDICAL ATTENTION** if a battery is suspected to have been swallowed or inserted into any part of the body.

### 1. Fan Usage Steps




### 2. How to use the water pumping pipe

(1) After receiving the product, install the pumping pipe at the bottom of the fan.
(2) The pumping pipe shall be connected to the bottom inlet of the bottom shell.




(1) No pumping pipe is installed | (2) Water pumping pipe | (3) After installing the water pumping pipe

### 3. How to use the waterproof cover

The waterproof cover is mounted on the fan blade



(1) No waterproof cover is installed | (2) Waterproof cover | (3) After installing the waterproof cover

## Cleaning and maintenance

1. Before cleaning the fan, ensure that the power supply is disconnected.
2. Wipe the fan body and air outlet with a dry cloth.
3. Never clean electrical parts (such as the motor, power switches, etc.) with water or other liquids.
4. Do not touch the power supply or electrical components with wet hands or a damp cloth.
5. If there is dust or foreign matter at the air outlet, clean it promptly to prevent it from falling into the air cavity.

## Warnings

1. This product uses polymer lithium-ion batteries and does not have a memory function. Overcharging or over-discharging may reduce battery lifespan. Please charge promptly and disconnect the power once fully charged.
2. When the fan is operating, the blades rotate at high speed. Do not insert fingers or objects into the fan to prevent injury.
3. This product is not a toy. Children under 14 years of age should use it only under adult supervision.
4. Do not squeeze, disassemble, or expose the battery to high temperatures (60 °C or above) for extended periods, as this may cause leakage or pose an explosion risk.
5. If any abnormal behavior occurs during use, stop using the product immediately.
6. If the product will not be used for an extended period, charge the battery every 2–3 months to maintain optimal performance.
7. The mist switch operates independently and is not controlled by the timer. When the product is in standby mode, please turn off the mist feature promptly.

## Friendly Reminder

Dear customer, every mist fan is tested before leaving the factory.
If you notice any residual water in the product you received, this is normal.
Rest assured, the product is brand new and safe to use.

## Product Parameter

Product model: hw-003
SKU: AC-PMBF
Input: 5V-3A
Output: 5V-1A
Battery cell: Polymer lithium-ion Battery
Product size: 276(L)x150(W)x554(H)mm
276(L)x150(W)x357(H)mm  Storage Condition

## Kit Includes:

1 * Portable Misting Fan
1 * Water Bucket
1 * Water-resistant Accessories
1 * Use Manual
1 * Type-C Charging Cable
1 * Remote Control

FOR MORE INFORMATION VISIT
**WWW.ALPHACOOLPRODUCTS.COM**

alphaAcool

High-Velocity Portable
# MISTING BUCKET FAN



PRODUCT MANUAL
AC-PMBF