296.00 mm

215.90 mm

TSC2025KID

Kids Wheelbarrow

GROUNDWORK®



Distributed by:
TRACTOR SUPPLY COMPANY
5401 VIRGINIA WAY
BRENTWOOD ,TN37027
For customer support,
call:1-888-376-9601
www.TractorSupply.com
MADE IN THAILAND

Owners Manual

SKU 6109068

- Important Safety Instructions
- Assembly Instructions
- Parts and Hardware Identification

CAUTION: Read, understand and follow ALL instructions before using this product.


IMPORTANT SAFETY INSTRUCTIONS

1. READ ALL INSTRUCTIONS CAREFULLY BEFORE USE. If you do not understand these instructions, and need clarification or further explanation, please call the Customer Service1-888-376-9601.
2. WARNING:Adult assembly required. This wheelbarrow is a real tool. Improper use may cause injury. Not a riding toy. Not intended for transportation of people or animals. This wheelbarrow should be used under adult super-vision.
3. This product is not for highway use.
4. Always distribute payload evenly over the poly tub.
5. If any parts become damaged, broken or misplaced, do not use the wheelbarrow until replacement parts can be obtained.
6. SAVE THESE INSTRUCTONS.


ASSEMBLY INSTRUCTIONS

Your wheelbarrow requires assembly. Count for all parts and hardware before begining assembly. If any parts are missing, damaged or if you have questions or need additional instructions DO NOT RETURN THIS PRODUCT TO THE RETAILER, call the Customer Service 1-888-376-9601.
Tools required for assembly : Medium size slot screwdriver 6mm open end wrench.
Refer to the exploded drawing and the parts list on the following pages during assembly.


Parts List

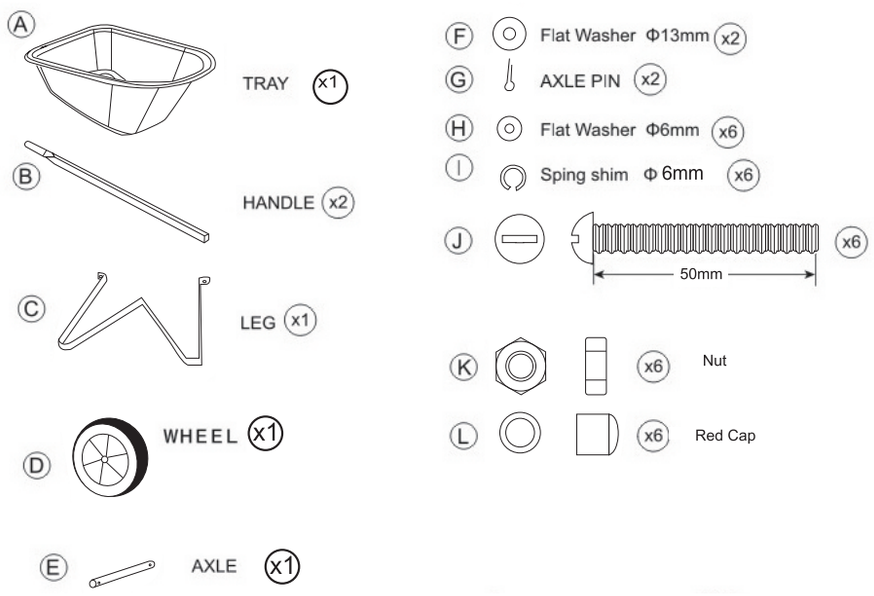

STEP 1 Screw bolts (J) into tray (A).
Assemble handles (B) and legs (C) onto bolts. Be sure to orient the legs as shown.
Tightening with washers (H & I) and nuts (K) cap (L) as shown.

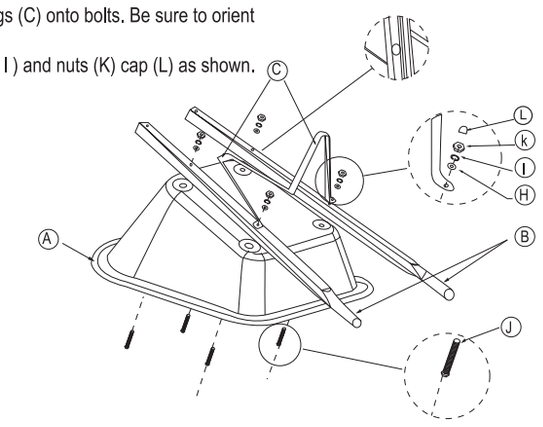

STEP 2 Insert axle (E) through wheel (D).
Slide an axle flat washer (F)onto each end of the axle.
Insert each axle pin into the axle in the appropriate hole shown in diagram

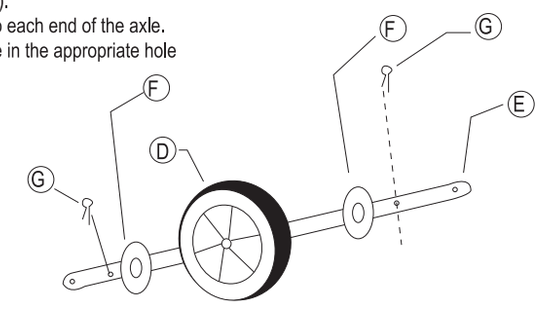

STEP 3 Assemble axle with wheel onto ends of handle.
Screw bolts (J) into handle (B) and axle (E).
Tightening washers (H & I) and nuts (K) cap (L) as shown.

