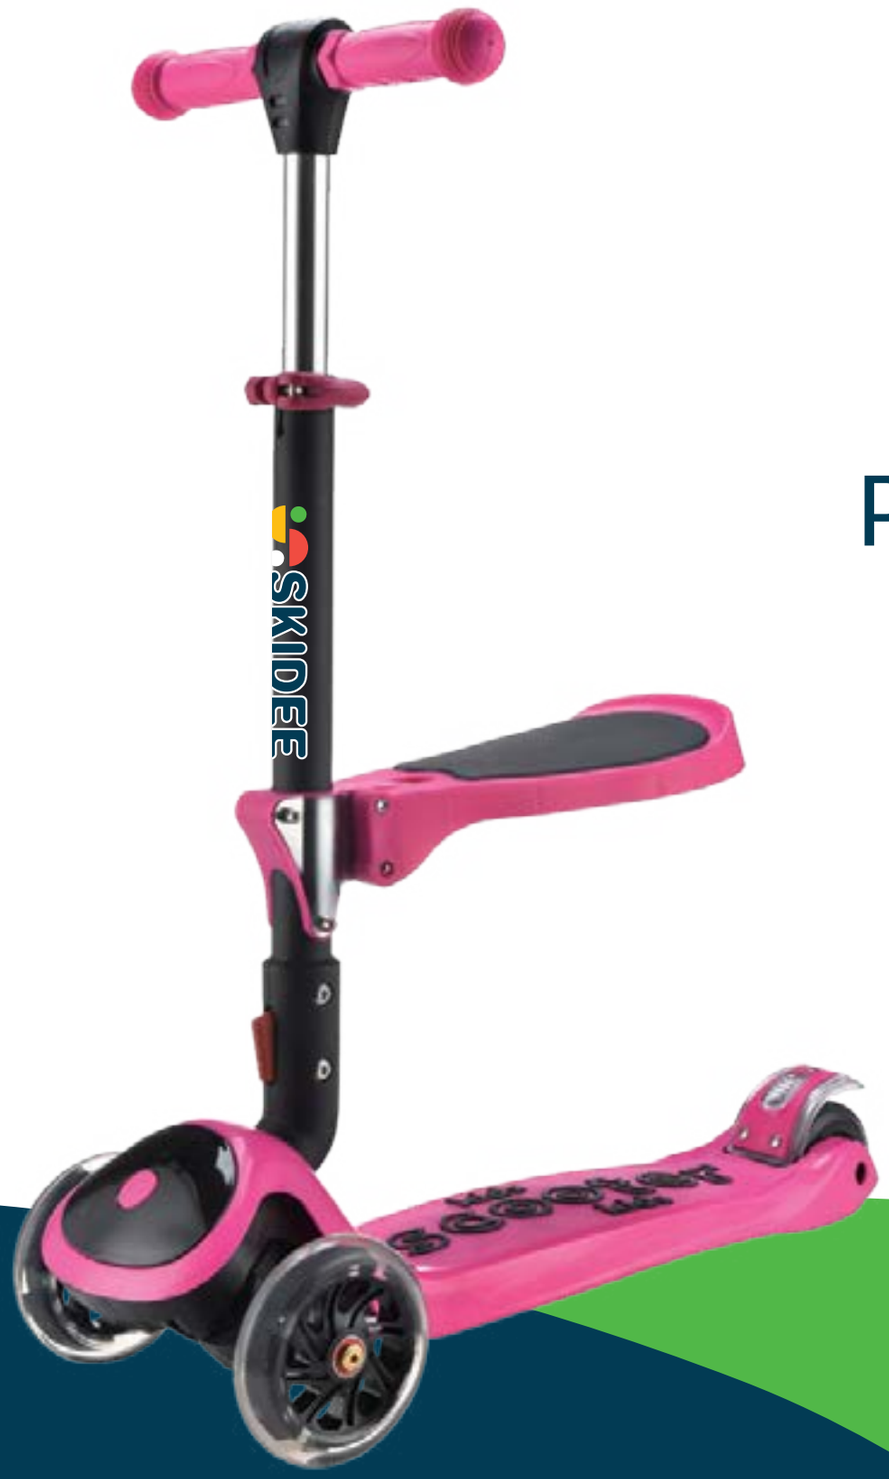

SKIDEE

PRODUCT MANUAL - Y200

Before operating this product, please read the enclosed Operating Instructions completely.

CE

Or watch the video on YouTube.com

SKIDEE

Wear protecitve gear when riding / **A**dult supervision for assembly and use

GENERAL

Dear customer,

Thank you for choosing our scooter. You can rest assured that you have acquired a high quality product. And also we offer you an excellent after-sales service.

Before you convince yourself of the unique driving experience offered by your new scooter, please read the attached instructions carefully. Please keep these instructions in a safe place so that you can refer to them in the future.

Have fun with your new scooter!

Important Instructions and Warnings

IMPORTANT: Before you allow your child to use our scooter, please read the operating safety instructions carefully, and ensure that the steering rod is fully engaged and all the screws are tight. Also ensure that the wheels have been correctly secured, and that they show no signs of wear.

IMPORTANT: Undoing the axle screws several times will reduce the effect of the screw securing product.This means that the screws may come loose by themselves. You should therefore always check the screws regularly and use the scooter after tightening the screws.

WARNING: Adult required, this product contains small parts while unassembled.

WARNING: The toy needs to be used with caution, since skill is required to avoid falls or collisions causing injury to the user or third parties.

WARNING: The wearing of helmets, protective equipment for elbows, knees, wrists and palms as well as shoes with flat rubber soles is recommended.

WARNING: Close quick-action lock securely and ensure that it is correctly positioned.

WARNING: Do not ride down slopes.

WARNING: Child must be supervised.

WARNING: Brake can become hot.

WARNING: Maximum permissible weight: 130 Lb (60 kg).

Operating Safety Instructions

- Child should practice first to gain control of the scooter. We recommend that you practice your scooter on a traffic-free car park or on open asphalt play areas.
- Ensure that your child always wears a helmet, and wrist, elbow and knee pads, as well as shoes with rubber soles.
- Ensure that your child does not attempt any experiments or risky maneuvers with it. Riding style should always be adjusted to the personal skill of the rider.
- Ensure that your child does not travel at speeds exceeding 10 mph (5 km/h).
- Ensure that your child does not ride on roads, paths or other places with motor vehicle traffic.
- Ensure that your child does not make any modifications or alterations to your scooter which would put your safety at risk.If you do, the guarantee is expired.
- Ensure that your child does not ride the scooter in the dark or at night. Only one child may ride on the scooter at any one time.
- Ensure that your child does not ride down any steep hills. The brake is not designed to decelerate from high downhill speeds. Always look ahead while you ride so that you can quickly come to a stop at any time.The brake can get hot with prolonged use. Avoid skin contact.
- The brake pad becomes hot when it is used. Make especially sure that your child does not keep the brake on for a long period of time. Explain to your child that direct skin contact may cause burns.
- The scooter must not be used on wet, oil, sandy, icy, rough or uneven surfaces. Never use the scooter in wet conditions.

- Kerbstones and cobblestone pavements affect your balance. It is better to get off. Even lowered kerbstones can knock you off balance.
- Watch out for longitudinal and transverse grooves in the asphalt! The narrow wheels may get stuck in tram rails and manhole covers for example, and lock up.
- Some metal parts may corrode after a certain time, especially when used near the sea of left outdoors to often.
- The scooter may not be used on public roads. When Riding on pedestrian walking areas, keep to the correct side according to the rules of the road as much as possible. Watch out for Pedestrians, Wheelchair users, Cyclists, Rollerblade and Animals. Always observe traffic rules and regulations.
- Load capacity is up to 130 Lb (60 kg) body weight for the scooter.
- Scooter (Model No： Y200) for 2+ year
- Always take care not to risk injuring fingers when folding and unfolding scooter.
- Explain to your child the risks of using the scooter as how to use it. Supervise your child while they are using the scooter.

HAVE FUN WITH YOUR NEW SCOOTER!

Play Instructions

Hold on to the ends of the T-Bar or Ring Bar with your hand. You steer the board through the slightest of weight displacements. To Start moving, stand with one leg (the foot approx.at 45 ° angle to the direction of travel) on the board and push yourself off using the other leg. If you stand with your right leg on the board, you can use left leg to accelerate. If you stand with your left leg on the board, you can use right leg to accelerate. After gaining momentum you stand with your legs apart on the board, so that both feet are approx.at 45 ° angle to the direction of travel. Enjoy your scooter!

WARNING! Do not attempt or do stunts, tricks or rider/roll backwards on your scooter. It is not made to withstand abuse from misuse, such as jumping, curb grinding or any other type of stunts. Racing, stunt riding or other maneuvers, such as trying to ride backwards, also enhance risk of loss of control, or may cause uncontrolled rider actions or reactions. Aggressive riding reduces your ability to maneuver and control. Take necessary precautions and practice in a safe area.

Brake

The brake is a friction brake and only designed for reduction of speed on flat surfaces-avoid going downhill. Brake at low speed by gently pushing your foot, resting far back on the board, against the back wheel plate.You need to push harder if you are traveling faster. Be careful however:if you push the brake too hard and slow down too abruptly, you risk falling.It is best to practise braking at walking speed.

Attention:The brake and protection plate can get very hot.

Model No: Y200
Age: 2+year

Handle Grip
Durable/Eco-friendly TPR

Adjustable T-Bar
26 inches to 33 inches

Stronger Plastic Collar Clamp
Use Reinforced GFK30 material instead of ALU

Handlebar\Steering Rod
Thicken ALU Tube

T-Bar Adjust Ball

Adjustable Seat
13 inches to 13.8 inches

Non-Slip Deck
Wider/More comfortable

Rear Brake
Colorful Brake With Stainless Steel

Red Push Button
Folds and unfolds scooter

Rear PU Wheel
2PCS
Non-Marking/Flash

Chassis
Reinforced GFK30
Stronger/Loading up to 130 Lb (60kgs)

Lower Mudguard
Strengthen protection of chassis

Lean to steer Mechanism
More stable, More flexible

Front PU Wheel
Non-Marking/Flash

Scooter Body
Handlebar\Steering Rod
kids scooter kids
Wrench
Allen Key
Red Push Button

Scooter Assembly

WARNING! Keep the kids in a safe distance while assembling the scooter to avoid accidental injuries.

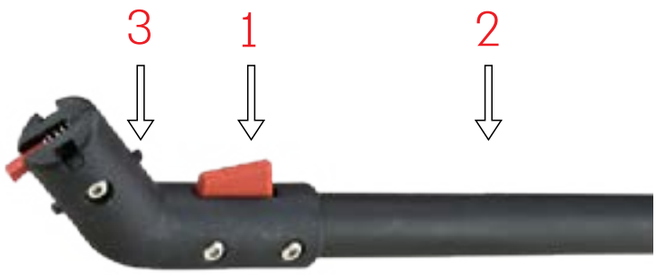

A

Red Push Button (1), Handlebar (2), Convex (3).

B

Scooter Hole (4).

C

Press Red Push Button (1), Direct the Convex (3) to the Localization gap (5), Insert the Handlebar (2) in Scooter Hole (4), Until you hear "click" sound to ensure Handlebar (2) securely locked in Scooter Body.

D

Assemlbly finished.

E

Pull the Red Push Button (1) to ensure Handlebar (2) securely locked in Scooter Body.

F

Finish the scooter Assembly and Height Adjustable.

Scooter Dis-assembly

WARNING! Keep the kids in a safe distance while dis-assembling the scooter to avoid accidental injuries.

Scooter, as shown in figure A.

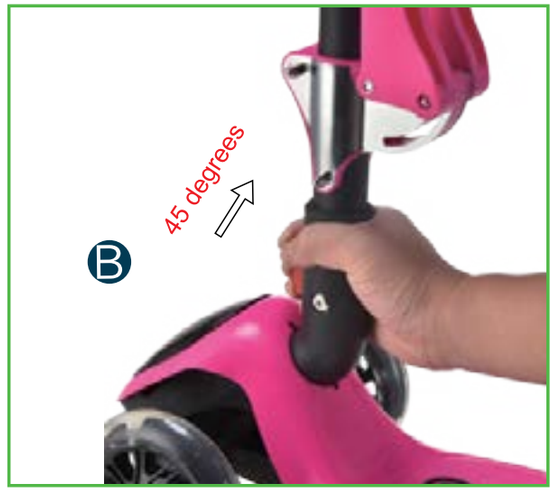

Press the Red Push Button (1) and Pull the Handlebar (2) 45 degrees upward, as shown in Figure B&C.

Rotate the handlebar (2) 90 degrees, Press red push button (1), Direct the Convex (3) to the Localization gap (5), insert the Handlebar (2) in Scooter hole (4), as shown in figure D&E. Until you hear "click" sound to ensure handlebar (2) securely locked in the scooter body.

Finish the Scooter Dis-assembly, as shown in Figure F.

Height Adjustment

WARNING! Tighten the Collar Clamp to secure T-Bar after adjustment.

Loosen the Lever of the Collar Clamp.

Use the popping ball to adjust the T-Bar according to kids height. Tighten the Collar Clamp to secure T-Bar after adjustment, as shown in Figure B.

Lowest: 26.5 inches, Second: 29.5 inches, Highest: 33 inches, as shown in Figure C.

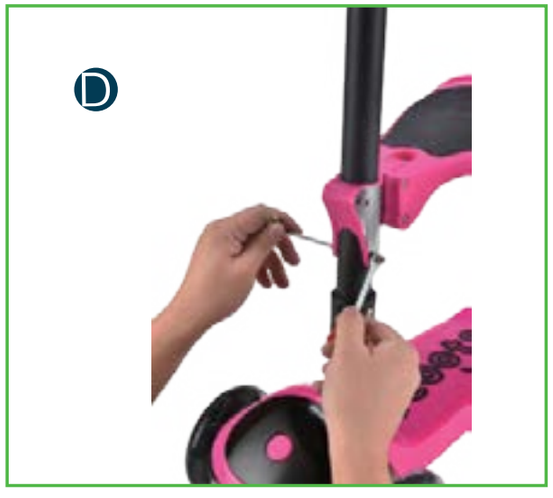

Loosen the screw, as shown in Figure D.

Take out the screw, adjust the seat height according to child's height, as shown in Figure E

Lowest: 13 inches, Highest: 13.8 inches, as shown in Figure F.

Maintenance Instructions

Change Wheel

The wheels wear down with time and can be damaged if overly used on rough surfaces. The back wheel on which the brake is applied is particularly affected after several hours of braking. In the interests of safety, they should be checked regularly and changed if necessary.

Right Wheel: Turn the Allen Key anti-clockwise to loosen the screw

Left Wheel: Turn the Allen Key clockwise to loosen the screw.

Change deck

1. Loosen the 6 screws(A) as shown on the picture(arrows).
2. Remove deck and Tighten the screw(A).
3. Put new deck in place and tighten the screws (A)
4. Check for tight fit after you have traveled about 5km with the new board.

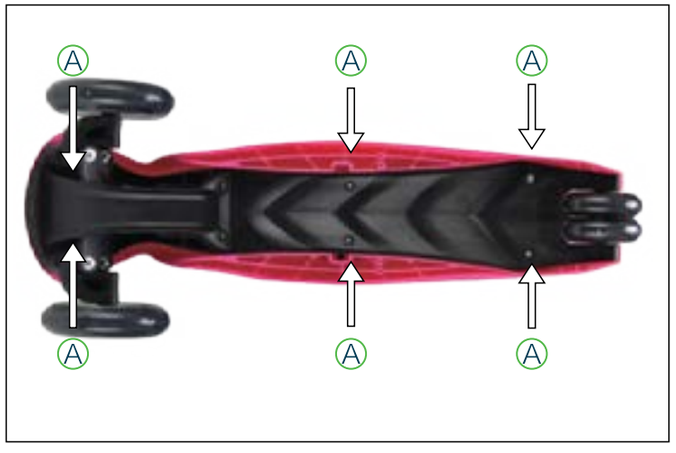

Remove or Change collar clamp

1. Loosen the 2 screws (E) and (F) as shown on the picture (arrows).
2. Pull the T-Bar all the way up till it comes out of bar to remove clamp.
3. Insert new clamp, and T-Bar back in place.
4. Tighten the screws (E) and (F).

Some more safety tips

The scooter is a new fun piece of product which is safe when used carefully and correctly. However,as with any sporting product, a small risk cannot be excluded and we recommend that you protect hand joints, elbows and knees from bumps and grazes. A helmet will also contribute to your safety. To ensure you do not slip it is best if you wear shoes with a rough sole. You should always adjust your speed according to your ability and the conditions, and when in doubt, dismount if there is a risk of unseen traffic.

Warranty Items

One year warranty covering defects in material and workmanship is provided for the scooter starting from the date of purchase. During the warranty period,we will inspect and decide if the problem has been caused by a defect in material, or work man ship, your scooter will either be repaired or replaced with an identical or equivalent scooter. If you need any help with your scooter, please directly contact us at support@skidee.net

The warranty shall not include damage caused by:

1. Improper attempts at repair or modifications the scooter.
2. External influences(eg.impact against curb stones, rails, obstacles on road, etc.)
3. Improper usage, usage for purposes other than those intended, negligent handling or normal wear and tear.

No person, seller, distributor, shall be allowed to modify or to supplement the terms and conditions of this limited warranty.

TO EXTEND YOUR WARRANTY TO 5 YEARS
SIGN UP TO OUR VIP MEMBERSHIP AT WWW.SKIDEE.NET/VIP

SKIDEE