INSTALLATION INSTRUCTIONS FOR NEST

PARTS:

















Left Panel Middle Panel

Right Panel Front Panel 1pc

Back Panel 1pc

Top Panel 1pc

Nest Bottom 2pcs















Long Perch Arm 2pcs Short Perch Bracket 2pcs

Wood Perch 1pc

Hanger Bracket 2pcs

No.1 Screws 28pcs

No.2 Screws 2pcs

5/16" Nut 30pcs

Start to assembe the Nest: Tools Needed—Screwdriver and a 5/16" socket or wrench

Step 1: Attach Panel "A" to the back panel using screws (No. 1), then the attach panels "B" and "C" the same way.



Step 2: Attach front panel to panels "A", "B" and "C" using screws (No. 1)



Step 3: Insert the 2 long perch arms from the hole of front panel and tighten them using screws (No. 1)






Step 4: Attach the short perch bracket to the long perch arms using screws (No. 1). Next, attach the wood perch using





Step 5: Insert nest bottom.

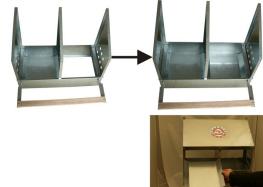

Step 6: Put on the top panel and hand tighten using screws(No.1).



Step 7: Attach 2 hanger brackets to the back of both corners

using screws (No.1).



The wood perch can be folded.