


## Instructions

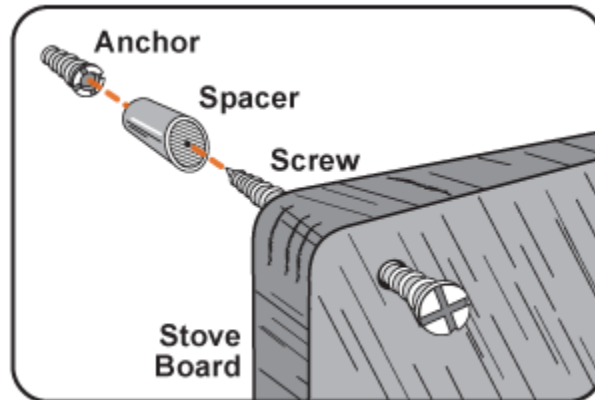

1. Support your Stove Board 1 inch above floor.  
(Rest on wood blocks or similar spacing material.)
2. Lightly work anchor holes 16" apart around perimeter of Stove Board.  
Locate one anchor in each corner. Do not place any anchors directly behind heating unit.
3. Place wall Stove Board in position and drill 1/4" holes at marked locations around perimeter of shield, drilling at least 1" into the wall at the same time.
4. Remove Stove Board and insert wall anchors into each hole.
5. Reposition Stove Board and align holes.
6. Insert screws through Stove Board, aluminum spacers and into wall anchor.  
Do all four corners first. Do not tighten screws securely until all screws are in place.
7. When all screws in place, tighten the four corner screws first, then the rest.  
Remove supports indicated in Step 1.