


# INSTALLATION

INSTALACIÓN

# QUICKFITTING<sup>®</sup>


## 1 CUT IT

CORTE

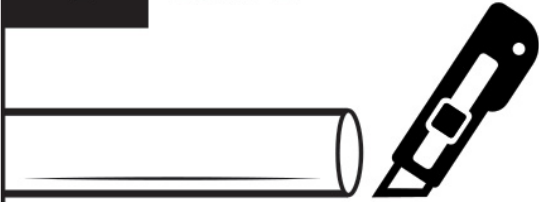

## 2 CLEAN IT

LIMPIE

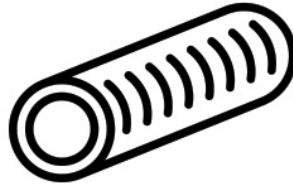


## 3 MARK IT

MARQUE



## 4 PUSH IT

EMPUJE

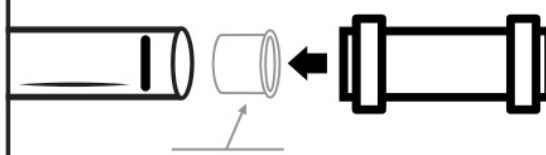

\*Use a hi-flo stiffener on PEX and PE-RT tubing only  
\*Use un refuerzo hi-flo para tubería de PEX y PE-RT

## INSERTION DEPTH

PROFUNDIDAD DE INSERCIÓN

FOR FITTINGS SIZED <b>1/4"</b>	➔	MARK AT <b>3/4"</b>
FOR FITTINGS SIZED <b>3/8"</b>	➔	MARK AT <b>3/4"</b>
FOR FITTINGS SIZED <b>1/2"</b>	➔	MARK AT <b>1"</b>
FOR FITTINGS SIZED <b>3/4"</b>	➔	MARK AT <b>1-3/16"</b>
FOR FITTINGS SIZED <b>1"</b>	➔	MARK AT <b>1-3/16"</b>
FOR FITTINGS SIZED <b>1-1/4"</b>	➔	MARK AT <b>1-7/8"</b>
FOR FITTINGS SIZED <b>1-1/2"</b>	➔	MARK AT <b>2-1/8"</b>
FOR FITTINGS SIZED <b>2"</b>	➔	MARK AT <b>2-3/16"</b>

## REMOVAL/RETIRAR

Slip Clip™  
Herramienta de eliminación de clip deslizante

