

# INSTALLATION

INSTALACIÓN

# QUICKFITTING®


## 1 CUT IT

CORTE



## 2 CLEAN IT

LIMPIE

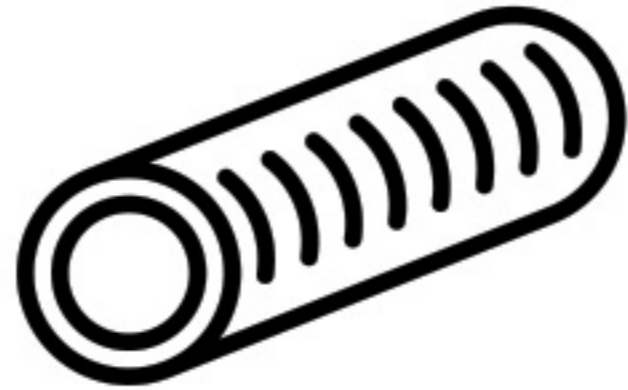


## 3 MARK IT

MARQUE



## 4 PUSH IT

EMPUJE

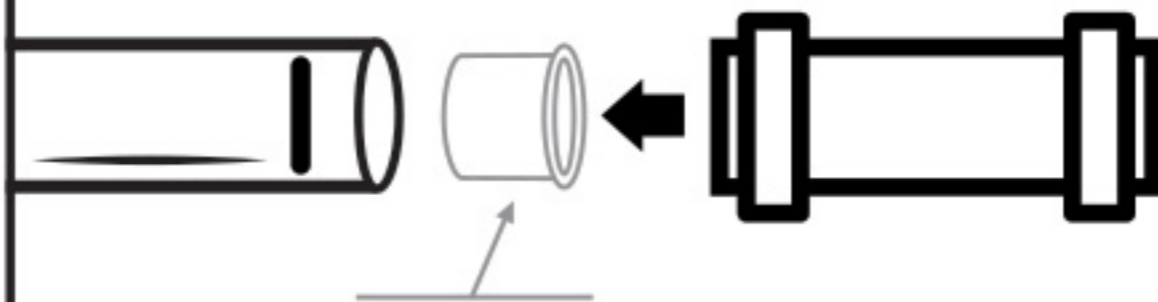

\*Use a hi-flo stiffener on PEX tubing only  
\*Use un refuerzo hi-flo para tubería de PEX

## INSERTION DEPTH

PROFUNDIDAD DE INSERCIÓN

FOR FITTINGS SIZED  $1/4"$  → MARK AT  $3/4"$

FOR FITTINGS SIZED  $3/8"$  → MARK AT  $3/4"$

FOR FITTINGS SIZED  $1/2"$  → MARK AT  $1"$

FOR FITTINGS SIZED  $3/4"$  → MARK AT  $1-3/16"$

FOR FITTINGS SIZED  $1"$  → MARK AT  $1-1/4"$

FOR FITTINGS SIZED  $1-1/4"$  → MARK AT  $1-7/8"$

FOR FITTINGS SIZED  $1-1/2"$  → MARK AT  $2-1/8"$

FOR FITTINGS SIZED  $2"$  → MARK AT  $2-3/16"$

## REMOVAL/RETIRAR

Slip Clip™  
Herramienta  
de eliminación  
de clip  
deslizante

