

INSTRUCTIONS

For EXRP19 Pole and the S&K Great Eight Martin House

G8

121 14v1

S&K


MANUFACTURING, INC

You Must
Read all the Instructions
before starting the
Assembly


STOP!
Before You Assemble
This House You Must
Have the EXRP19 Pole
by S&K MFG Inc

- Step 1. Purchase The EXRP19 Pole by S&K Mfg. Inc.
A Strong Heavy Gauge Galvanized Steel Pole
- Step 2. Receive your EXRP19
- Step 3. Remove the Topper & Rope out of the
EXRP19 Pole Box

Remove the Roof from the bird house box. Turn the Roof inside out so that the shingle design is on the outside. The hole in the roof will be covered by the Topper (included with the EXRP19) when installed on the EXRP19 Pole. (pole sold separately)

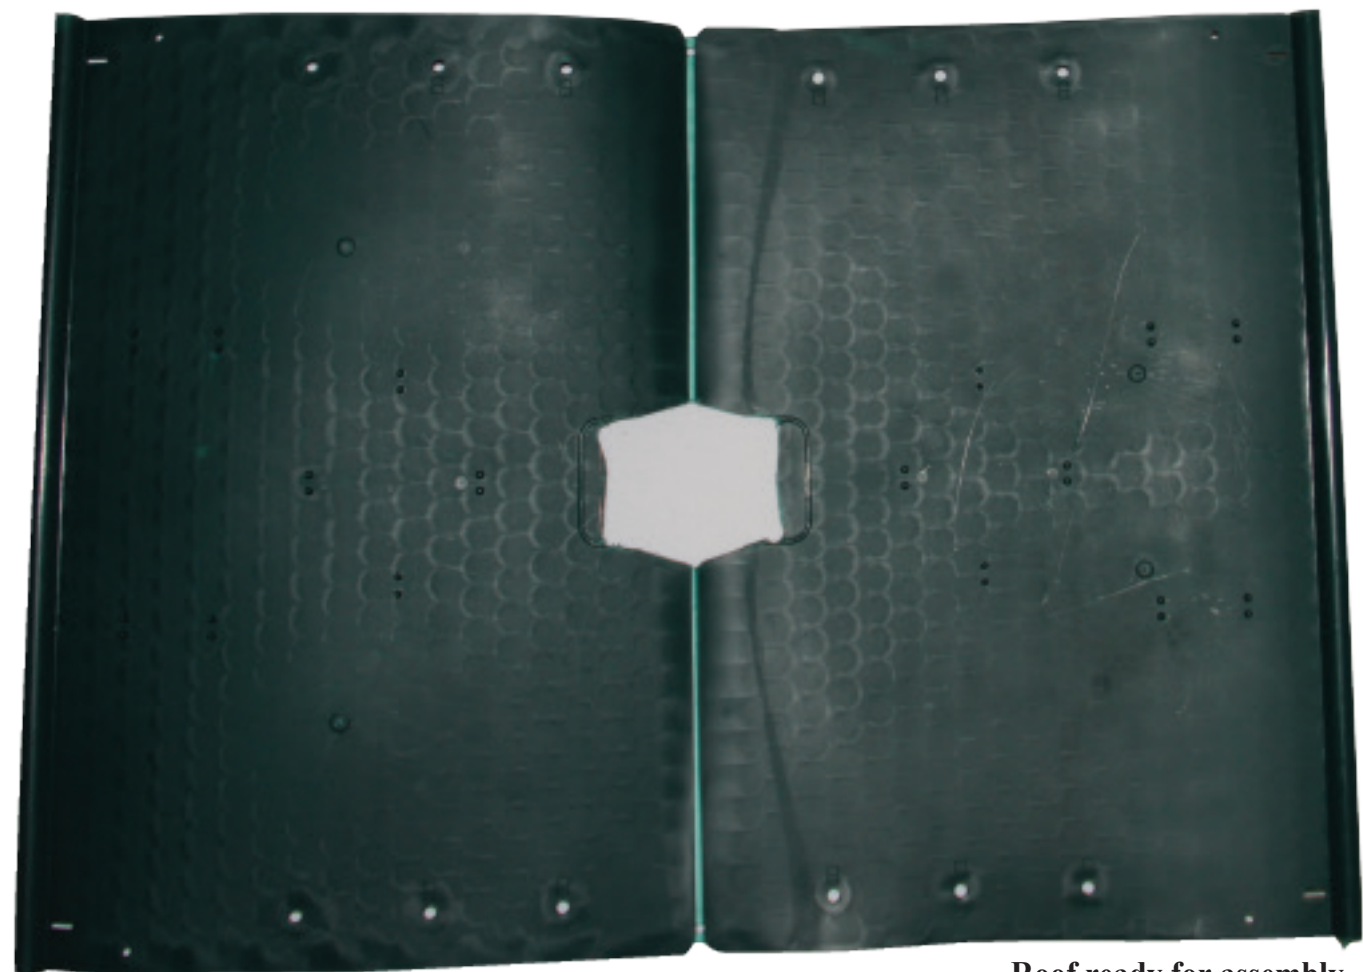

Roof ready for assembly

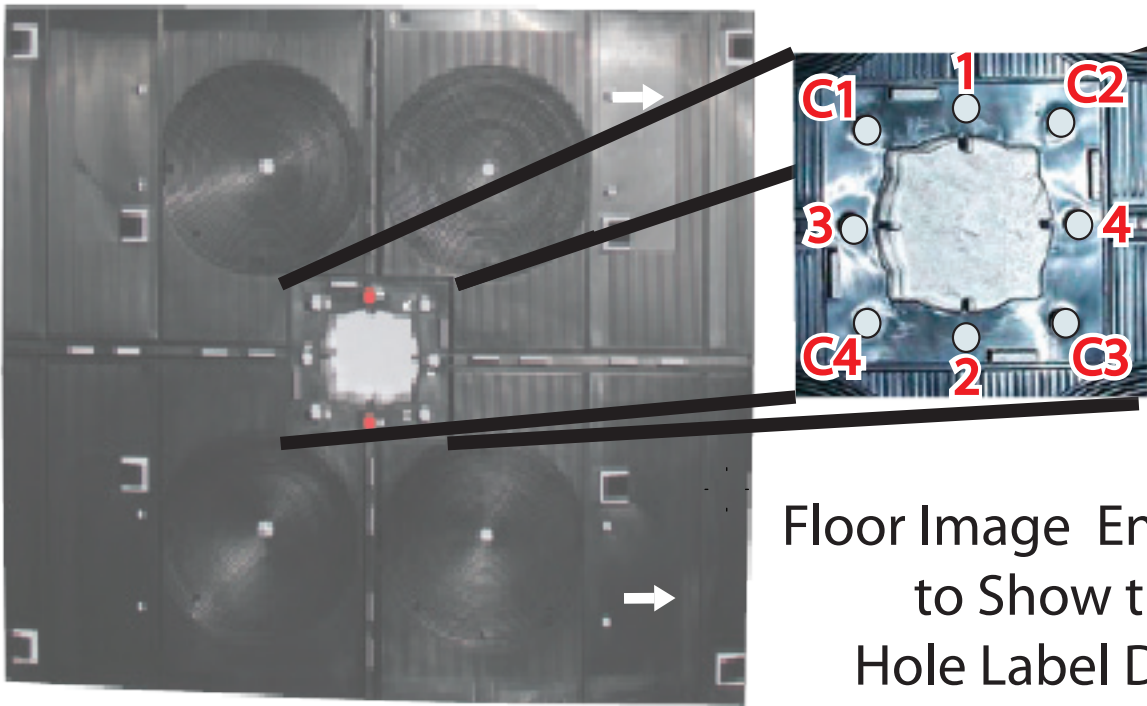

Floor Image Enhanced to Show the Hole Label Detail. Only Hole 1 & 2 are used on this model




PACKED IN MISSOURI

www.skmfg.com

1-800-764-8688


Step 5. Feed the Rope Through the Topper

Pull one end of the rope through pole topper (Fig. 1). Keep rope tangle free. Take the two ends of the rope and put them through the roof top opening (Fig. 2). Then continue through the attic floor (Fig. 3). Ensure the two floor sections face in the same direction. Run one end of the rope through Hole (1) on the 2nd floor (Fig. 4a) and the other end of the other rope through hole (2). The ends of the rope MUST go through the same Holes on the 1st floor (Fig. 4b) as they did on the 2nd floor (Fig. 4a), separate the ropes and make sure they are not tangled. Take the rope from hole (1) on the 2nd floor (Fig. 4a) and insert it into Hole (1) of the 1st floor (Fig. 4b). Now take the rope hole (2) from the 2nd floor (Fig. 4a) and insert it into hole (2) of the 1st floor (Fig. 4b). Ensure plenty of rope has been pulled through each hole. Then separate the two floors. Tie the two ends of rope with a loose double knots below the bottom floor (Fig. 5). This way the rope will not pull back through the floors during the rest of the assembly process.

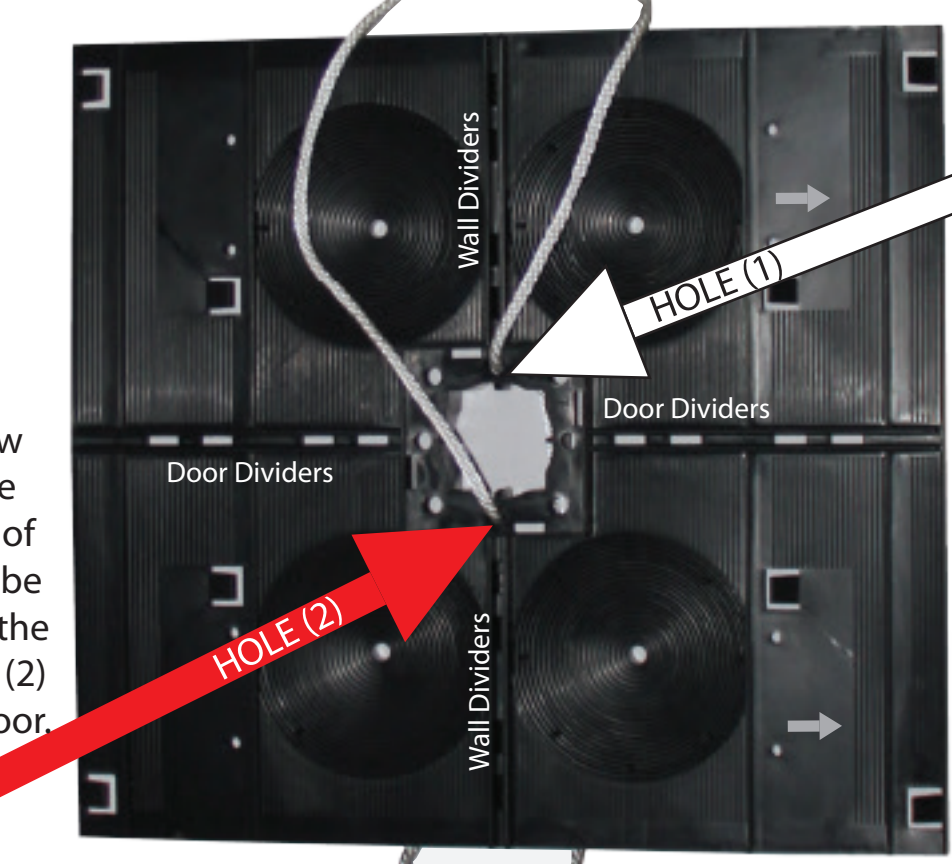

Red Arrow shows the same side of rope must be going into the same hole (2) on each floor.

White Arrow shows the same side of rope must be going into the same hole (1) on each floor.

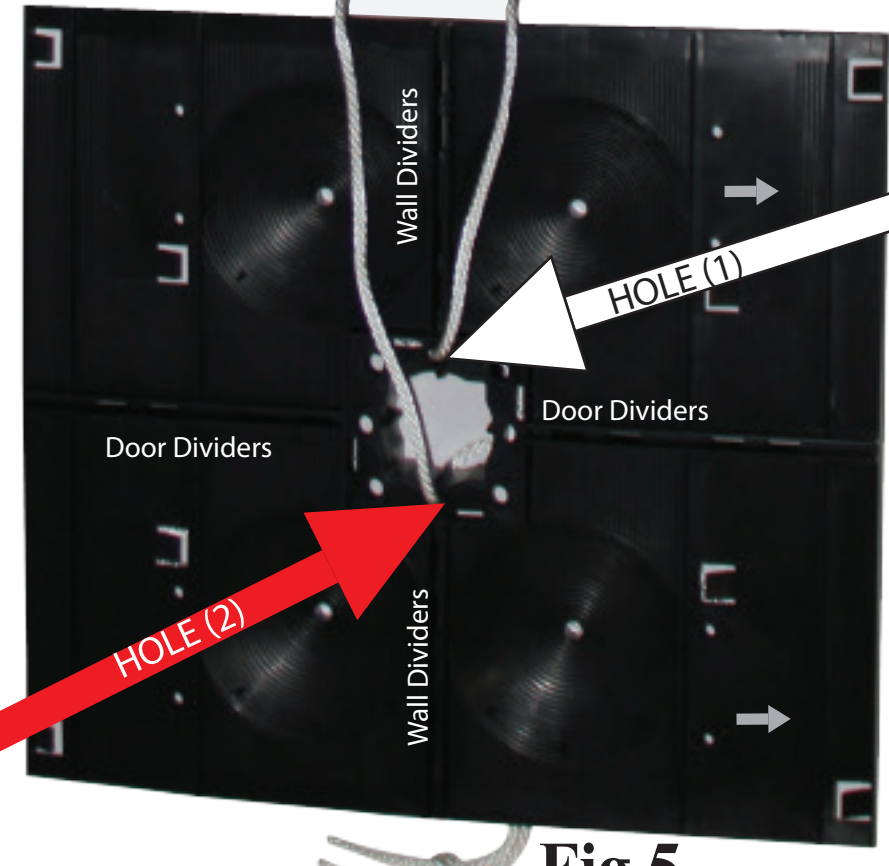

Red Arrow shows the same side of rope must be going into the same hole (2) on each floor.

White Arrow shows the same side of rope must be going into the same hole (1) on each floor.

Fig 5. Image showing the rope tied with a loose double knot below the bottom floor.

• 2 Pillar Dividers




Special Note: The ropes must be inside the pillar. Wrap the Pillar around the Ropes

• Pillar folded Together

Step 6: Fold the Pillar into a square, they lock in place. NOTE: The "UP" arrow goes on the OUTSIDE of the Pillar.

Step 7: The Pillar has tabs that will snap into the center section of both floors.

Step 8: Insert the tabs into the corresponding holes in the floor until they lock into place.

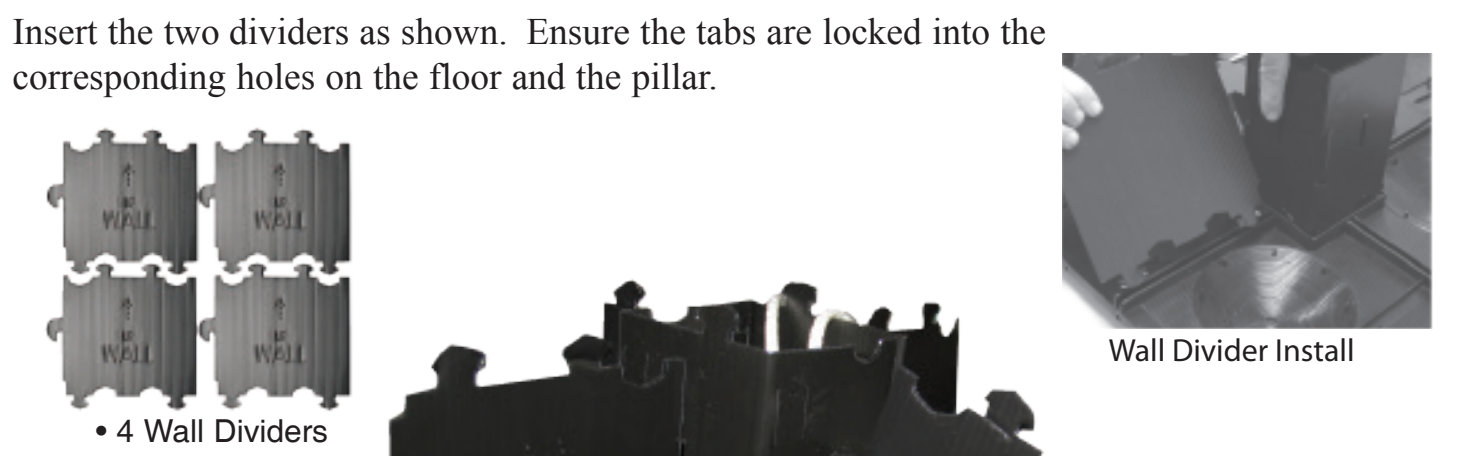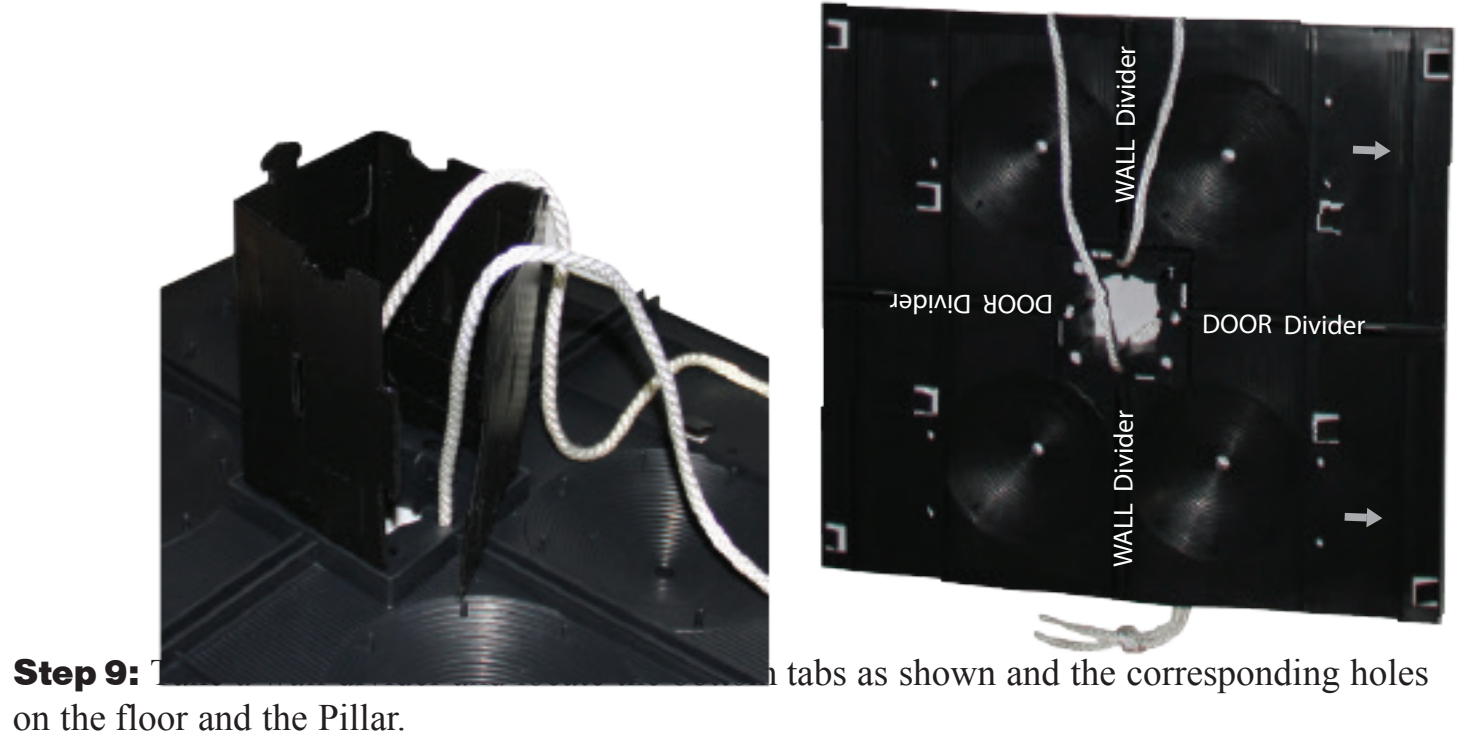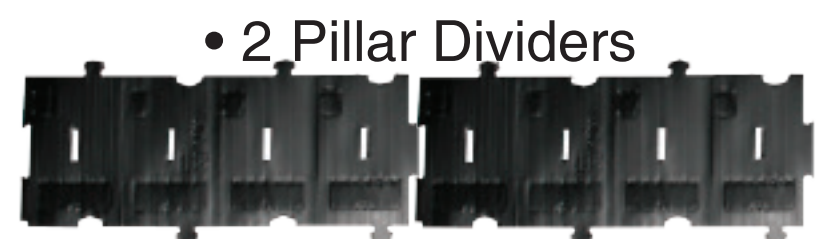


Step 10: The door dividers will snap into the entrance side of the floor. (NOTE the tabs and the arrows in the floor indicate the entrances of the house.)

Remove the Right Side of Door Divider with Scissors.

Before After

• 4 Door Dividers

Separate the door dividers at the perforation. Note: The side with the "UP" mark is for Step 10. The right side may be saved to become a porch divider, if desired.

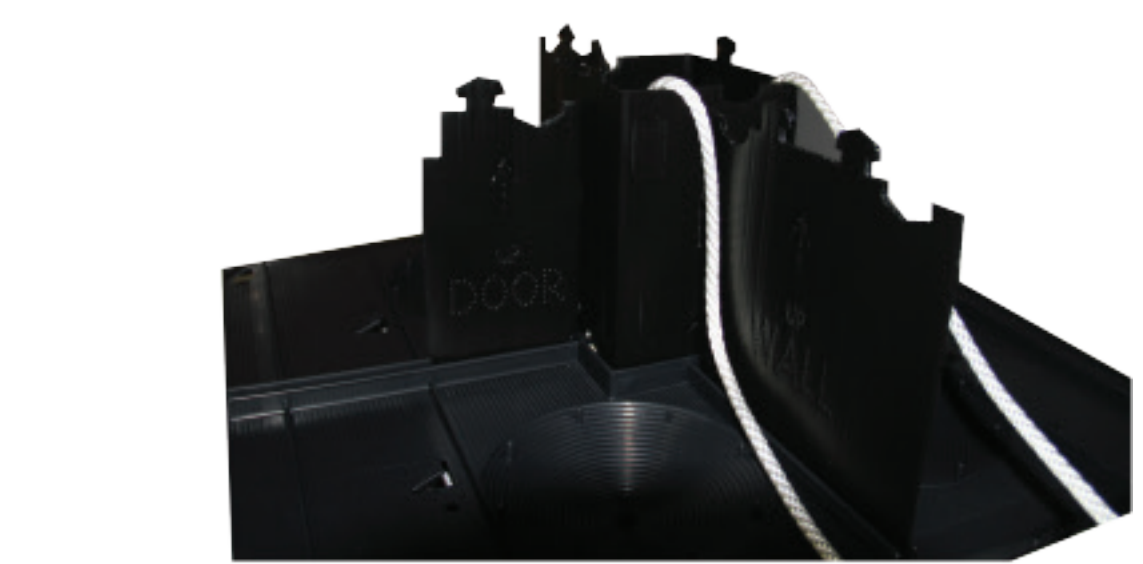

Step 11: Place the second floor a top the dividers. Be sure the floors are turned in the same direction. Push the tabs of the standing dividers into the corresponding holes. Insert the second Pillar (around ropes as in step 1) add dividers on the second floor exactly as the first floor (Steps 6-10).



Step 12: The attic floor fits over the top Pillar, and allows the corresponding tabs from the dividers on the second floor to be pushed in place on the attic floor.

NOTE: If the House appears WARPED at this point, do not worry. It will straighten during the following steps.




Step 13: Turn house on its side. Take one house side with the textured side facing out and place it on the side of the house. Line up the holes on the house wall with the corresponding holes in the floors of the house.


WARNING: YOU MUST LINE UP THE HOLES BEFORE INSERTING THE WHITE SNAPS.

Step 14: Be sure the corresponding holes in the side walls and the floors are lined up before inserting snaps.(Shown in the next step). The smaller holes are where the perches are (perches sold separately) to be inserted.


Step 15: Ten snaps go into each side of the house. Be sure to push the snaps in all the way. Do the same as explained in steps 13, 14, and 15 on the opposite side wall.

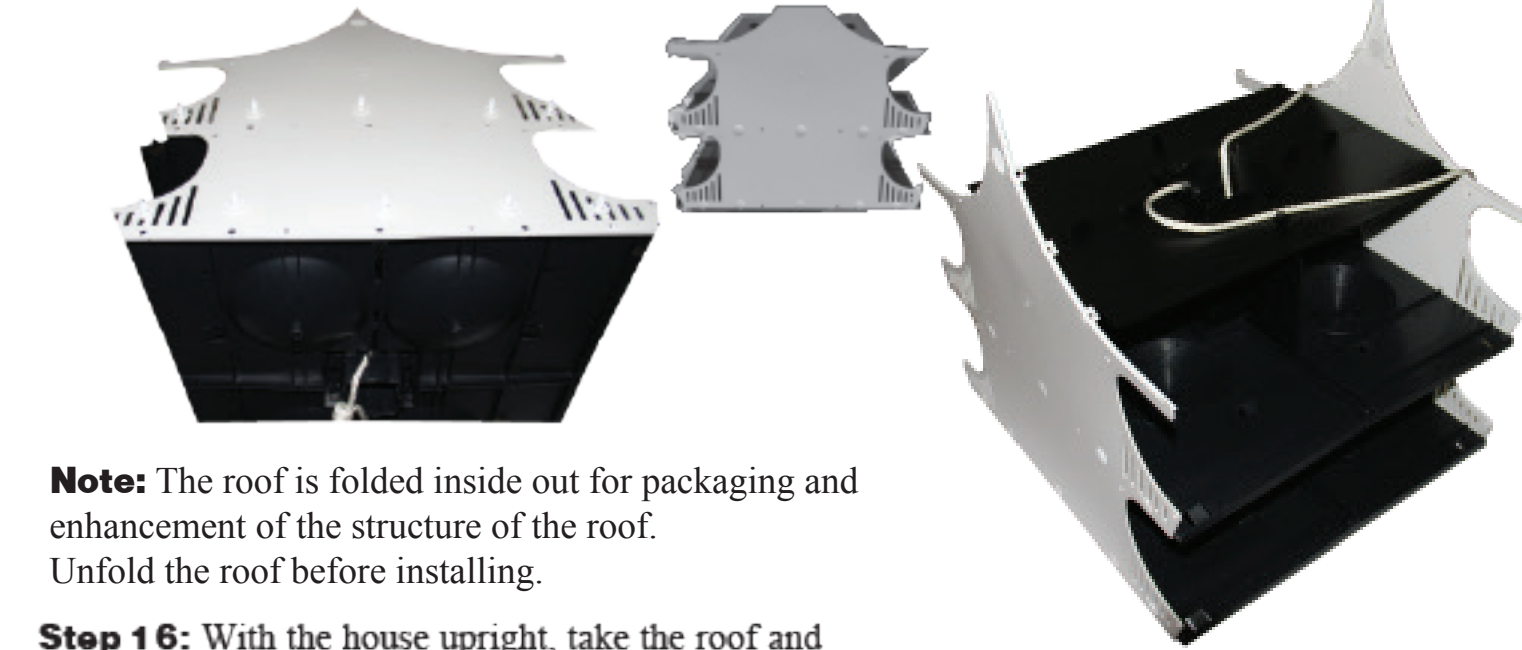

Step 16: With the house upright, take the roof and place it over the house. At each corner of the roof, you will find an alignment hole that corresponds with a slide tab. Push the small tab through the pre-cut hole to attach the corner of the roof (all 4 corners) and slide into place.

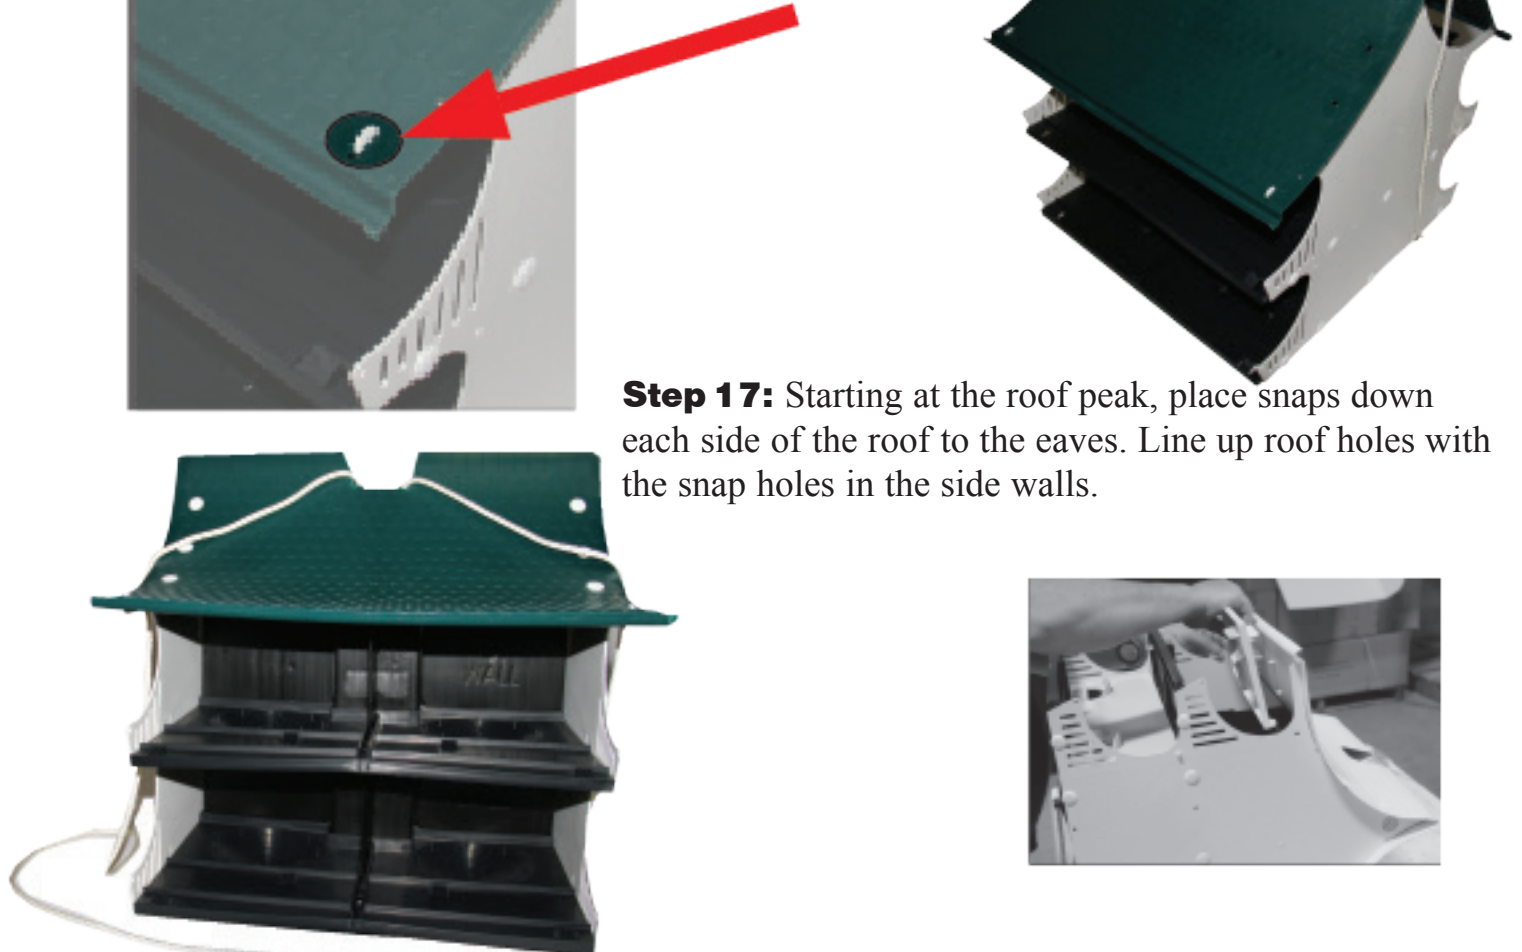

Step 17: Starting at the roof peak, place snaps down each side of the roof to the eaves. Line up roof holes with the snap holes in the side walls.

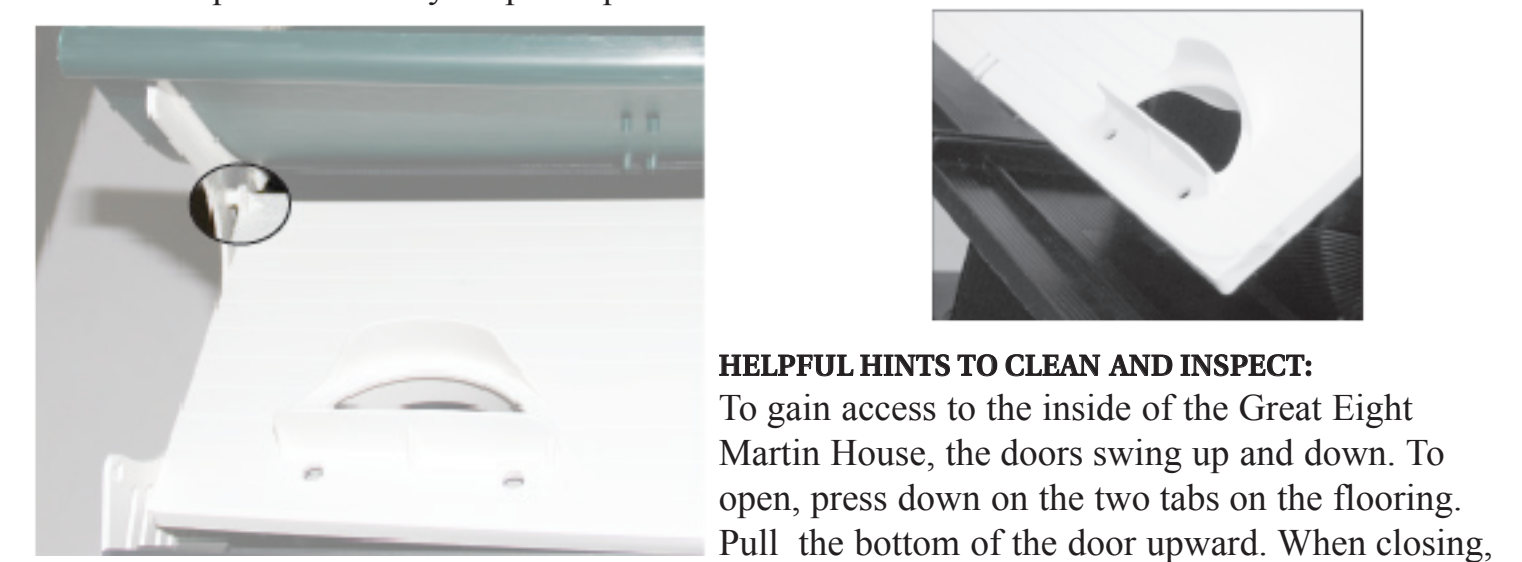

HELPFUL HINTS TO CLEAN AND INSPECT:
To gain access to the inside of the Great Eight Martin House, the doors swing up and down. To open, press down on the two tabs on the flooring. Pull the bottom of the door upward. When closing, close door until the floor tabs click into place.

You Have Finished The Assembly of the Great Eight Martin House for the EXRP19
See Pole instructions for Assembly of pole and mounting of House.