



INSTRUCTIONS


HAY HOOPS INSTALLATION




With tube (A) at the top, mount the base plate (B) to a flat, permanent wooden surface by placing a screw through the center hole.




Once mounted, use a level to check that the base plate is straight.

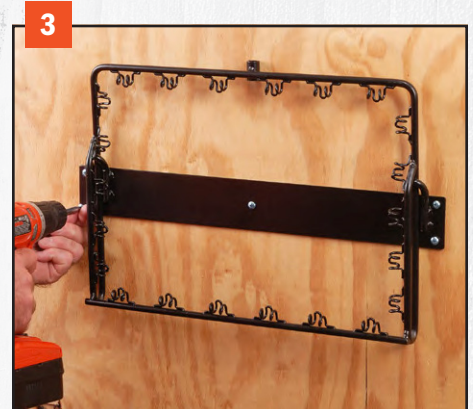

Once made level, place screws in the remaining four corner holes of the base plate (B).

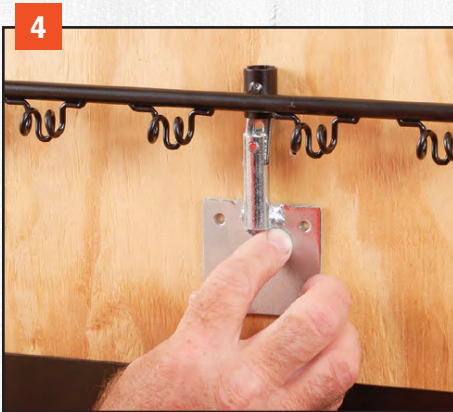

Align locking mechanism directly below the tube at the top of the HayHoops™ rim.

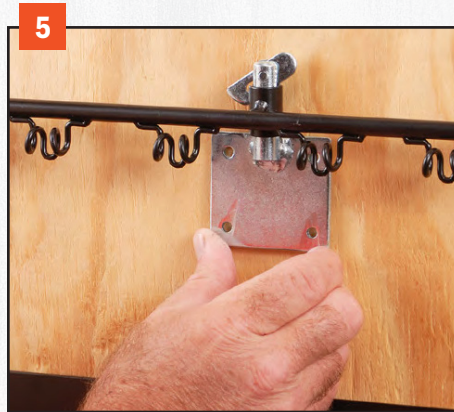

Slide the locking mechanism up into the tube until the frame and locking mechanism are locked together.



With the locking mechanism in place, attach it to the surface with the remaining four screws.

The Hay Hoops™ rack must be mounted so the net, when empty, is at least 12" off of the ground. Only hay nets with openings less than 2" should be used with the Hay Hoops™ rack.

