

## BIOMETRIC SAFE WALL & FLOOR MOUNTING



Keep your valuables from the wrong hands with the Barska Biometric Safe. The safe opens at the touch of a finger but only yours. Fingerprint control can store up to 30 permanent or temporary users, allowing you to control of who can access safe. The compact design makes it easy to hide nearly anywhere. Weight of safe is 31 pounds.

### NOTE

When selecting a place for the safe please keep in mind

- Safe must be supported beneath by a shelf and/or floor.
- The door of the safe must be able to swing open at least 85°.
- For added security, purchase 3½ wood screws at your local hardware store. When using alternate screws, adjust mounting instructions accordingly.
- Metallic anchors supplied may not reach wall stud.
- These instructions are meant to keep safe in place, and will not deter theft.

### SETUP

#### Tools Needed


- 1x – Drill
- 1x – 15/32" Drill Bit
- 1x – 15/32" Socket Wrench

#### Parts Included

- 1x – Allen Wrench
- 2x – Emergency Keys
- 2x – Flat Washers
- 2x – Metallic Anchors


### WALL MOUNTING

1. Two of the three mounting holes in the rear of the safe will be used to fasten the safe to the wall.

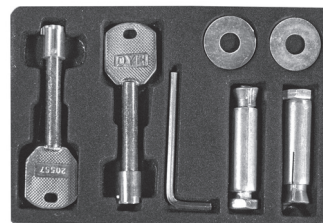


2. Place the safe into position, with the door of the safe open, mark mounting holes 1 and 2 on the rear wall from inside the safe. Set safe aside.

Back of Safe

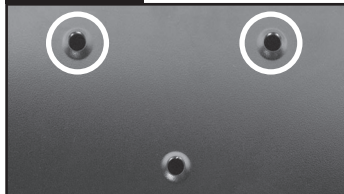


3. According to the marks, drill two 15/32" holes.
4. Disassemble one metallic anchor. Fit the nut into the grooved end of the shaft. See diagram A. below. Insert this assembled piece into wall hole. Repeat this step with the other metallic anchor and into the other hole.
5. Set safe into place, aligning the holes of the safe to the holes of the wall.
6. Open safe and from the inside of the safe insert washer into screw. Slide this piece into the shaft. See diagram B. below.
7. Tighten the metallic anchors using the 15/32" socket wrench.
8. Close safe.

### Metallic Anchor

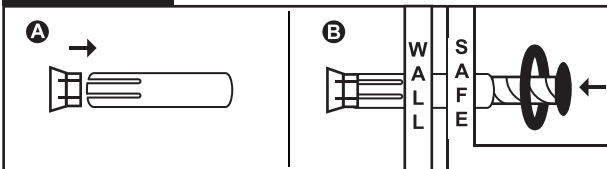

### Diagram of Wall Mounted Safe

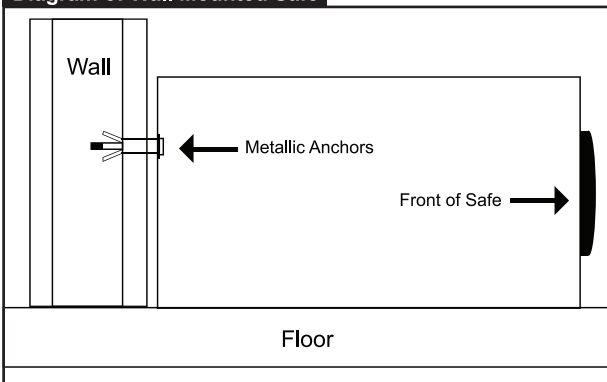


### FLOOR MOUNTING

#### Under Side of Safe



1. One of the mounting holes in the bottom of the safe will be used to fasten safe to the floor.
2. Pull back any carpet off the floor. Place the safe into position, remove liner from safe and with the door of the safe open, mark the hole on the bottom of the safe from the inside. Note: The safe can be mounted to the floor directly on top of the existing carpet, but may not be as secure. Set safe aside.
3. According to the mark, drill a 15/32" hole into the floor.
4. Disassemble metallic anchor. Fit the nut into the grooved end of the shaft. See Diagram A. Insert this assembled piece into the hole in the floor.

### Metallic Anchor

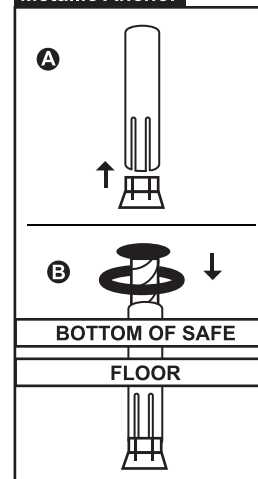

5. Set safe into position aligning the hole of the safe to the hole of the floor.
6. Open safe. From the inside of the safe insert washer into screw. Slide this piece into the shaft. Diagram B.
7. Tighten the metallic anchor using the 15/32" socket wrench.
8. Replace liner and close safe.

### Diagram of Floor Mounted Safe

