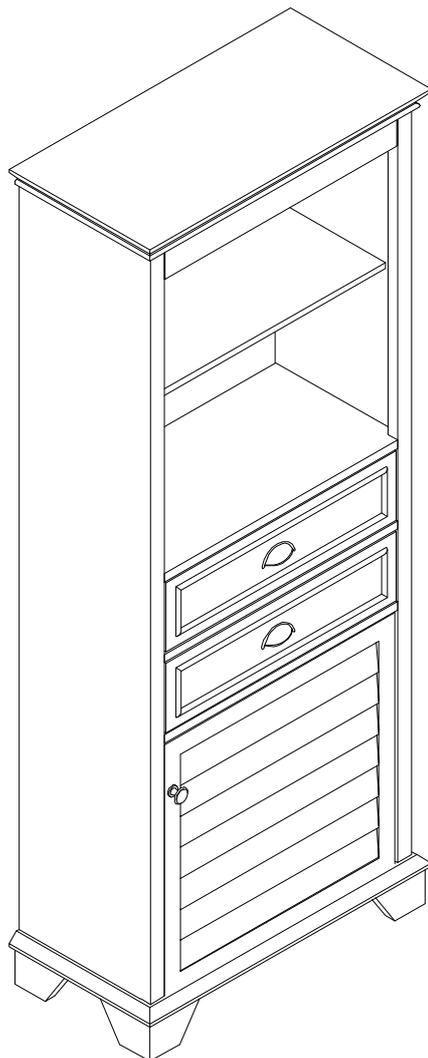





















# Tall Bathroom Cabinet







## CF7001



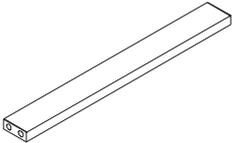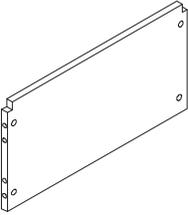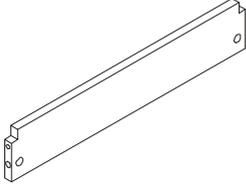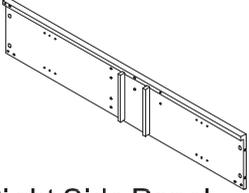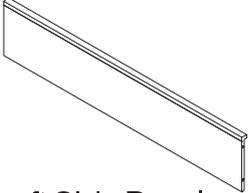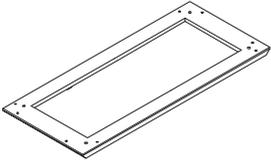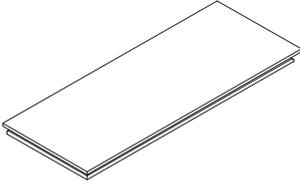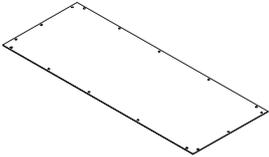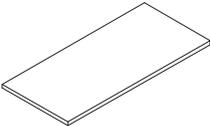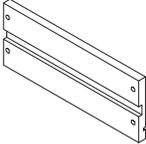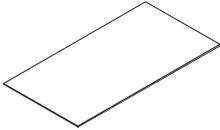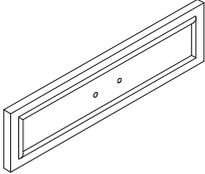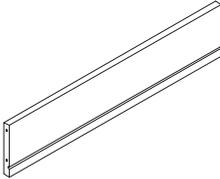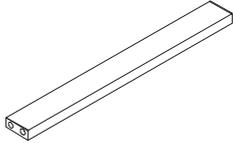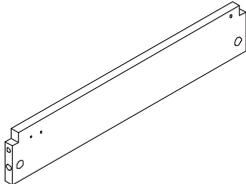
# PART LIST

 <p>Front Top Rail</p>	 <p>Fixed Shelf</p>	 <p>Upper Rail</p>
<p>1      1pc</p>	<p>2      1pc</p>	<p>3      1pc</p>
 <p>Right Side Panel</p>	 <p>Left Side Panel</p>	 <p>Bottom Panel</p>
<p>4      1pc</p>	<p>5      1pc</p>	<p>6      1pc</p>
 <p>Leg</p>	 <p>Top Panel</p>	 <p>Back panel</p>
<p>7      4pcs</p>	<p>8      1pc</p>	<p>9      1pc</p>
 <p>Adjustable shelf</p>	 <p>Drawer Side Panel</p>	 <p>Drawer Bottom Panel</p>
<p>10      2pcs</p>	<p>11      4pcs</p>	<p>12      2pcs</p>
 <p>Drawer Front Panel</p>	 <p>Drawer Back Panel</p>	 <p>Back rail</p>
<p>13      2pcs</p>	<p>14      2pcs</p>	<p>15      2pcs</p>
 <p>Door</p>	 <p>Nether Rail</p>	
<p>16      1pc</p>	<p>17      1pc</p>	

# HARDWARE LIST

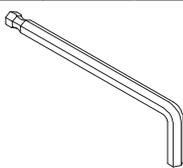
	Cam Lock Ø15*12mm		Cam Bolt Ø6*42mm		Wood Dowel Ø8*30mm
<b>A</b>	<b>18pcs</b>	<b>B</b>	<b>18pcs</b>	<b>C</b>	<b>30pcs</b>
	Barrel Nut Ø6*12mm		Long Bolt Ø6*50mm		Short Bolt Ø6*28mm
<b>D</b>	<b>4pcs</b>	<b>E</b>	<b>4pcs</b>	<b>F</b>	<b>4pcs</b>
	Screw Ø3*15mm		Shelf Support Ø6.5mm		Long Screw Ø3.5*25mm
<b>G</b>	<b>28pcs</b>	<b>H</b>	<b>8pcs</b>	<b>I</b>	<b>16pcs</b>
	Handle L85*W30*H27		Short Round Head Bolt Ø5/32"*12mm		Magnet L45*H12mm
<b>J</b>	<b>2pcs</b>	<b>K</b>	<b>4pcs</b>	<b>L</b>	<b>1pc</b>
	Knob Ø29*27mm		Long Round Head Bolt Ø5/32"*19mm		Safety Strap Kit
<b>M</b>	<b>1pc</b>	<b>N</b>	<b>1pc</b>	<b>O</b>	<b>1Set</b>
	Allen Key 4mm		Drawer Stopper Ø29*27mm		Short Screw Ø3*12mm
<b>P</b>	<b>1pc</b>	<b>Q</b>	<b>2pcs</b>	<b>R</b>	<b>2pcs</b>

## EXTRA HARDWARE LIST

 <b>A X 2</b>	 <b>C X 2</b>	 <b>G X 2</b>
 <b>B X 2</b>	 <b>F X 1</b>	 <b>I X 2</b>


## ADDITIONAL TOOLS ( Not Provided)

**Note:** It is not recommended to use power tools during assembly. You may use power tools to assist in mounting the safety strap kit to the wall.




Phillips Head Screw Driver

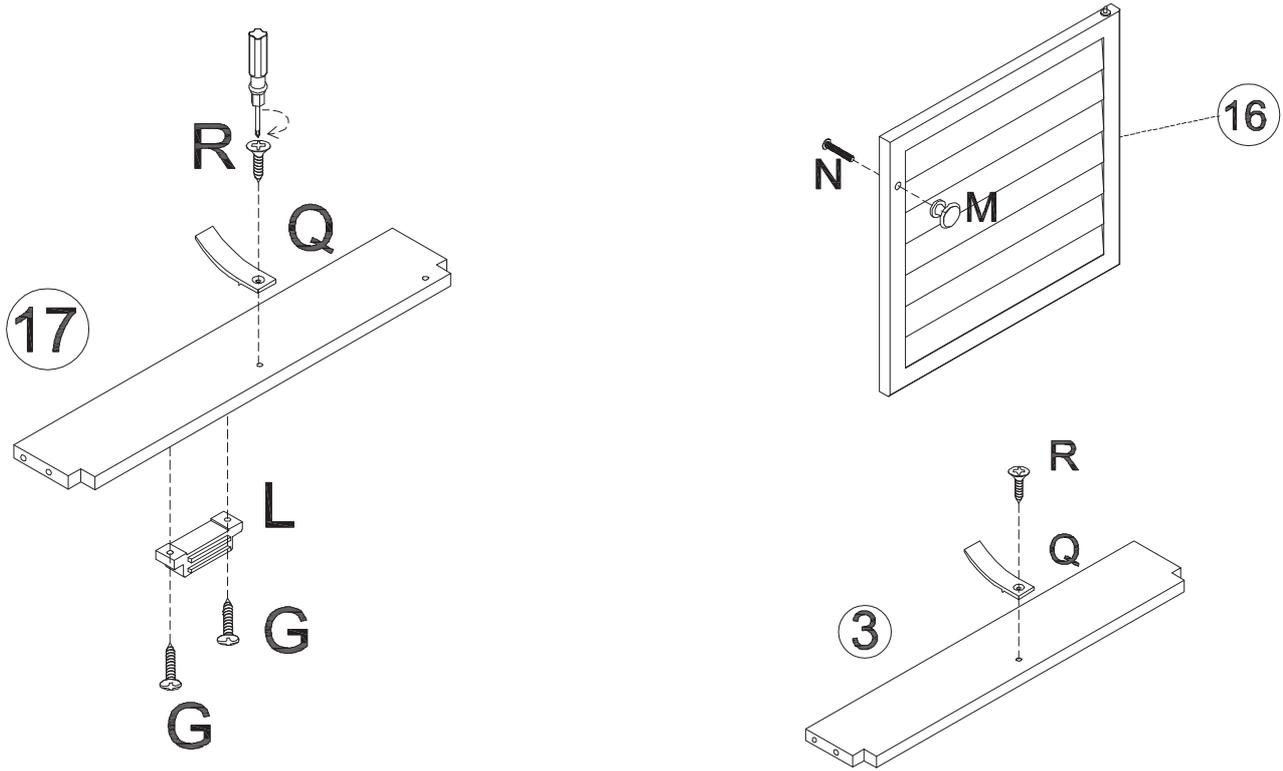**Step 1.** Attach Drawer Stopper (Q) and Magnet (L) to Nether Rail (17) using Short Screw (R) and Screw (G) . Attach Drawer Stopper (Q) to Upper Rail (3) using Short Screw (R) . Attach Knob (M) to Door (16) using Round Head Bolt (N) .



N x 1	M x 1	G x 2	L x 1	R x 2	Q x 2

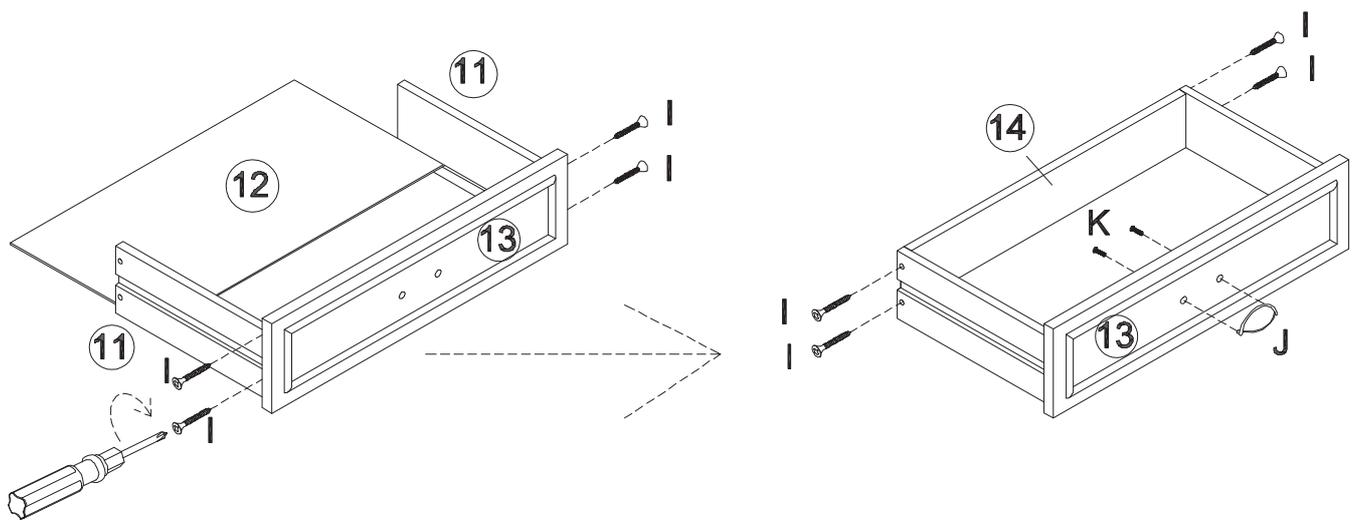
**Step 2.** Set Drawer Front Panel (13), Drawer Side Panels (11) , Drawer Bottom Panel (12) and Drawer Back Panel (14) into place using Long Screw (I) . Attach Handle(J) to Drawer Front Panel (13) using Short Round head bolt (K) . Repeat for second drawer .



I x 16	K x 4	J x 2

**Step 3.** Attach Cam Bolt (B) to Side Panels (4 & 5) and Top Panel (8) as shown.

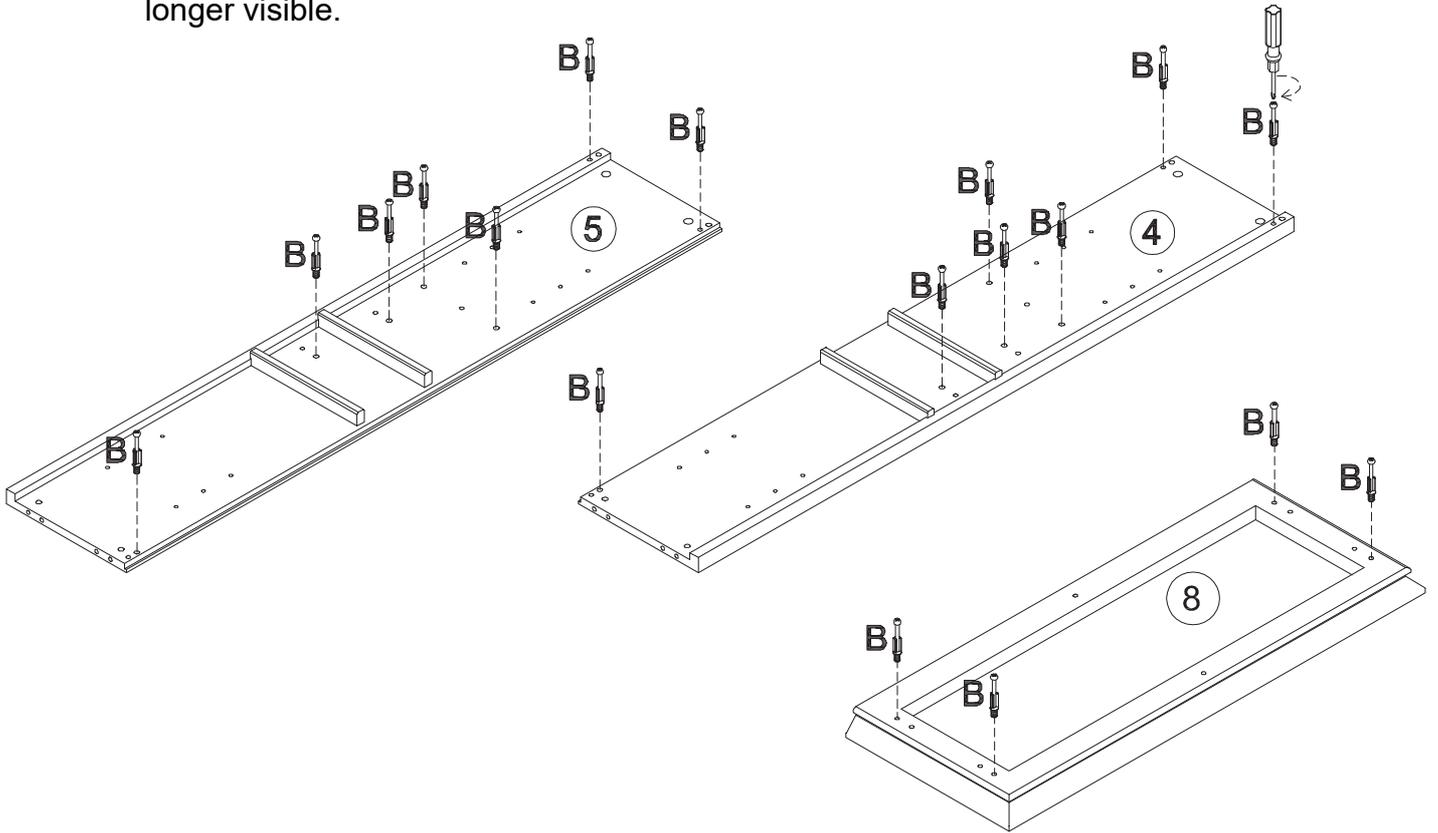NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




B x 18

**Step 4.** Attach Front Top Rail (1) , Fixed Shelf (2) ,Upper Rail (3), Nether Rail (17) and Back Rail (15) to Right Side Panel (4) using Wood Dowel (C) and Cam lock (A) .

Set Left Side Panel (5) in to place using Wood Dowel (C) and Cam lock (A) . See image inserts to the right for proper cam lock installation .

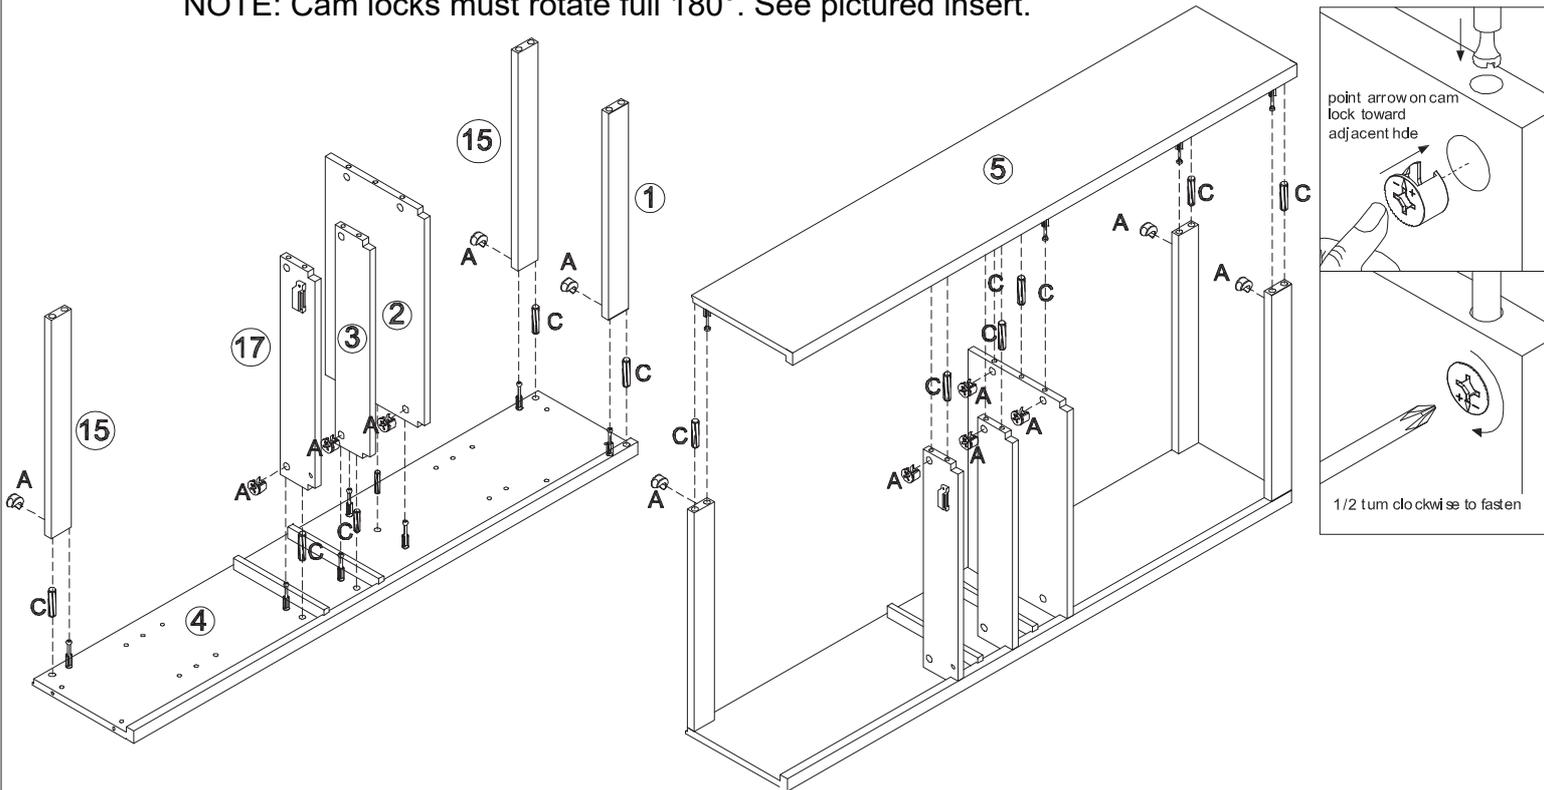NOTE: Cam locks must rotate full 180°. See pictured insert.



5

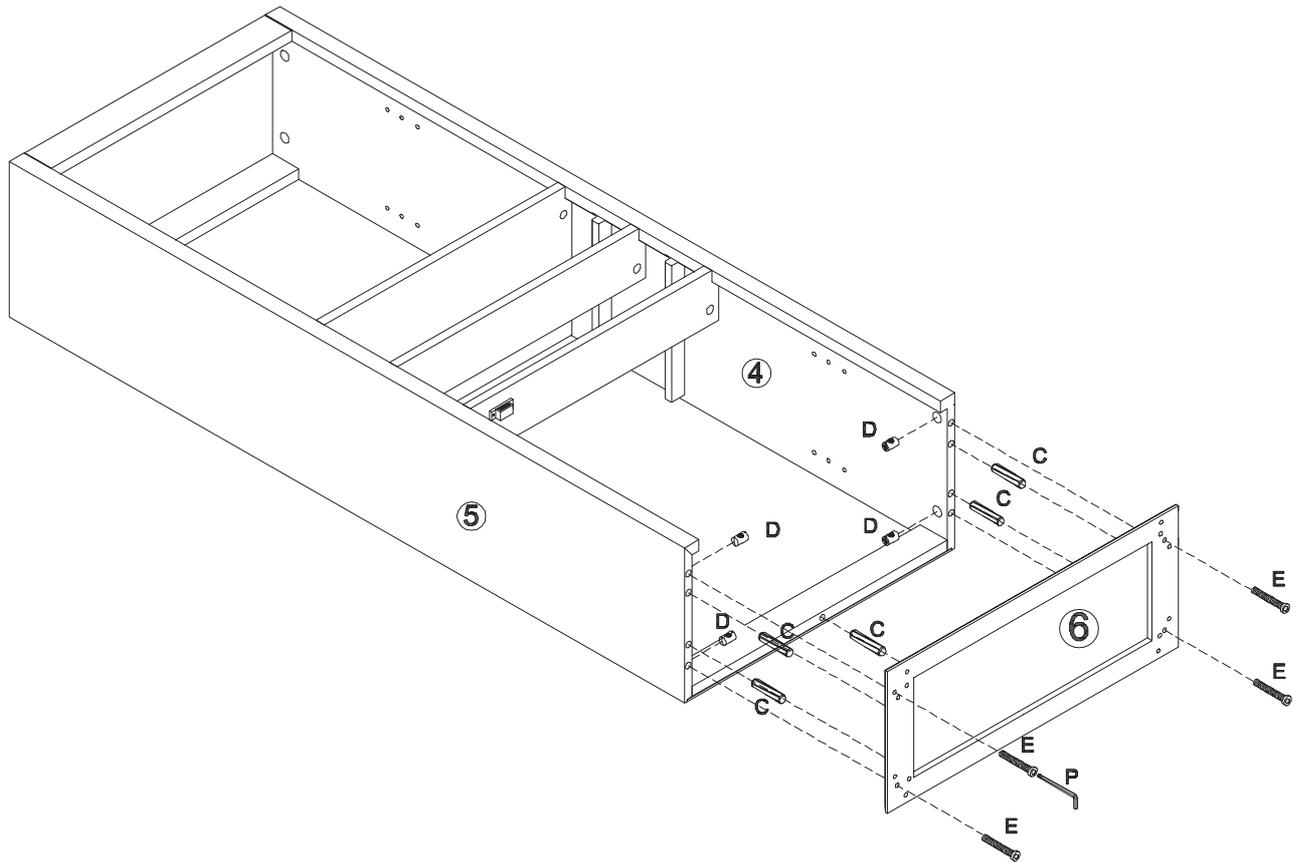


A x 14




C x 12

**Step 5.** Set Bottom Panel (6) into place using Long Bolt (E) , Barrel Nut (D), Wood Dowel (C) and Allen Key (P) .



			
P x 1	C x 5	E x 4	D x 4

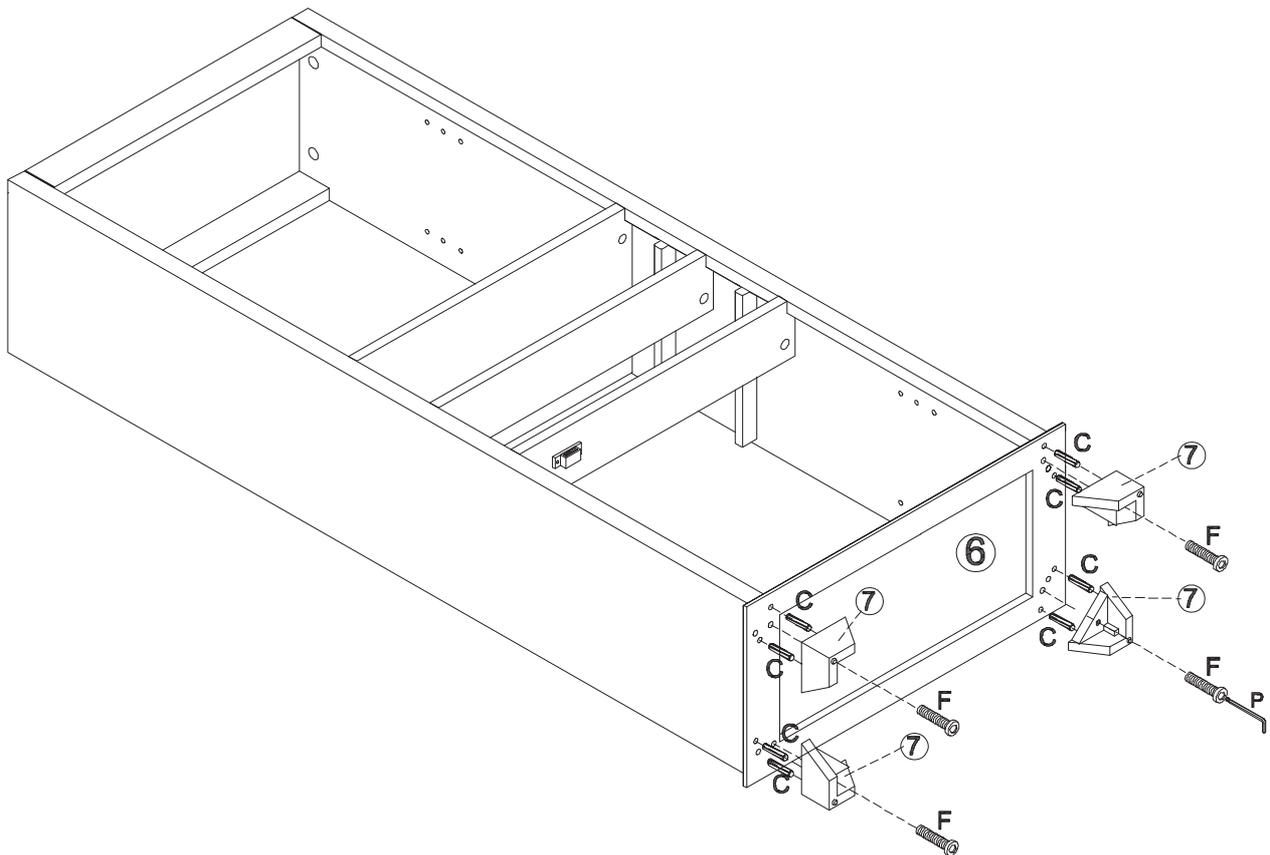**Step 6.** Attach Leg (7) to Bottom Panel (6) using Short Bolt (F),Wood Dowel (C) and Allen Key (P) .





6

	
F x 4	C x 8

**Step 7.** Set Top Panel (8) into place using Wood Dowel (C) and Cam lock (A).

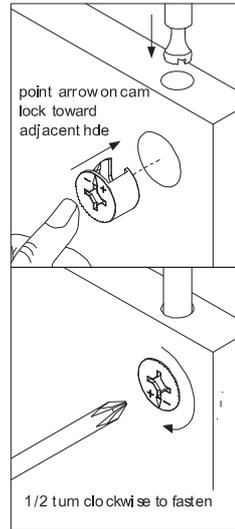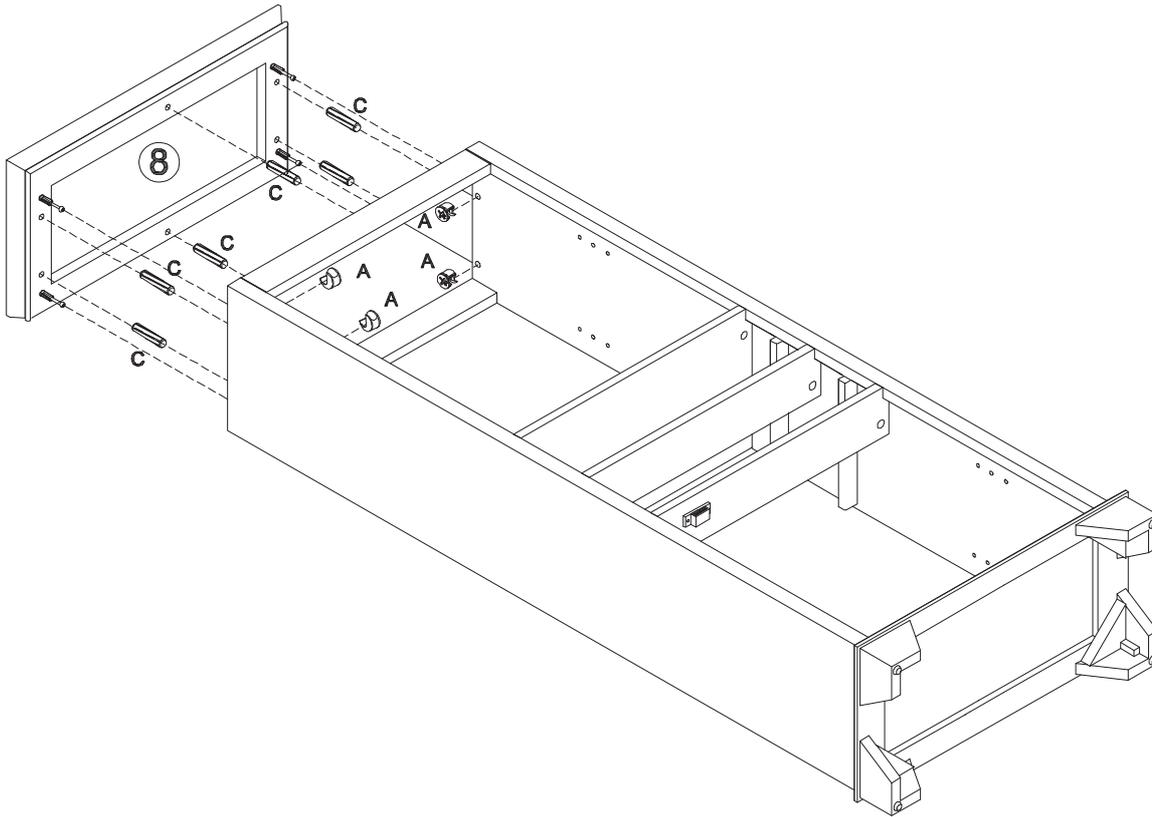NOTE: Cam locks must rotate full 180°. See pictured insert.




A x 4




C x 6

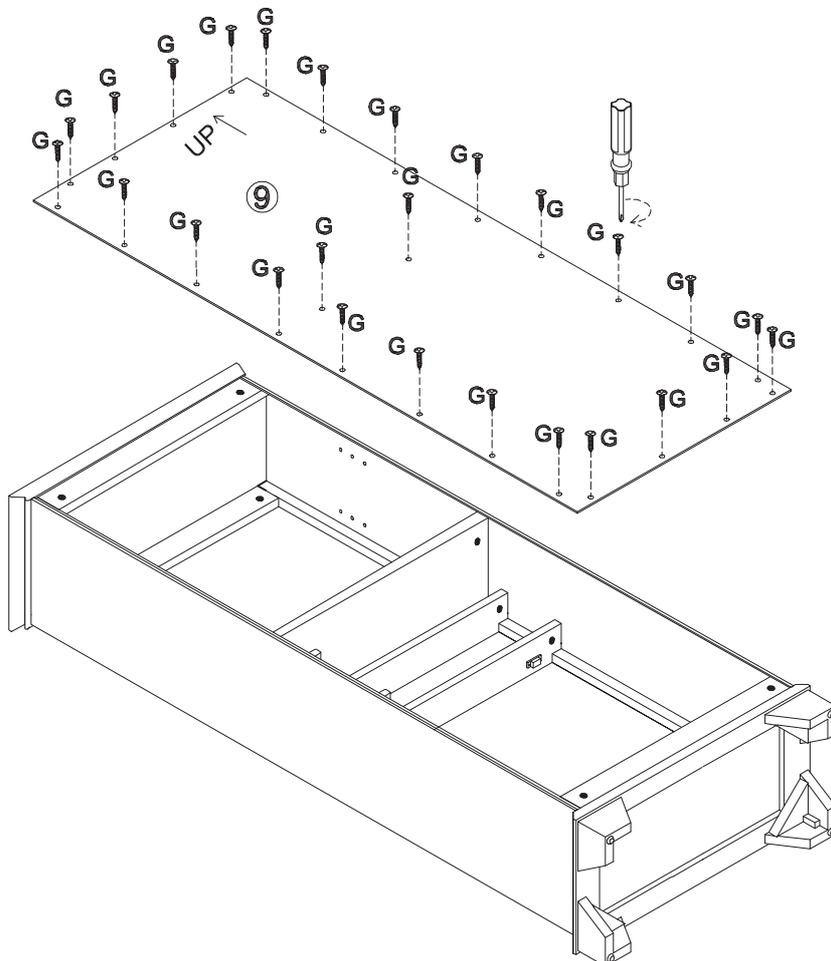**Step 8.** Gently turn the unit over and set Back Panel (9) into place using Screw (G).



G x 26

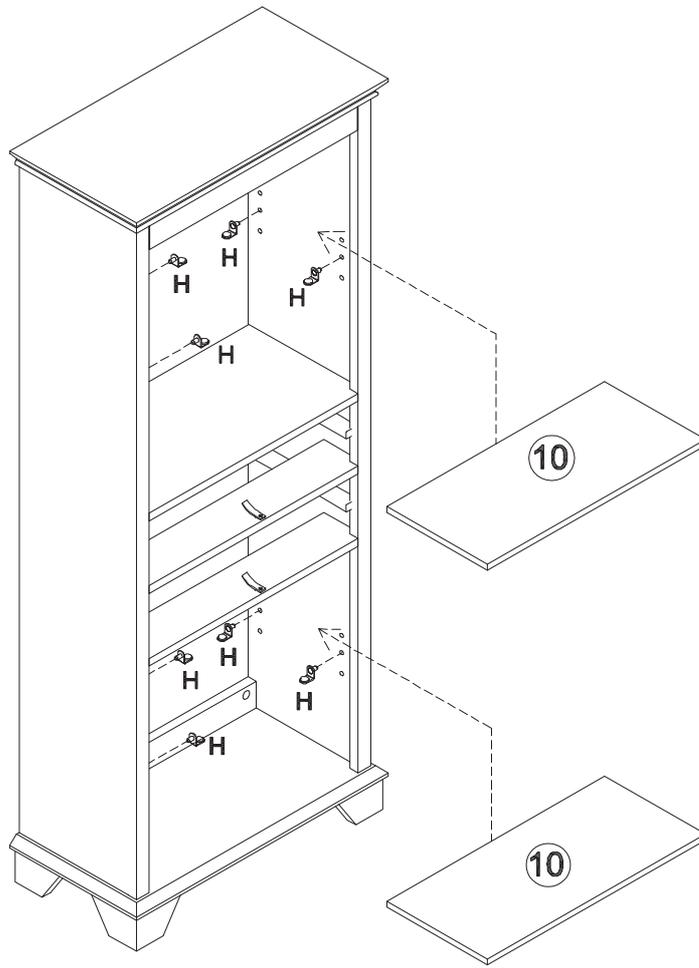**Step 9.** Attach Shelf Support (H) into the hole .Insert Adjustable shelf (10) to place .



**Step 10.** Insert drawers into cabinet .

