


TOOLS NEEDED (no tools are included) : • Slotted or phillips head screwdriver • Crescent wrench


1 PIECES

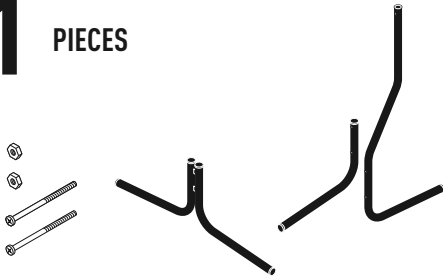

2 PIECES



3 PIECES

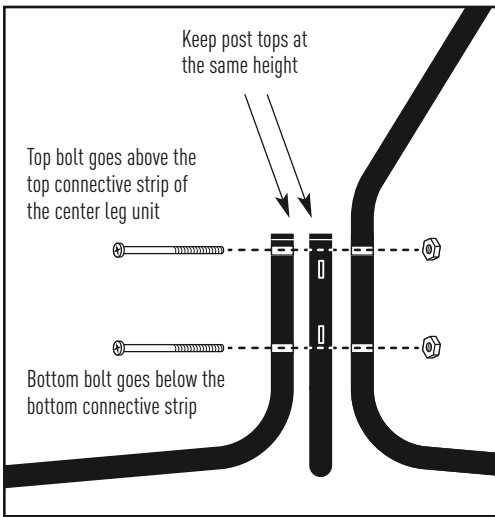


CUT-AWAY VIEW

Insert post

1

Align holes,
insert short screw,
secure with bolt

2

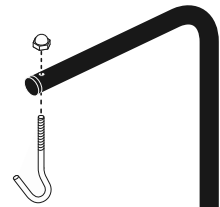

Assembly completed. ■