Southbeach Collection

Model: #21006-Dometop Instructions online at www.prevuepet.com

read first REVIEW BEFORE ASSEMBLY

- No tools are required for assembly
- For best results, follow the Steps in the order they are presented

For assistance or replacement parts, please contact Prevue Pet Products:

PHONE 312.243.3624


ONLINE www.prevuepet.com


EMAIL customerservice@prevuepet.com


CLEANING INSTRUCTIONS

- When cleaning the cage and components, use a soft cloth or Teflon-resistant scrubber, such as Prevue's Cage Saver non-abrasive scrub pad (#109).
- Wash the cage and all components with warm water and a mild, environmentally-friendly, pet-safe soap. Rinse all parts thoroughly.
- Hand dry parts completely with a soft dry cotton cloth before reassembling the cage. <u>Do not</u> <u>leave plastic components to dry</u> <u>in the sun</u>, as they may warp.


To assemble the <u>BASE</u>, you will need these pieces:

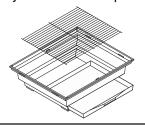

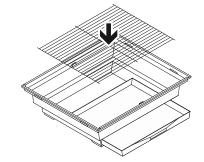

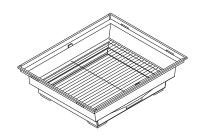


To assemble the <u>CAGE BODY</u>, you will need these pieces:

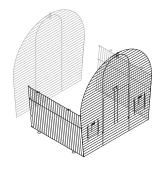



Start at the bottom. Pull the bottom wire hook from the side panel onto the outer wire of the back panel.

Keep the loop bend to the inside of the cage.


Continue up the seam and catch the remaining hooks onto the back panel.

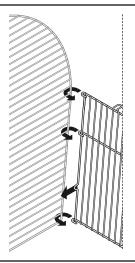




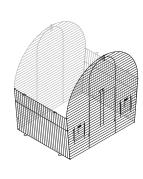

Attach the cage body to the base:

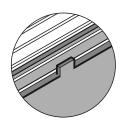

Front and back:
Position the bottom wire between the rim and the raised tabs in the base.

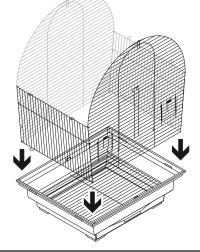






Sides: Insert the wire loops (two per side) into the slots along the base rim.

To install the **COMPONENTS**, you will need these pieces:



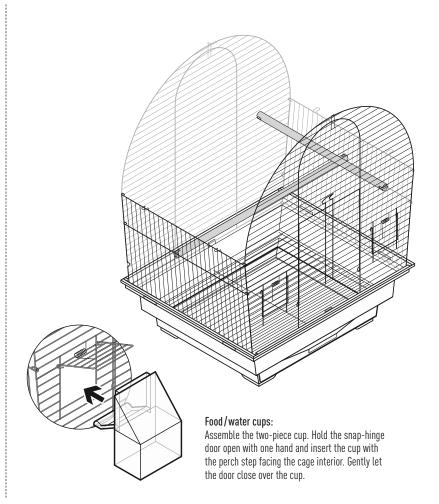






Perches:

Insert the longer perch on a vertical wire, resting on a horizontal wire for stability.


Install the shorter perch on a horizontal wire, from cage front to back.

When installing perches, stagger their placement to allow birds room to sit, walk, and move about.

5 To install the <u>ROOF</u>, you will need this piece:



Starting on one side, hook the outer wire of the roof under the wire loops along the side panel.

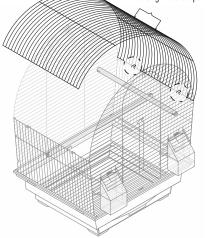

On the remaining side, pull the roof down taut and catch the bottom of the roof under the wire loops along the side panel.

