



## “QUICK DRAW” POLARIS MOUNTING PLATE

**MODEL: QD800PMP3**


**FITS POLARIS RANGER 900**

**⚠ WARNING**

**READ ALL INSTRUCTIONS BEFORE INSTALLING POLARIS PLATE.**

**NOTE: Failure to read instructions before use could result in injury or death.**

### **Instructions for Installation and Use:**

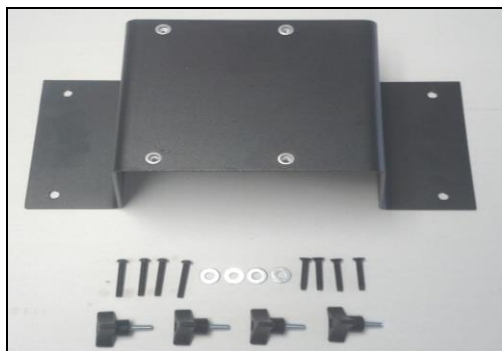


**Fig. 1**


#### **CONTENTS: SEE FIG. 1**

- 1-** Quick Draw Polaris Plate (QD800PMP3)
- 4-** 1/4" Knob Screws
- 4-** 1/4" Flat Washers
- 2-** 1/4-20 x 1 1/2" Floor Screws
- 2-** M6-1.00 x 40mm Cap Screws
- 2-** 1/4" Lag Screws

With the Quick Draw Gun Rack facing towards you, attach gun rack to plate using 4- 1/4" knob screws. (See Figs. 2 & 3.) Tighten thoroughly.

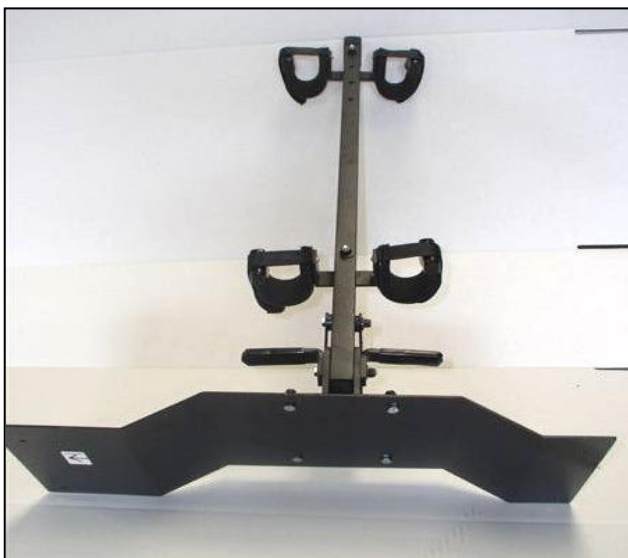

**Fig. 2**

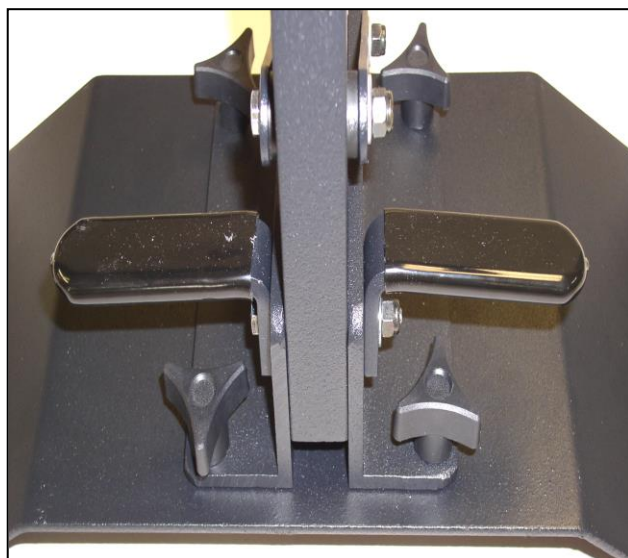

**Fig. 3**

Position Gun Rack / Plate assembly onto floorboard of Ranger to locate the **2** floorboard screws that will need to be removed for installation. **(See Fig. 4)**. Using the torx wrench provided in the Ranger tool kit, Remove the **2** screws from floorboard. **(See Fig. 5)**



Fig. 4



Fig. 5

Position assembly back over holes and replace screws. Tighten completely. **(See Fig. 6)**

**\*\*NOTE\*\*** Torx screws can be replaced with 2- M6-1.00 X 40mm Cap Screws provided.

Using a 3/16" drill bit, drill thru remaining 2 holes on plate and floorboard and secure with 2 - 1/4" Lag Screws.



Fig. 6

**⚠ WARNING** : PLEASE READ AND FOLLOW ALL INSTRUCTIONS AND WARNINGS FURNISHED WITH QD 800 QUICK DRAW GUN RACK.

For more information about this or other products, contact us at:

**Great Day, Inc.**

604 Kimbrough Dr. \* Tallulah, LA 71282 \* (866) 649-1918 \* [www.greatdayinc.com](http://www.greatdayinc.com)