



MIGHTY-LITE REAR RACK

MODEL: MLRR60

⚠ WARNING

READ ALL INSTRUCTIONS BEFORE USING THE MITEY LITE REAR RACK

NOTE: Failure to read instructions before use could result in injury or death.


Instructions for Installation and Use:



FIG. 1

CONTENTS: SEE FIG. 1

8-1/4" X 2 1/2" BOLTS, 4-2 HOLE PLATES WITH RIV-NUTS, 4-2 HOLE PLATES



TOOLS NEEDED:

DRILL WITH 1/4" DRILL BIT, TAPE MEASURE, MARKER OR PEN AND 7/16" WRENCH. SEE FIG. 1A





FIG. 1A



FIG. 2

STEP 1- SEE FIG. 2
POSITION RACK ONTO ATV AND
CENTER USING TAPE MEASURE.



STEP 2-SEE FIG. 3 – PLACE 2 HOLE PLATE IN
CENTER OF RUNG AT DESIRED POSITION FOR
BOLTING TO EXISTING ATV RACK. MARK FOR
DRILLING. REPEAT STEPS FOR THE REMAINING
THREE 2 HOLE PLATES.





FIG. 3

STEP 3-SEE FIG. 4 – DRILL ALL HOLES USING $\frac{1}{4}$ "
DRILL BIT.



****NOTE****RACKS CAN BE INSTALLED WITHOUT
DRILLING BY USING THE 2 HOLE PLATES WITH
RIV-NUTS AND $\frac{1}{4}$ " BOLTS AS SHOWN IN
FIG. 4A & FIG. 4B

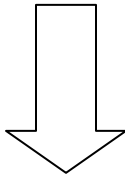


FIG. 4



FIG. 4A



FIG. 4B

STEP 4-SEE FIG. 5 – TIGHTEN ALL BOLTS SECURELY USING 7/16” WRENCH.




FIG. 5

STEP 5-SEE FIG. 6 & FIG. 6A– INSTALL 2 HOLE PLATES THRU DRILLED HOLES WITH 2 1/2” BOLTS WITH RIV-NUT PLATES UNDER EXISTING ATV RACK AND TIGHTEN ALL HARDWARE SECURELY.

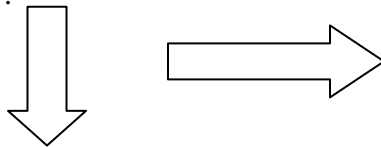


FIG 6A

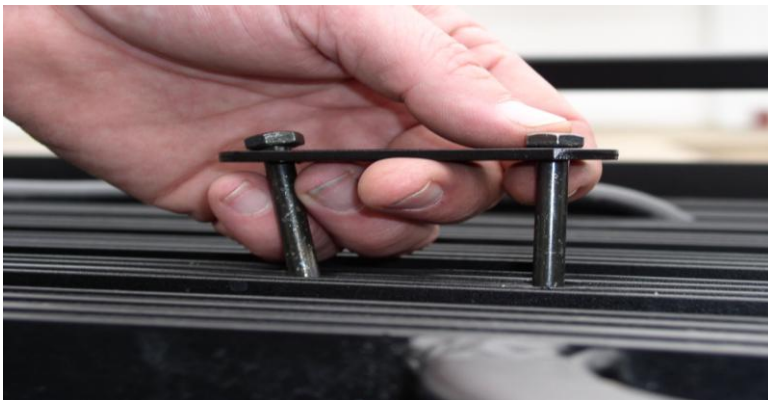


FIG. 6

⚠ WARNING

NEVER EXCEED THE WEIGHT CAPACITY OF THE ORIGINAL ATV RACK.

⚠ WARNING

THE MIGHTY LITE REAR RACK IS NOT DESIGNED TO CARRY PASSENGERS. NEVER ALLOW PASSENGERS TO RIDE ON THE MIGHTY LITE REAR RACK.

⚠ WARNING

ALWAYS MAKE SURE CARGO IS SECURE BEFORE PUTTING ATV INTO GEAR.

⚠ WARNING

NEVER ATTEMPT TO ADJUST OR SECURE CARGO WHEN ATV IS IN MOTION.

For more information about this or other products, contact us at:

Great Day, Inc.

604 Kimbrough Dr. * Tallulah, LA 71282 * (866) 649-1918 * www.greatdayinc.com