Sidewall Attachment Installation

for DisplayShade®, Classic®, Aluma® and Alumashade® Frames

1

Carefully lift the canopy top's corners above velcro area.

2

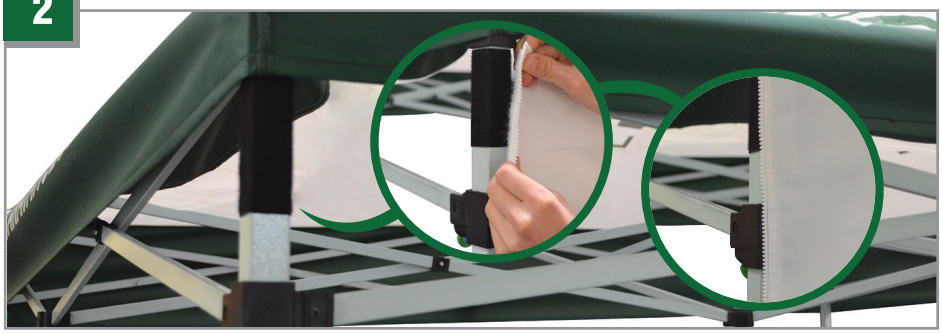

Attach the sidewalls to the vertical velcro located at the top of the frame's legs on each corner.

3

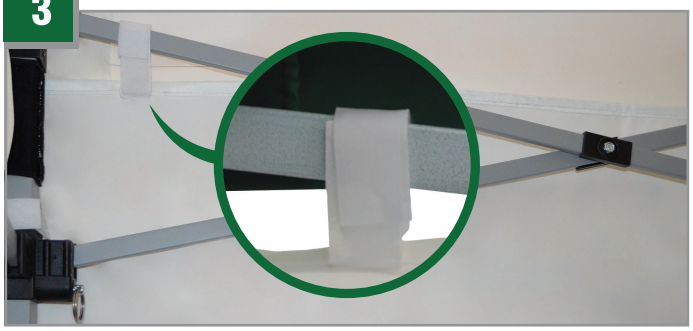

Attach all velcro straps to the truss bar valances.

4

Extend the frame's legs to the desired height.

5

Attach the remaining velcro to the frame's legs.

6

Carefully pull down the canopy top's corners from above the velcro area.

CARAVAN® GLOBAL ▲ 14600 Alondra Boulevard La Mirada, CA 90638-5603 ▲ USA ▲ TOLL FREE (877) 922-6679 ▲ TEL (714) 367-3000 ▲ FAX (714) 367-3050
www.Caravancanopy.com