


## Parts


**Ax1**  
Hook  
Tube



**B(1)x1**  
Back

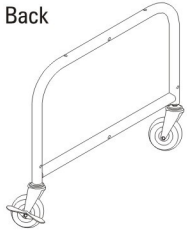


**B(2)x1**  
Front

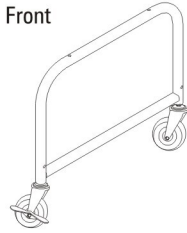

**Cx1**  
Hanger




**Dx1**  
Basket

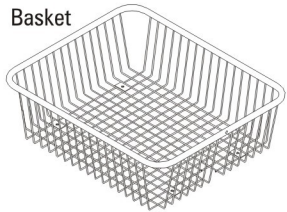

**Ex1**  
Middle Tube



**Gx1**  
Wire Shelf

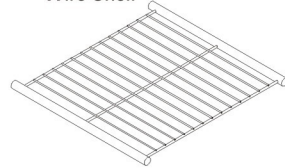


**Fx1**  
Lower Tube



### Step 1 & 2

Medium Screw (8)



32 mm

### Step 3

Long Screw (2)



58 mm

### Step 4

Brace Screw (1)



25 mm

### Step 4 & 6


Short Screw (4)



12 mm

### Step 5

Thick Screw (2)



45 mm

### Step 2-4

Hex Nut (7)




### Step 3

Large Black Spacer (2)




### Step 3

Flat Black Cap (1)



### Step 4

L-Bracket (1)



### Step 5

Small Silver Spacer (2)



### Step 5

Silver Ball Cap (1)



### Tools (Socket wrench recommended.)

Wrench



Hex Wrench



## Assembly

1. Attach shelf to side frames with 4 medium screws.



2. Attach basket to side frames with 4 medium screws (32 mm). Secure screws from underside with a hex nut, flat side up.



3. Insert flat black cap into bottom of lower tube (end with 1 hole). Attach lower tube (capped end down, 2 top holes facing outward) to the center of one side frame, black spacer between the pole and frame, with a long screw (58mm). Secure screw with hex nut.




4. Insert the middle pole into the lower pole. Attach to basket with L-bracket, so the curved end of the bracket lays against the underside of the basket. Attach to basket with brace screw (23 mm), and secure with hex nut; secure L-bracket to poles with 2 short screws (12 mm).



5. Cap hanging bar with silver ball cap. Attach hanging bar to hook tube, with silver spacers at each connection, with 2 thick long screws (45 mm). **NOTE:** Beginning with connection to the straight part of the hooked tube, alternate tightening straight and hook connection until both are fully tightened.



6. Attach hooked tube to middle tube with 2 short screws (12 mm). Tighten all screws and nuts.

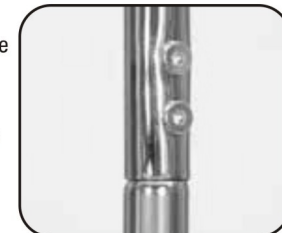

household **ie**  
essentials.

Memphis, TN  
Made in China