




## Queen / King Headboard CF92005-501 / 601

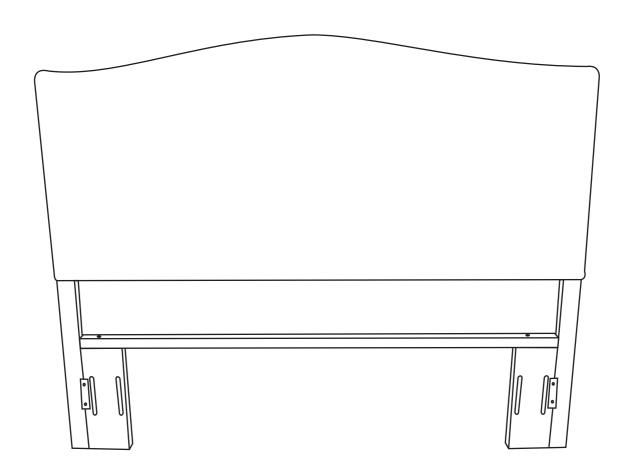

## PART LIST

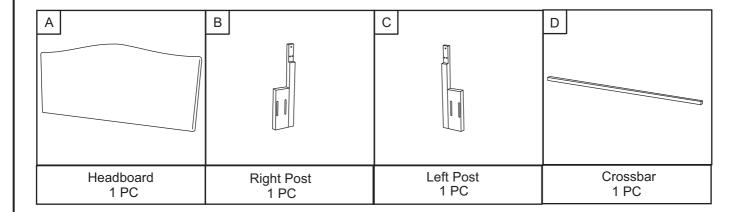


## HARDWARE LIST

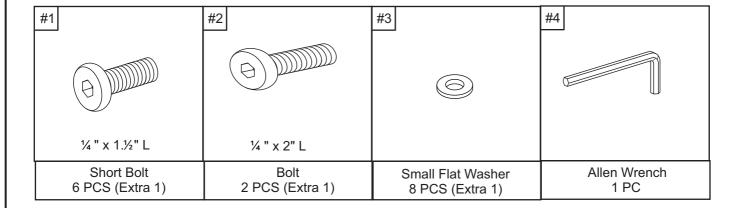

Step 1. Lay headboard (part A) upside down on a soft surface, such as carpet. Attach posts (parts B & C) to headboard (part A) using short bolts (part #1), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

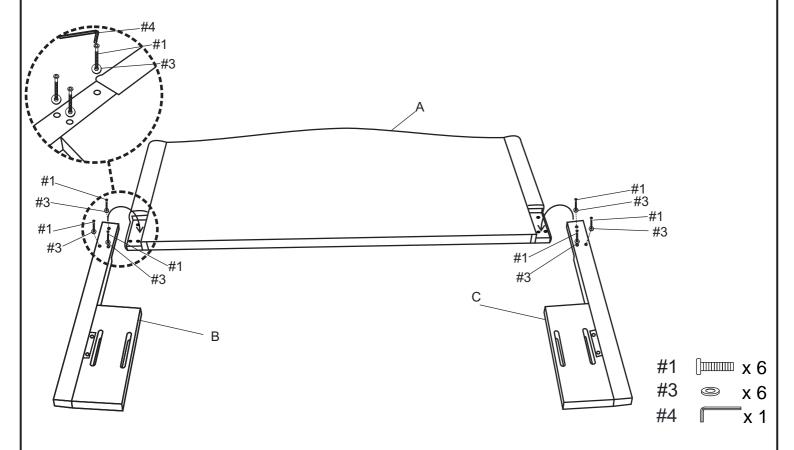

Step 2. Attach crossbar (part D) to posts (parts B & C) using bolts (part #2), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

