



URBANA


ASSEMBLY GUIDE
GUIDE DE MONTAGE
GUÍA DE MONTAJE

LARGE PARKLETTE PLANTER GRAND PLANTEUR DE PARKLETTE PLANTADOR GRANDE DE PARKLETTE

VT17513 / VT17613


ESPRESSO
EXPRESSO
ESPRESSO

SLATE
ARDOISE
PIZARRA

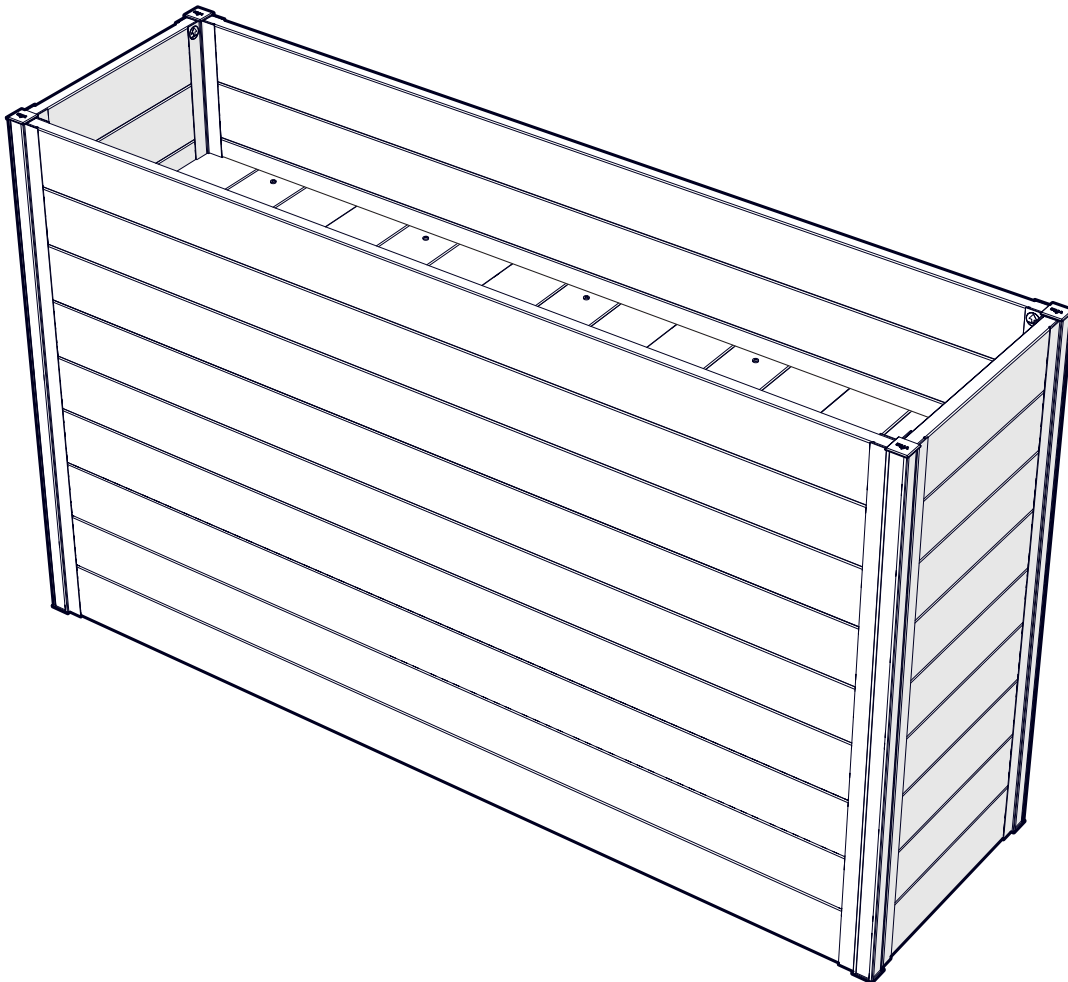



REQUIRED TOOLS AND MATERIALS (NOT INCLUDED)
OUTILS ET MATÉRIAUX REQUIS (NON INCLUS)
HERRAMIENTAS Y MATERIALES REQUERIDOS (NO INCLUIDOS)

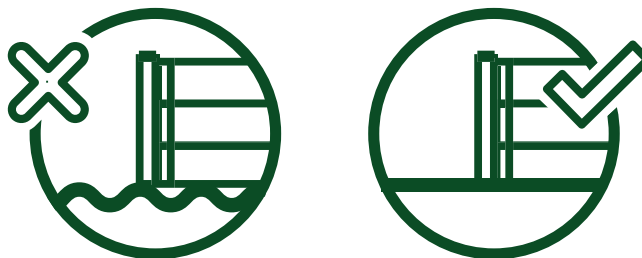

HELLO@WEAREVITA.COM




VISIT WWW.WEAREVITA.COM
CLICK 'CHAT'





1-800-282-9346
MONDAY - FRIDAY | 8AM - 5PM EST



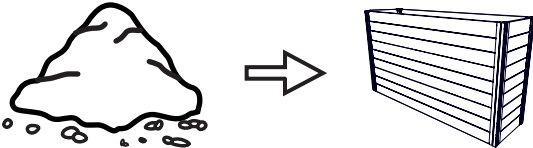


False Bottom	Depth	Amount of Soil
①	8 5/8" (22.1 cm)	4.0 cubic feet (113.0 liters)

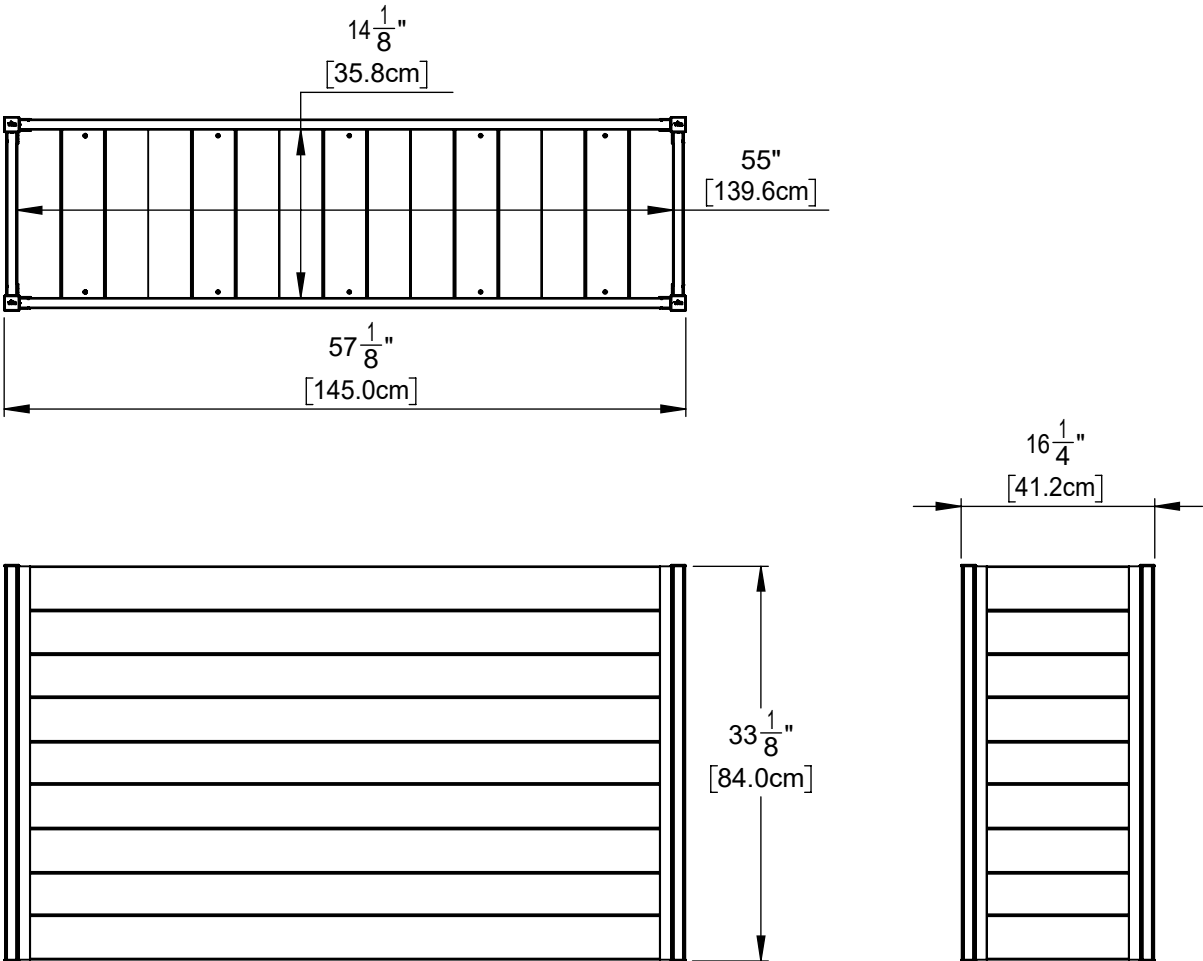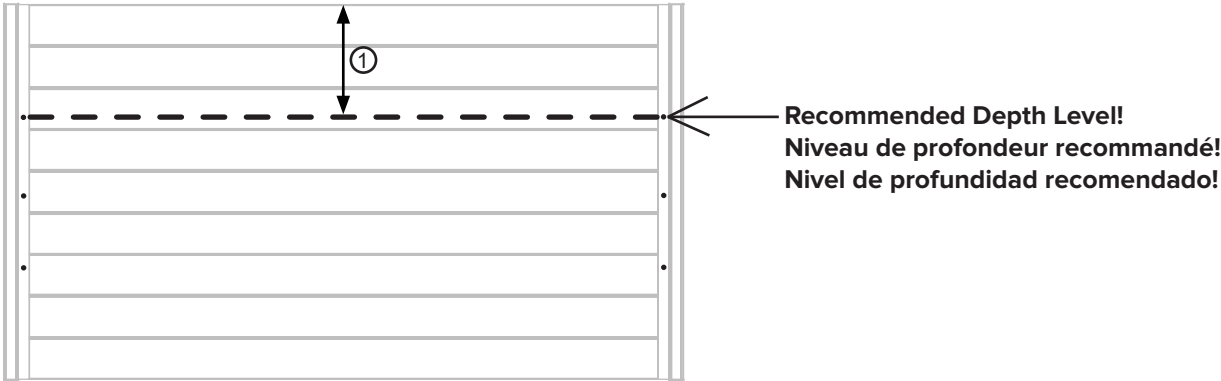


PARTS LIST

LISTE DES PIÈCES



LISTADO DE PIEZAS

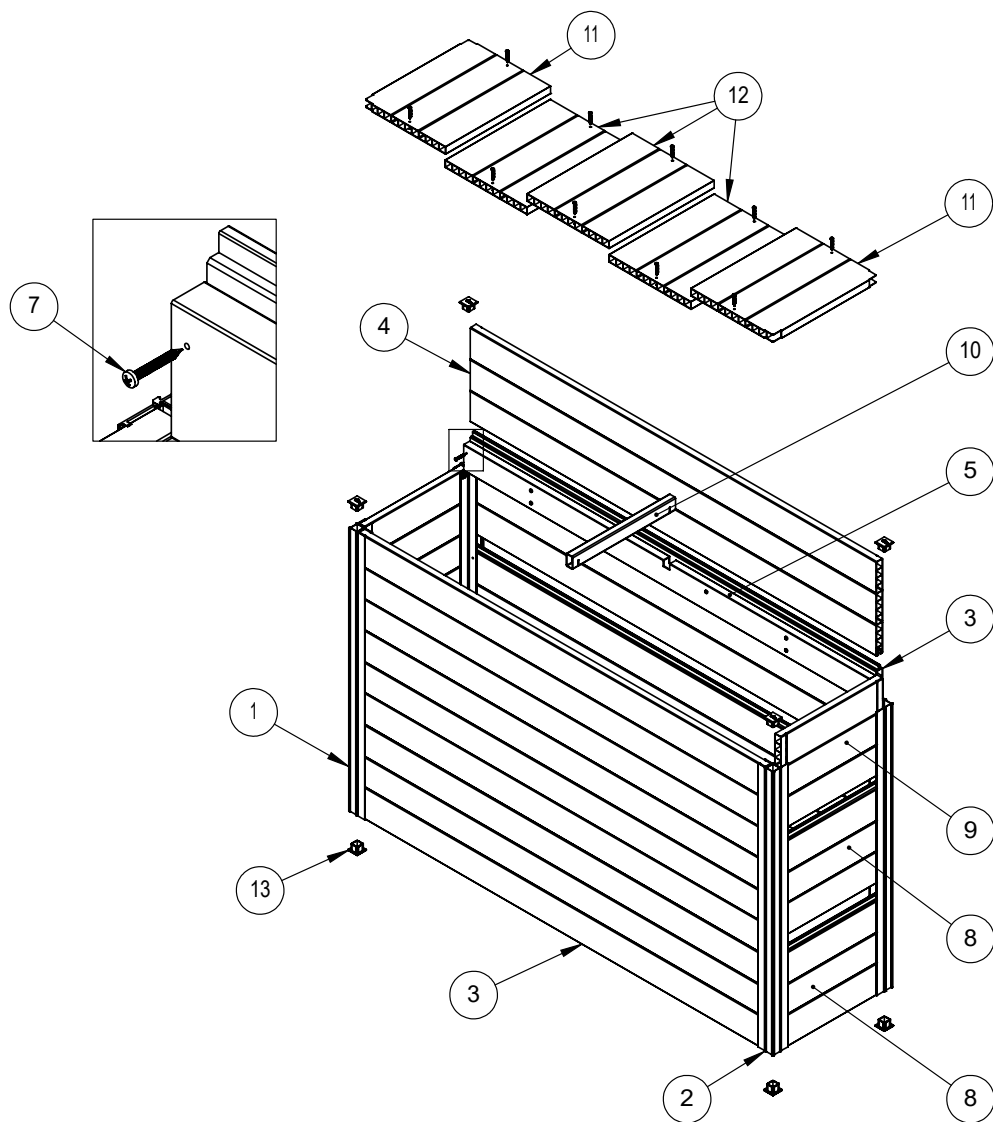


Item No.	Part Number (Espresso)	Part Number (Slate)	Description	Dimension	Qty.
1	16029	16029	Post Assembly	33" (83.7 cm)	2
2	16044	16044	Post Assembly	33" (83.7 cm)	2
3	15231	16231	Long Board	54 1/2" (138.4 cm)	4
4	15232	16232	Upper Long Board	54 1/2" (138.4 cm)	2
5	15031	16031	Floorboard Support Brace	54 1/2" (138.4 cm)	2
6	20066	20066	Short Screw	#8 x 5/8" (1.6 cm)	8
7	20080	20080	Long Screw	#8 x 1 1/4" (3.2 cm)	26
8	15233	16233	Short Wallboard	13 5/8" (34.6 cm)	4
9	15234	16234	Short Upper Board	13 5/8" (34.6 cm)	2
10	15028	16028	Cross Brace	13 3/4" (35.0 cm)	1
11	15032	16032	End Floorboard	14" (35.8 cm)	2
12	15033	16033	Mid Floorboard	14" (35.8 cm)	3
13	16325	16325	Post Cap	1 1/4" X 1 1/4" (3.2 cm X 3.2 cm)	8
14	20000	20000	PVC Glue	1 1/2 oz (40ml)	2

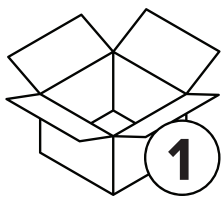


PARTS LIST
LISTE DES PIÈCES
LISTADO DE PIEZAS

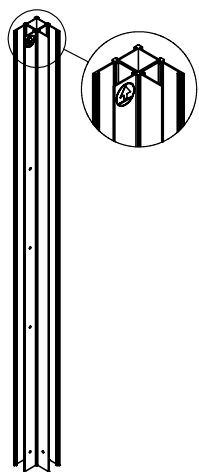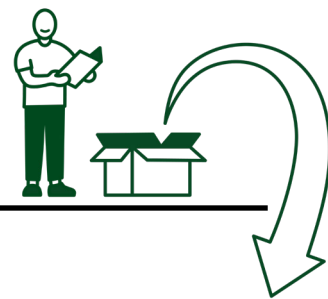


1 X2

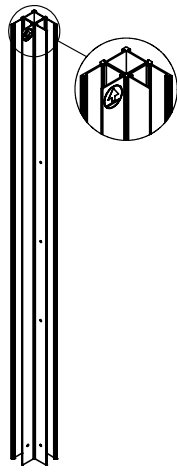


2 X2

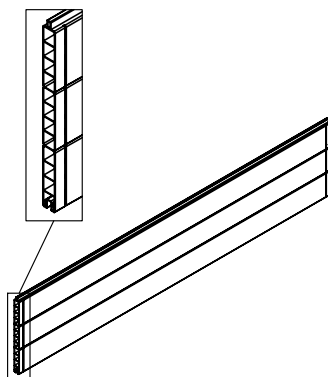


3 X4

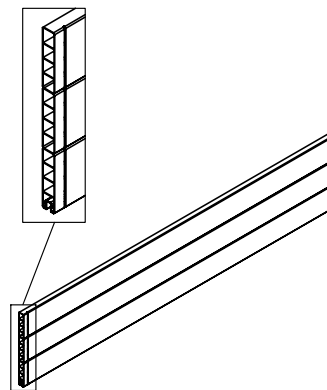


4 X2

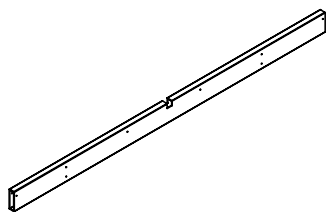


5 X2




6 X8

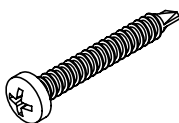


7 X26

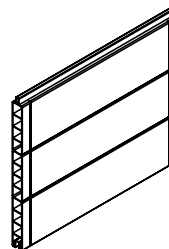


8 X4

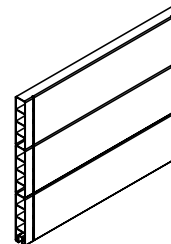


9 X2

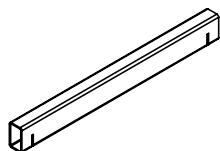

10 X1

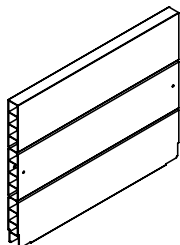

11 X2

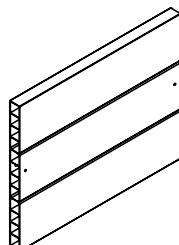

12 X3





13 X8




14 X2


PREPARE THE LARGE PARKLETTE WALLS
PRÉPARER LES GRANDS MURS PARKLETTE
PREPARAR LOS GRANDES PAREDES DE PARKLETTE

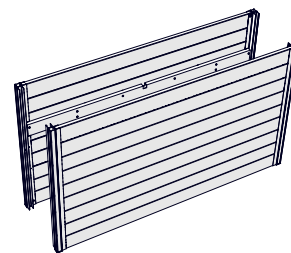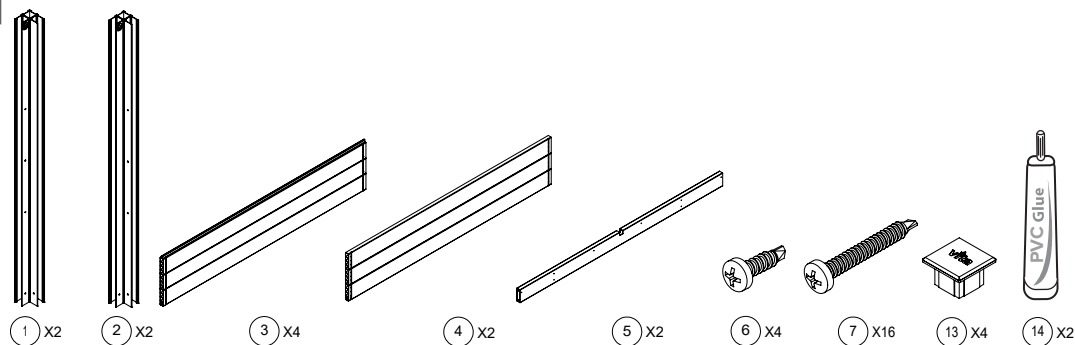

IA

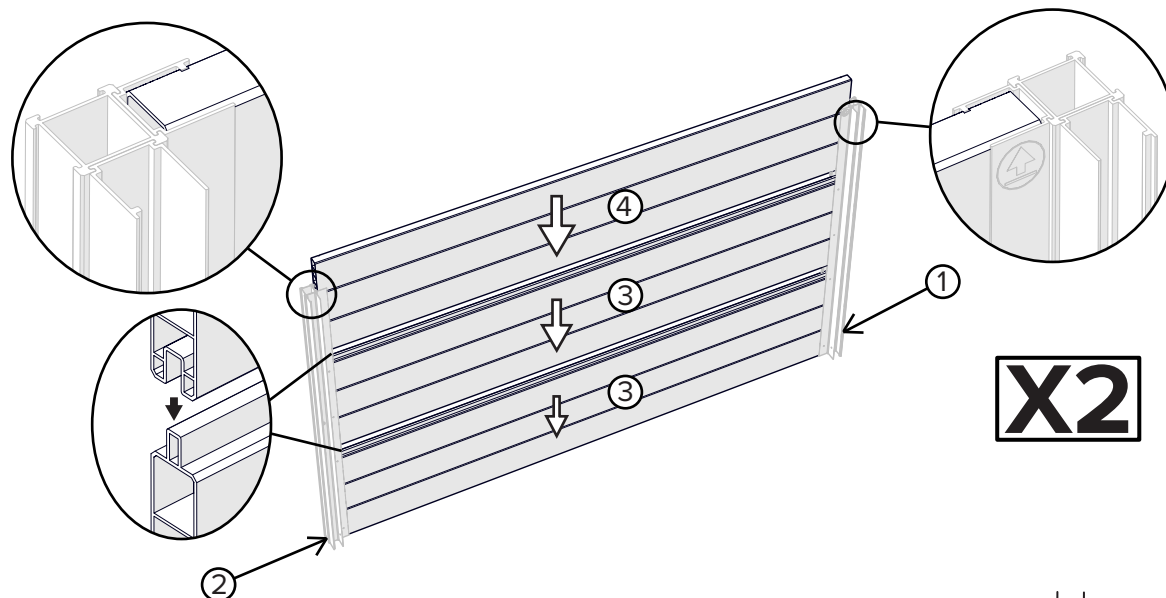


IB

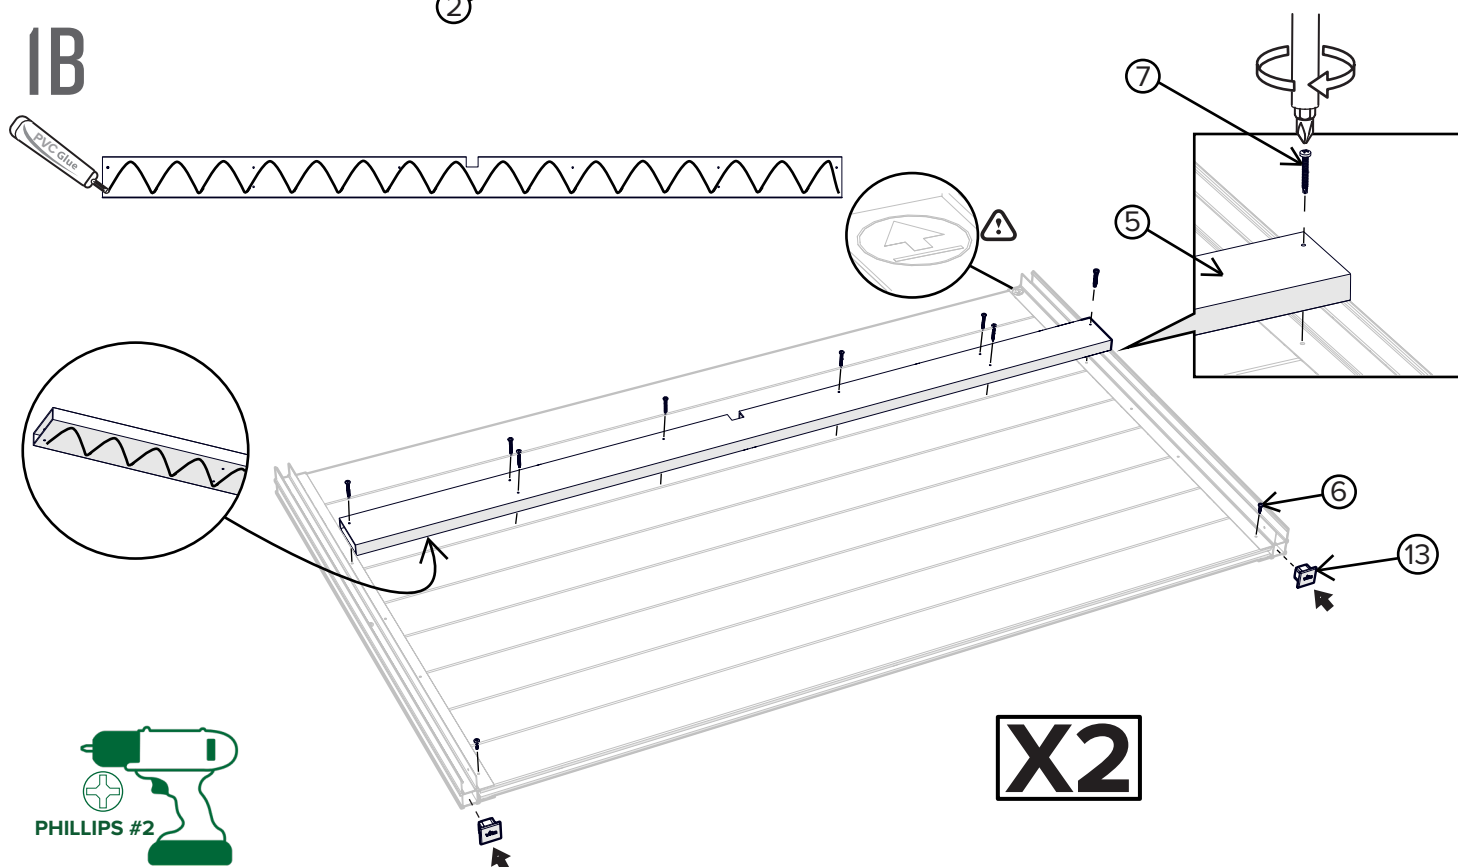


2



SECURE THE SHORTSIDE BOARDS
 FIXEZ LES PANNEAUX COURTS
 ASEGURAR LOS PANELES DEL LADO CORTO

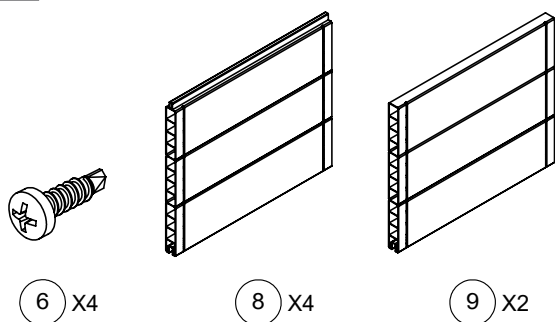

2A

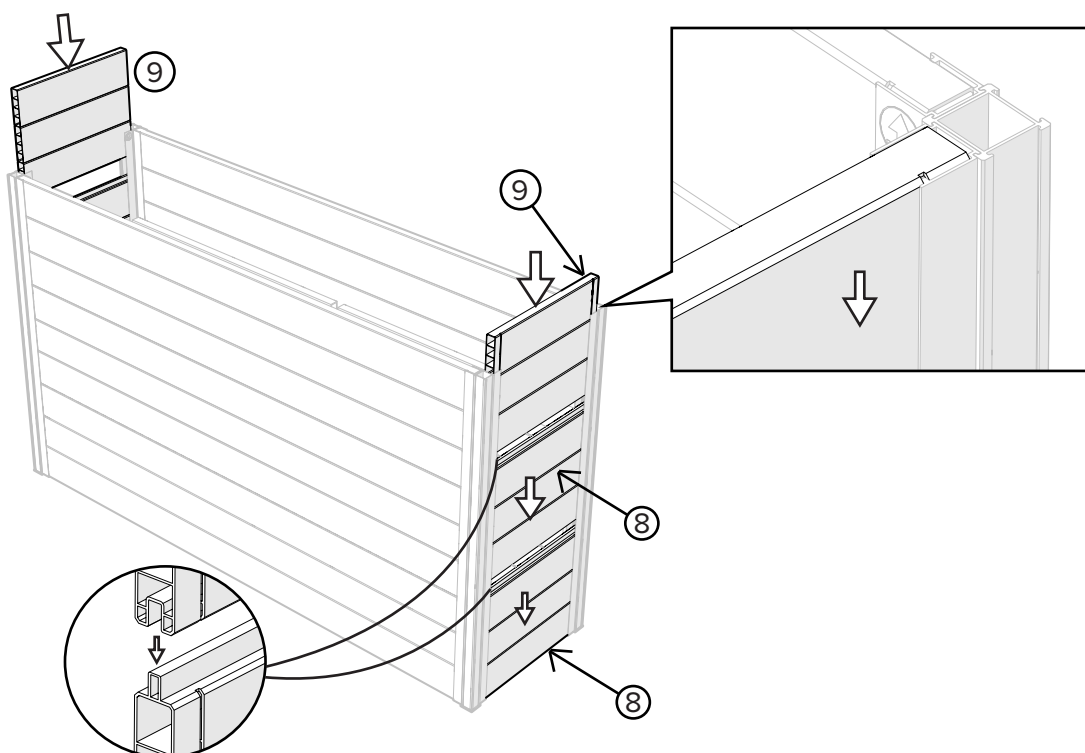

2B

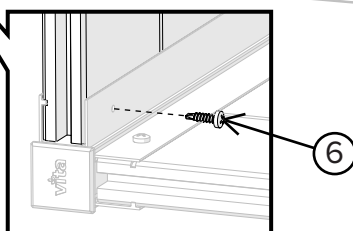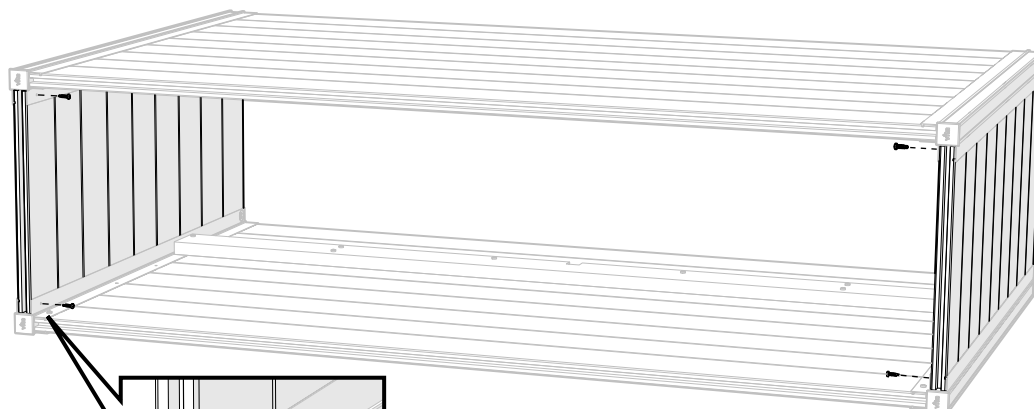


3


LAYDOWN AND SECURE THE FLOORBOARDS
 POSER ET FIXER LE PLANCHER
 COLOQUE LOS TABLONES DEL SUELO Y ASEGÚRELOS




(7) X10

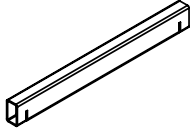


(10) X1

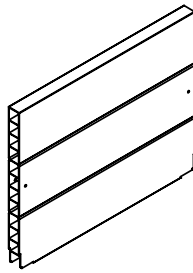


(11) X2

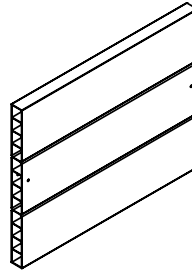



(12) X3

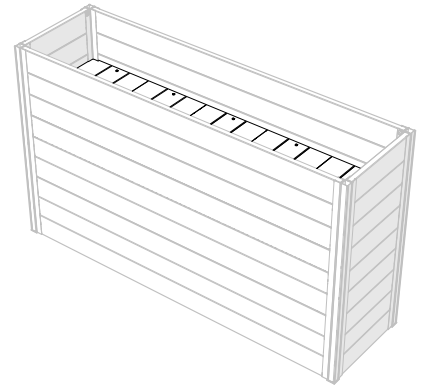

3A

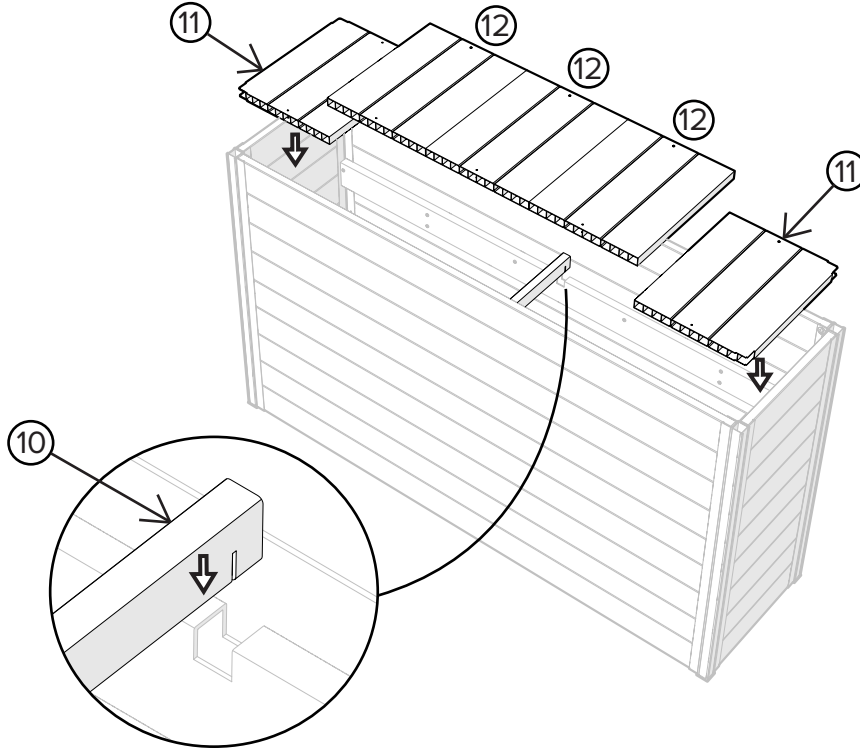

3B

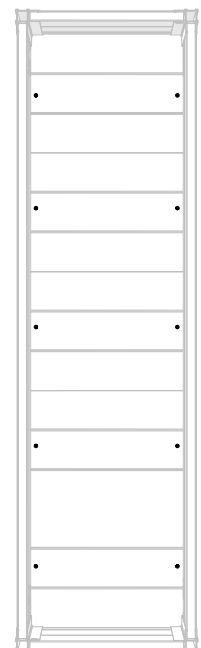
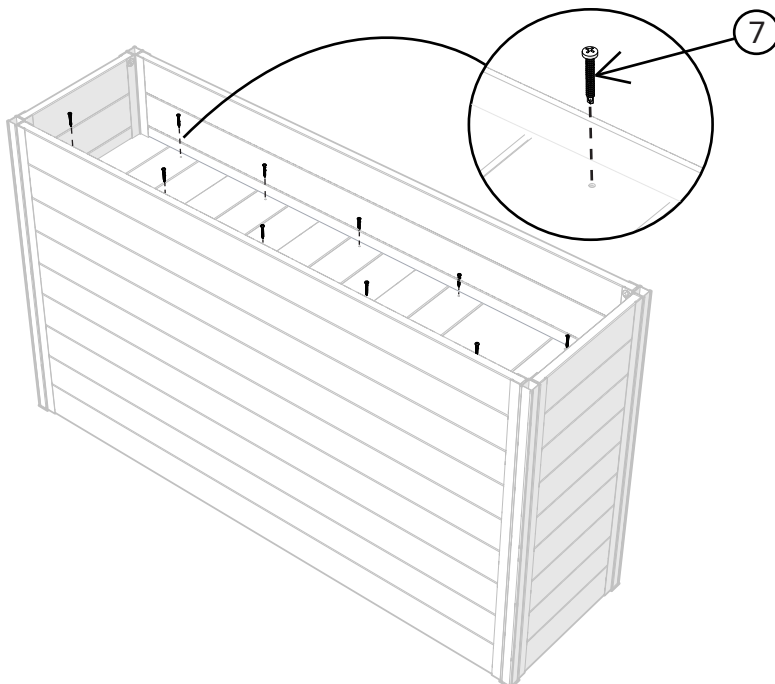


4

**SECURE THE POST CAPS
FIXEZ LES CAPUCHONS DE POTEAU
ASEGURAR LAS TAPAS DE LOS POSTES**




13 X4

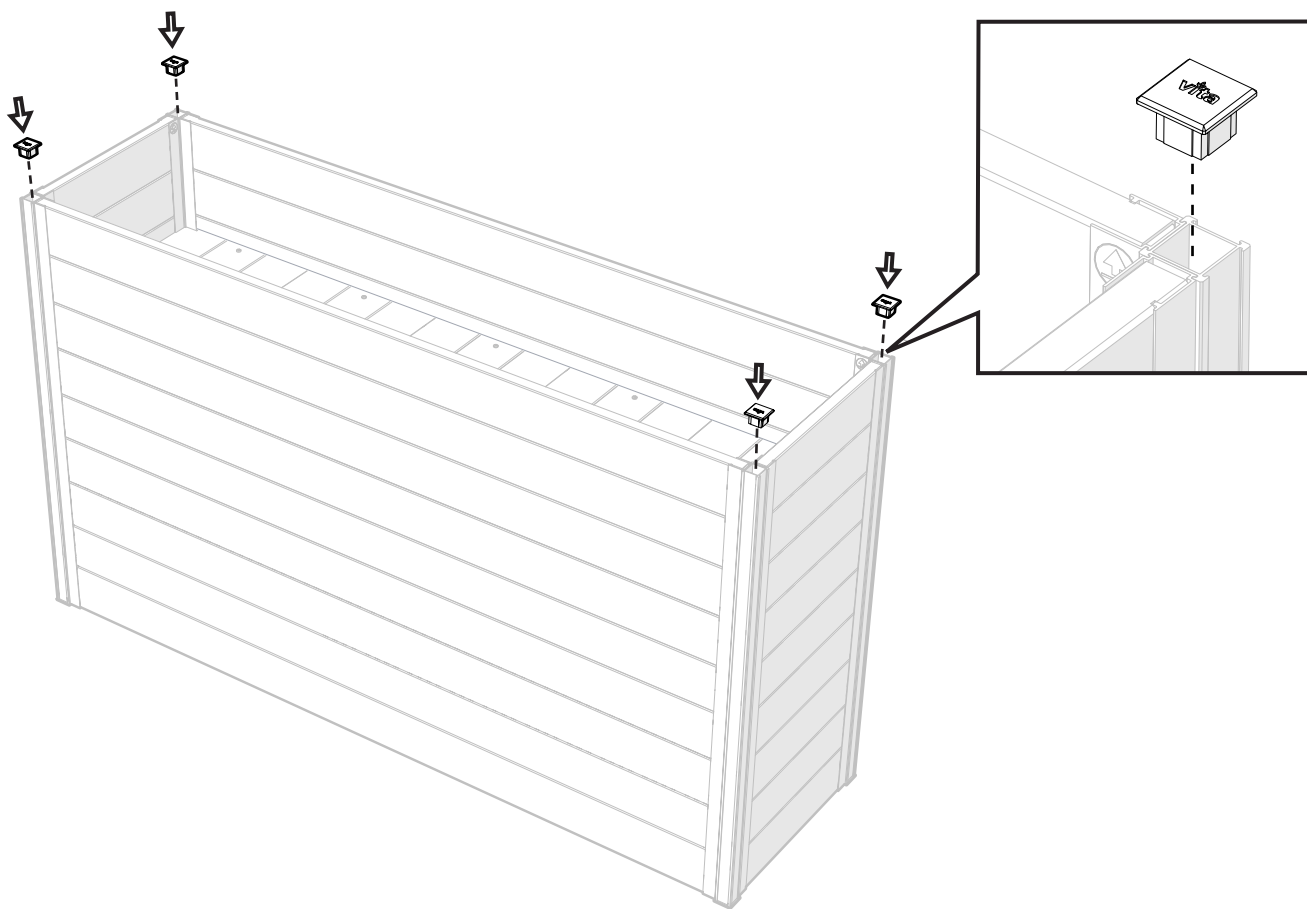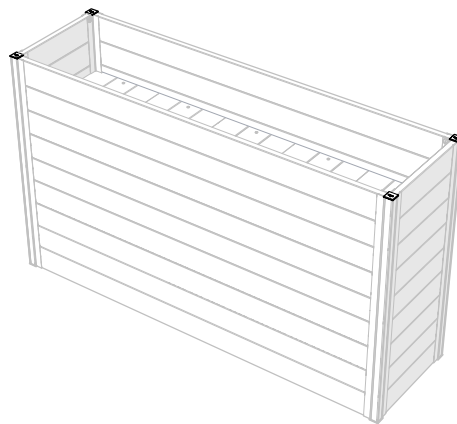

VT17525/VT17625 →

VT17512/VT17612 ⇒

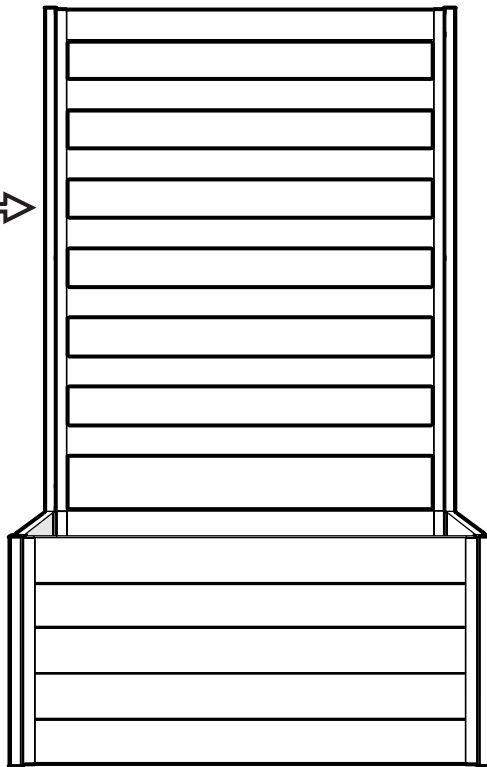

ADD A TRELLIS!
AJOUTER UN TREILLIS!
AGREGAR UN ENREJADO!
FÜGEN SIE EIN GITTER HINZU
AGGIUNGI UN TRALICCIO

COMBINE PARKLETES AND TRELLIS
COMBINEZ PARKLETES ET TREILLIS
COMBINA PARKLETES Y TRELLIS
KOMBINIEREN SIE PARKLETES UND SPALIER
COMBINA PARKLETES E TRELLIS



VT17524/
VT17624


VT17525/
VT17625



VT17513/
VT17613



VT17512/
VT17612

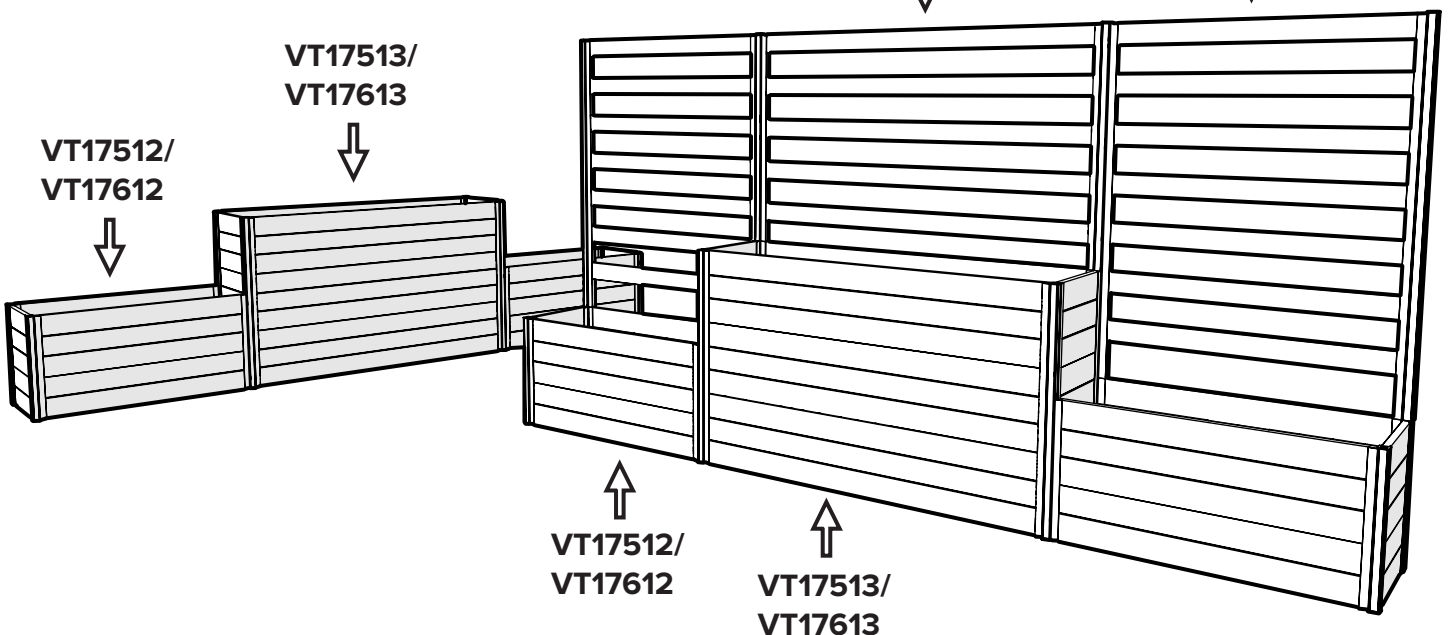

VT17512/
VT17612

VT17513/
VT17613