



### WHAT SIZE HITCH DO I NEED? HOW TO FIND THE PERFECT BULLETPROOF HITCH FOR YOUR VEHICLE

Figure A (below)



To find out which BulletProof Hitch™ will work best for your vehicle, please follow the steps below:


First, measure the opening of the receiver tube (**Figure A**) to determine what size shank your vehicle requires. It will be 2", 2.5" or 3" (Please note that 3" is applicable to some 2017 & newer Ford Super Duty trucks and some RVs/Semis only)

Next, park your vehicle on level ground and measure from the ground to the bottom inside of the receiver tube (**Figure B**), then take that measurement and apply it to the information below. *As you can see in the example, this truck would require our 6" drop.*

Receiver height as measured:

- Under 13" requires a hitch in the rise position, contact us to help you
- 13"-15" requires 2" drop/rise hitch
- 16"-18" requires 4" drop/rise hitch
- 19"-21" requires 6" drop/rise hitch
- 22"-24" requires 8" drop/rise hitch
- 25"-27" requires 10" drop/rise hitch
- 28"-30" requires 12" drop/rise hitch
- 31"-33" requires 14" drop/rise hitch
- 34"-36" requires 16" drop/rise hitch

Figure B (below)

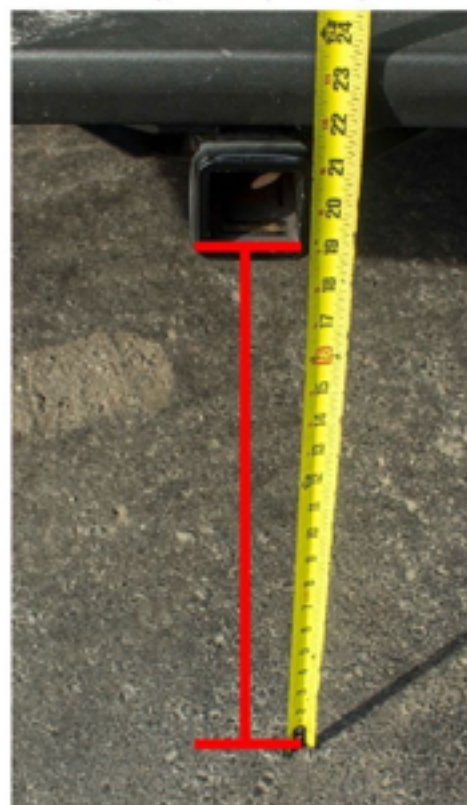

FAQs:

***I fall between two measurements, what should I order?***

Contact us for help!

***I tow heavy trailers (in excess of 8,000 pounds), does this impact what hitch I should order?***

Please contact us to discuss your exact measurements due to the possible squatting that may occur when your trailer is loaded.

***My truck has helper air bags/air suspension, does this impact what hitch I need?***

Please contact us to discuss your measurements and what you are towing.

If you are unsure or have any questions, please contact us and we will be happy to help you select the correct hitch for your vehicle and towing needs!

