


ASSEMBLY INSTRUCTIONS

Item No:CVAER1053

Carefully place all parts on smooth surface to assembly.

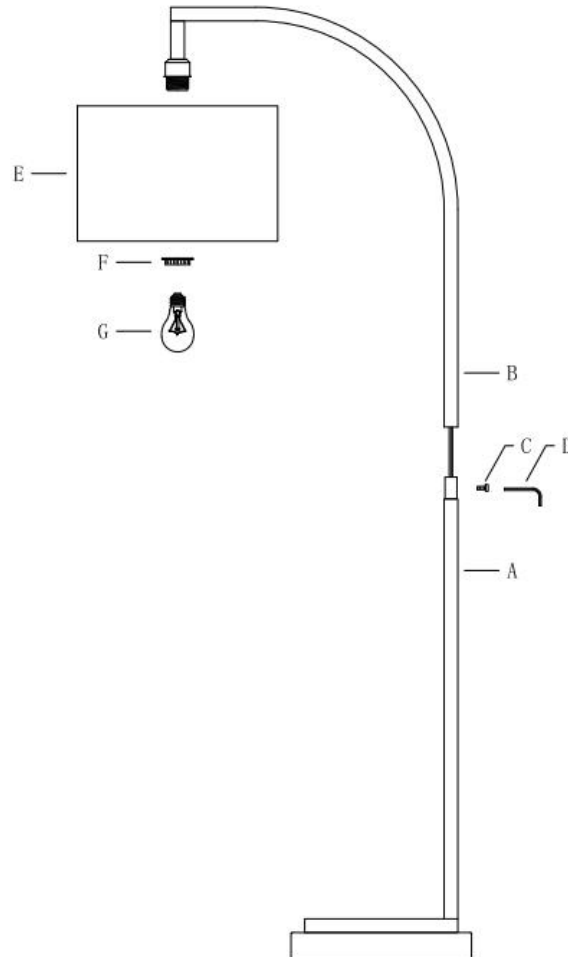

Step 1:Install the B part on the base with screw C and tooling D.

Step 2:Put the shade on the socket.

Step 3:Fixed lamp shade,screw with the socket ring tightly.

Step 4: Install the bulb(Not including)

Step 5:Check the voltage 120V,then plug in the power supply and turn on the switch which on the lamp holder.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.