

# Assembly Instruction: CVFNR5090


A X 2




B X 2



C

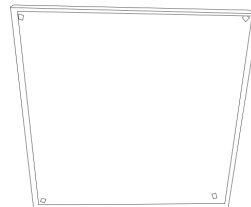


1

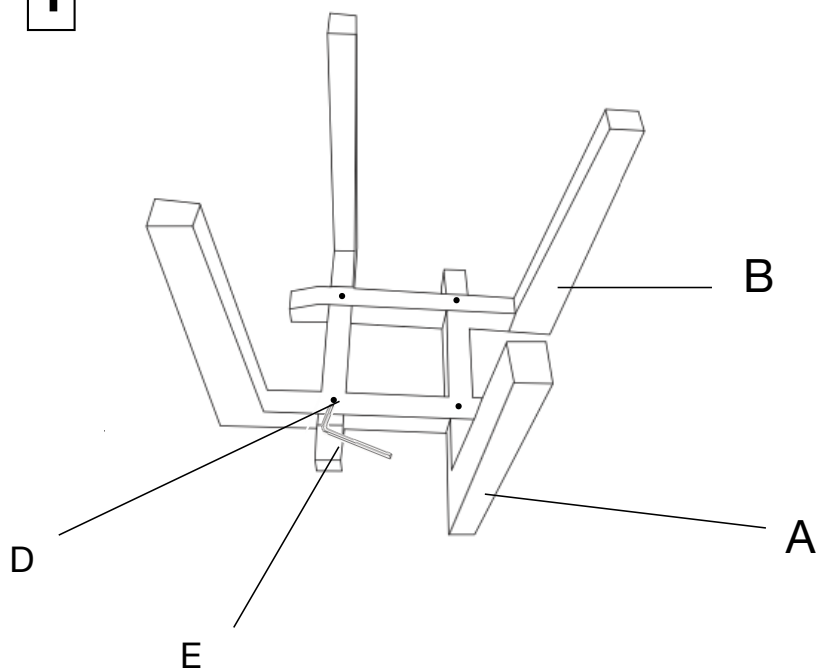

D  = X4

E  = X1

2

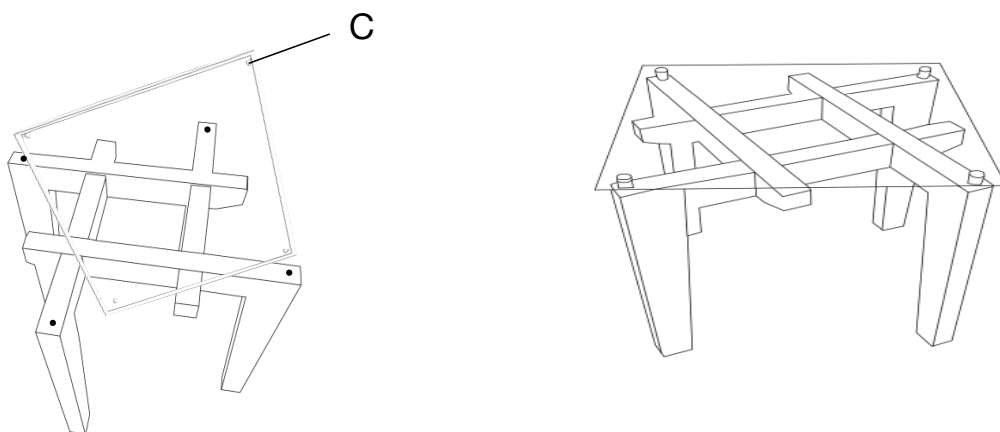

Note- Rotate the glass till all holes are aligned to the hardware before the final assembly.