


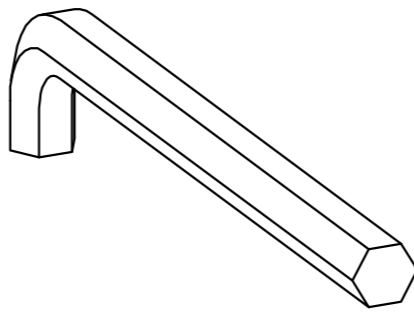
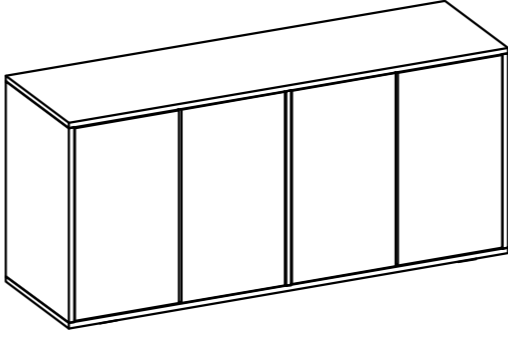
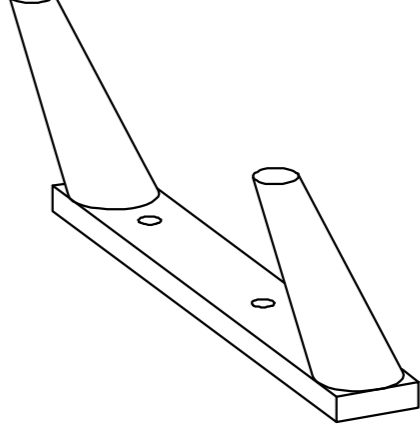

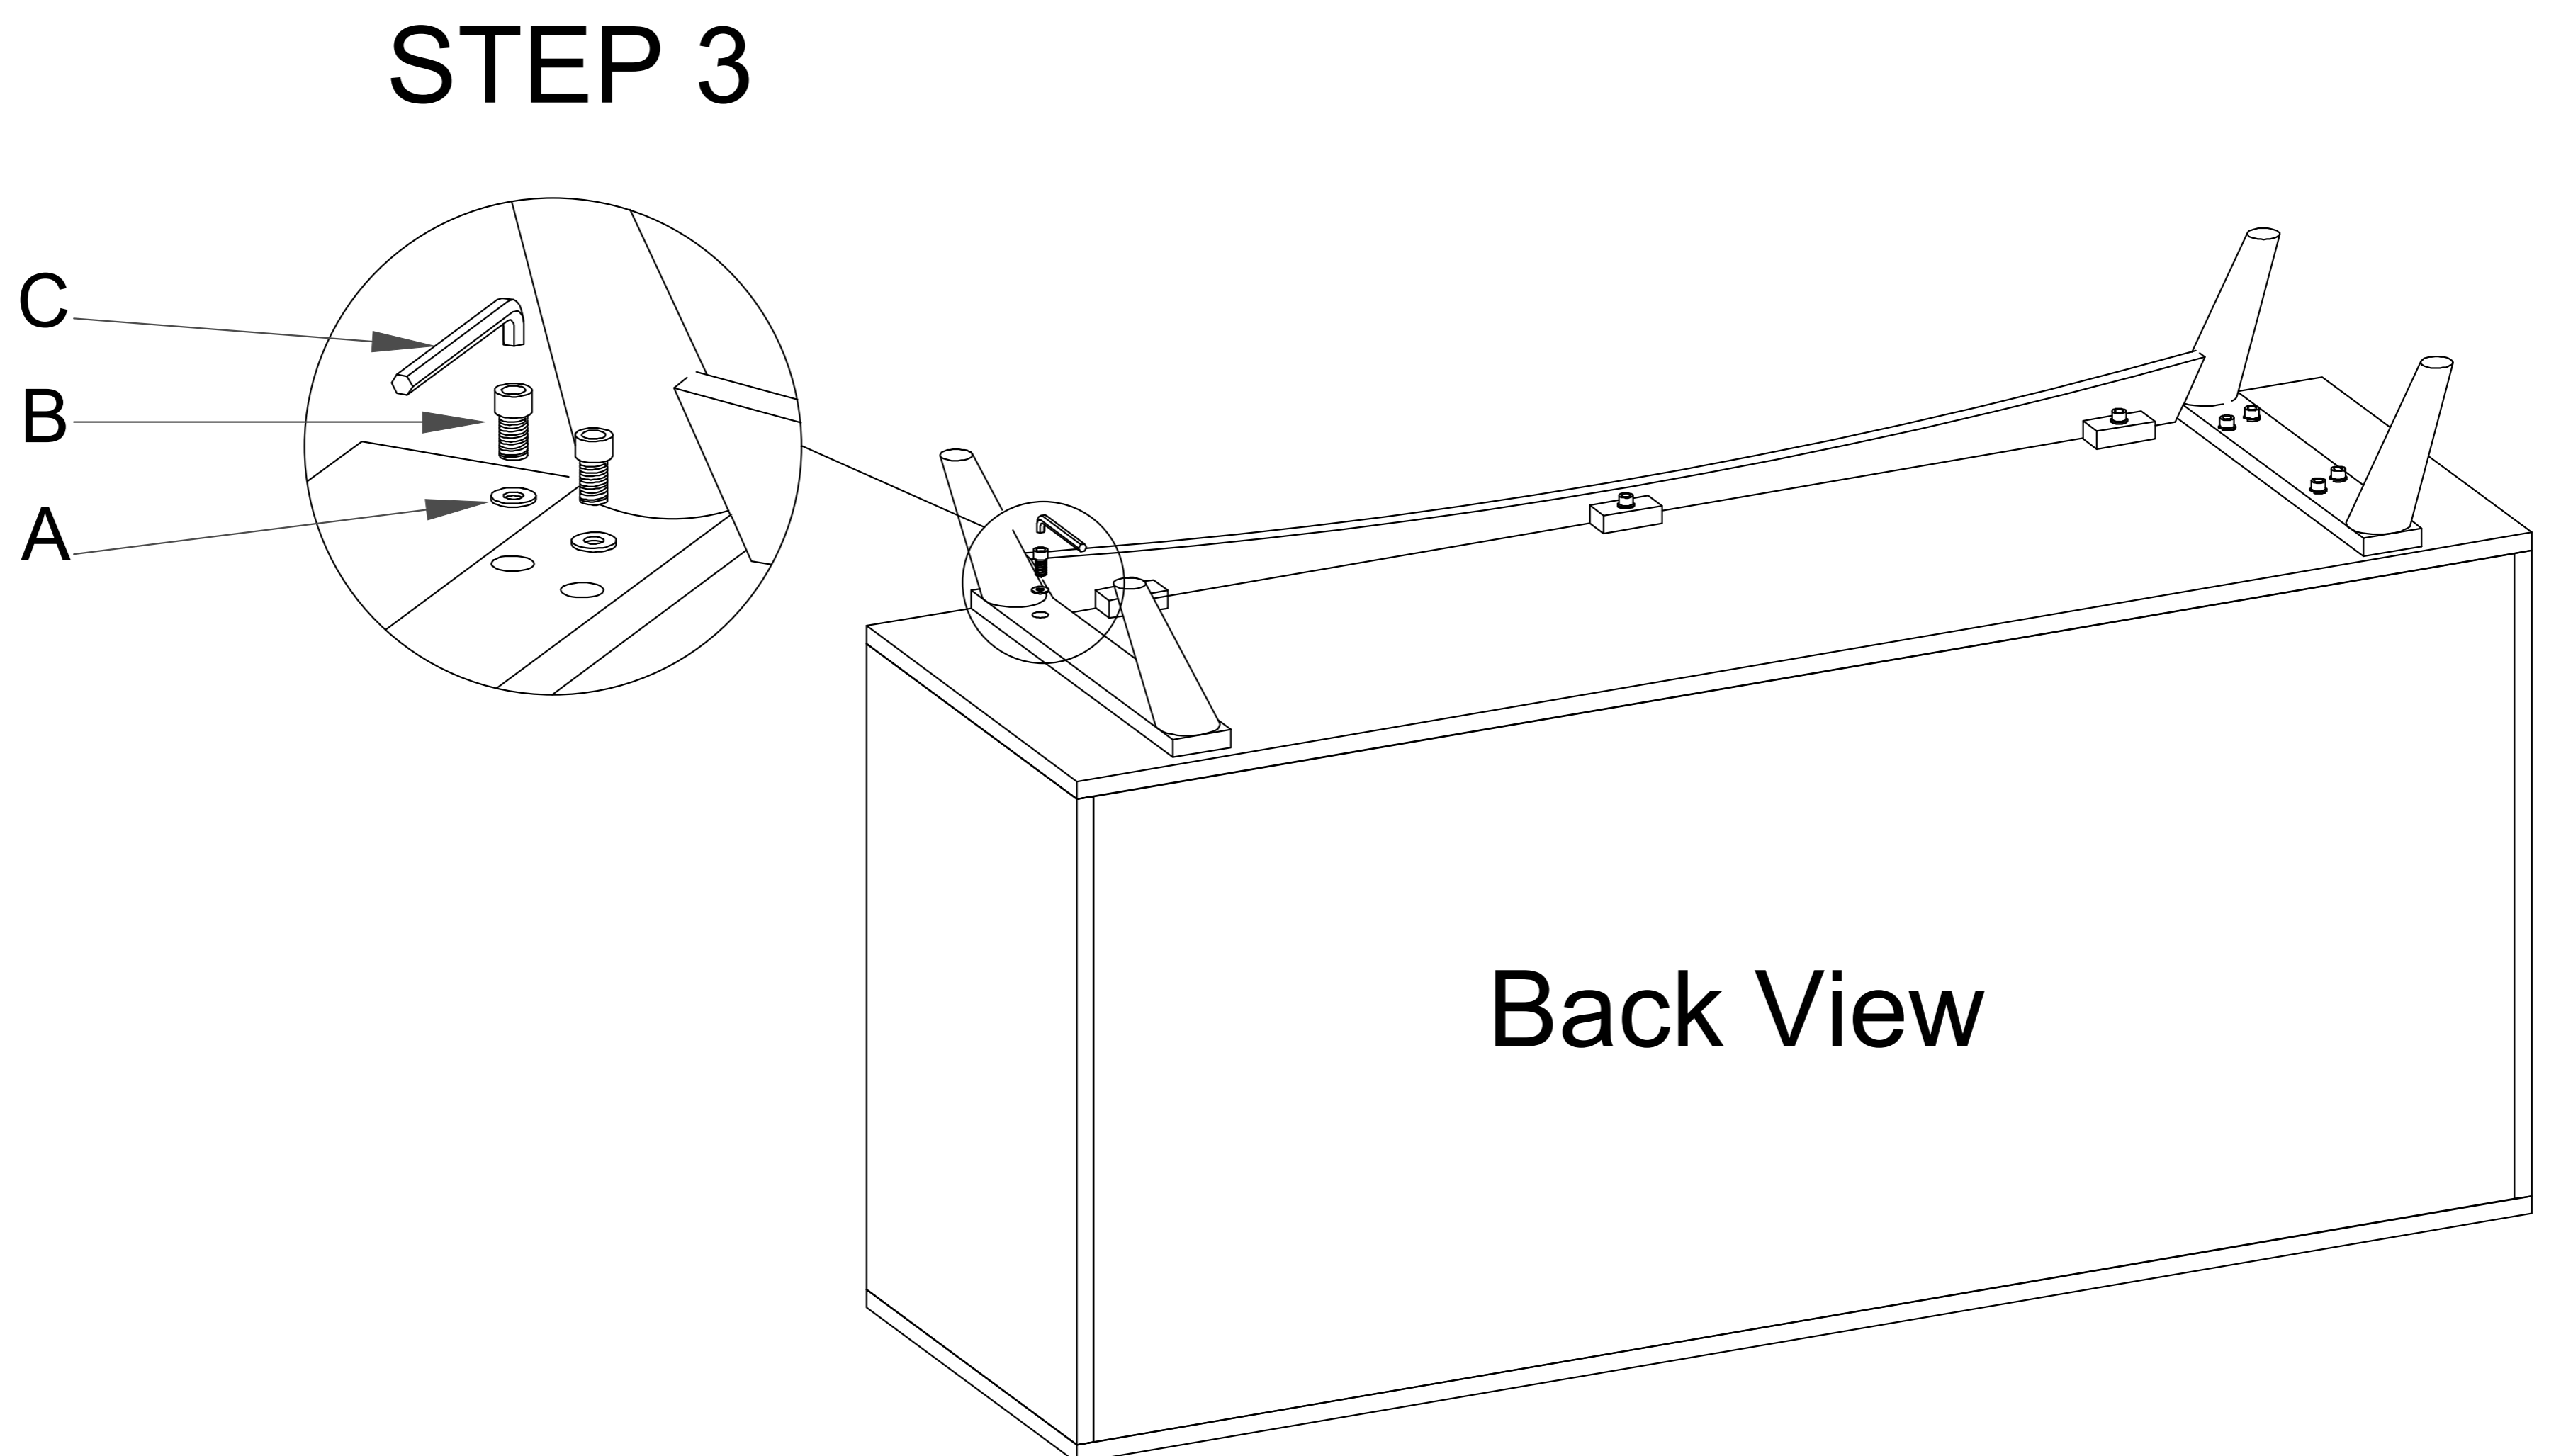


ASSEMBLY INSTRUCTIONS

ITEM # CVFNR 850



PART#	A	B	C	D	E	F
Image						Door Handle 
Quantity	11	19	1	1	2	4

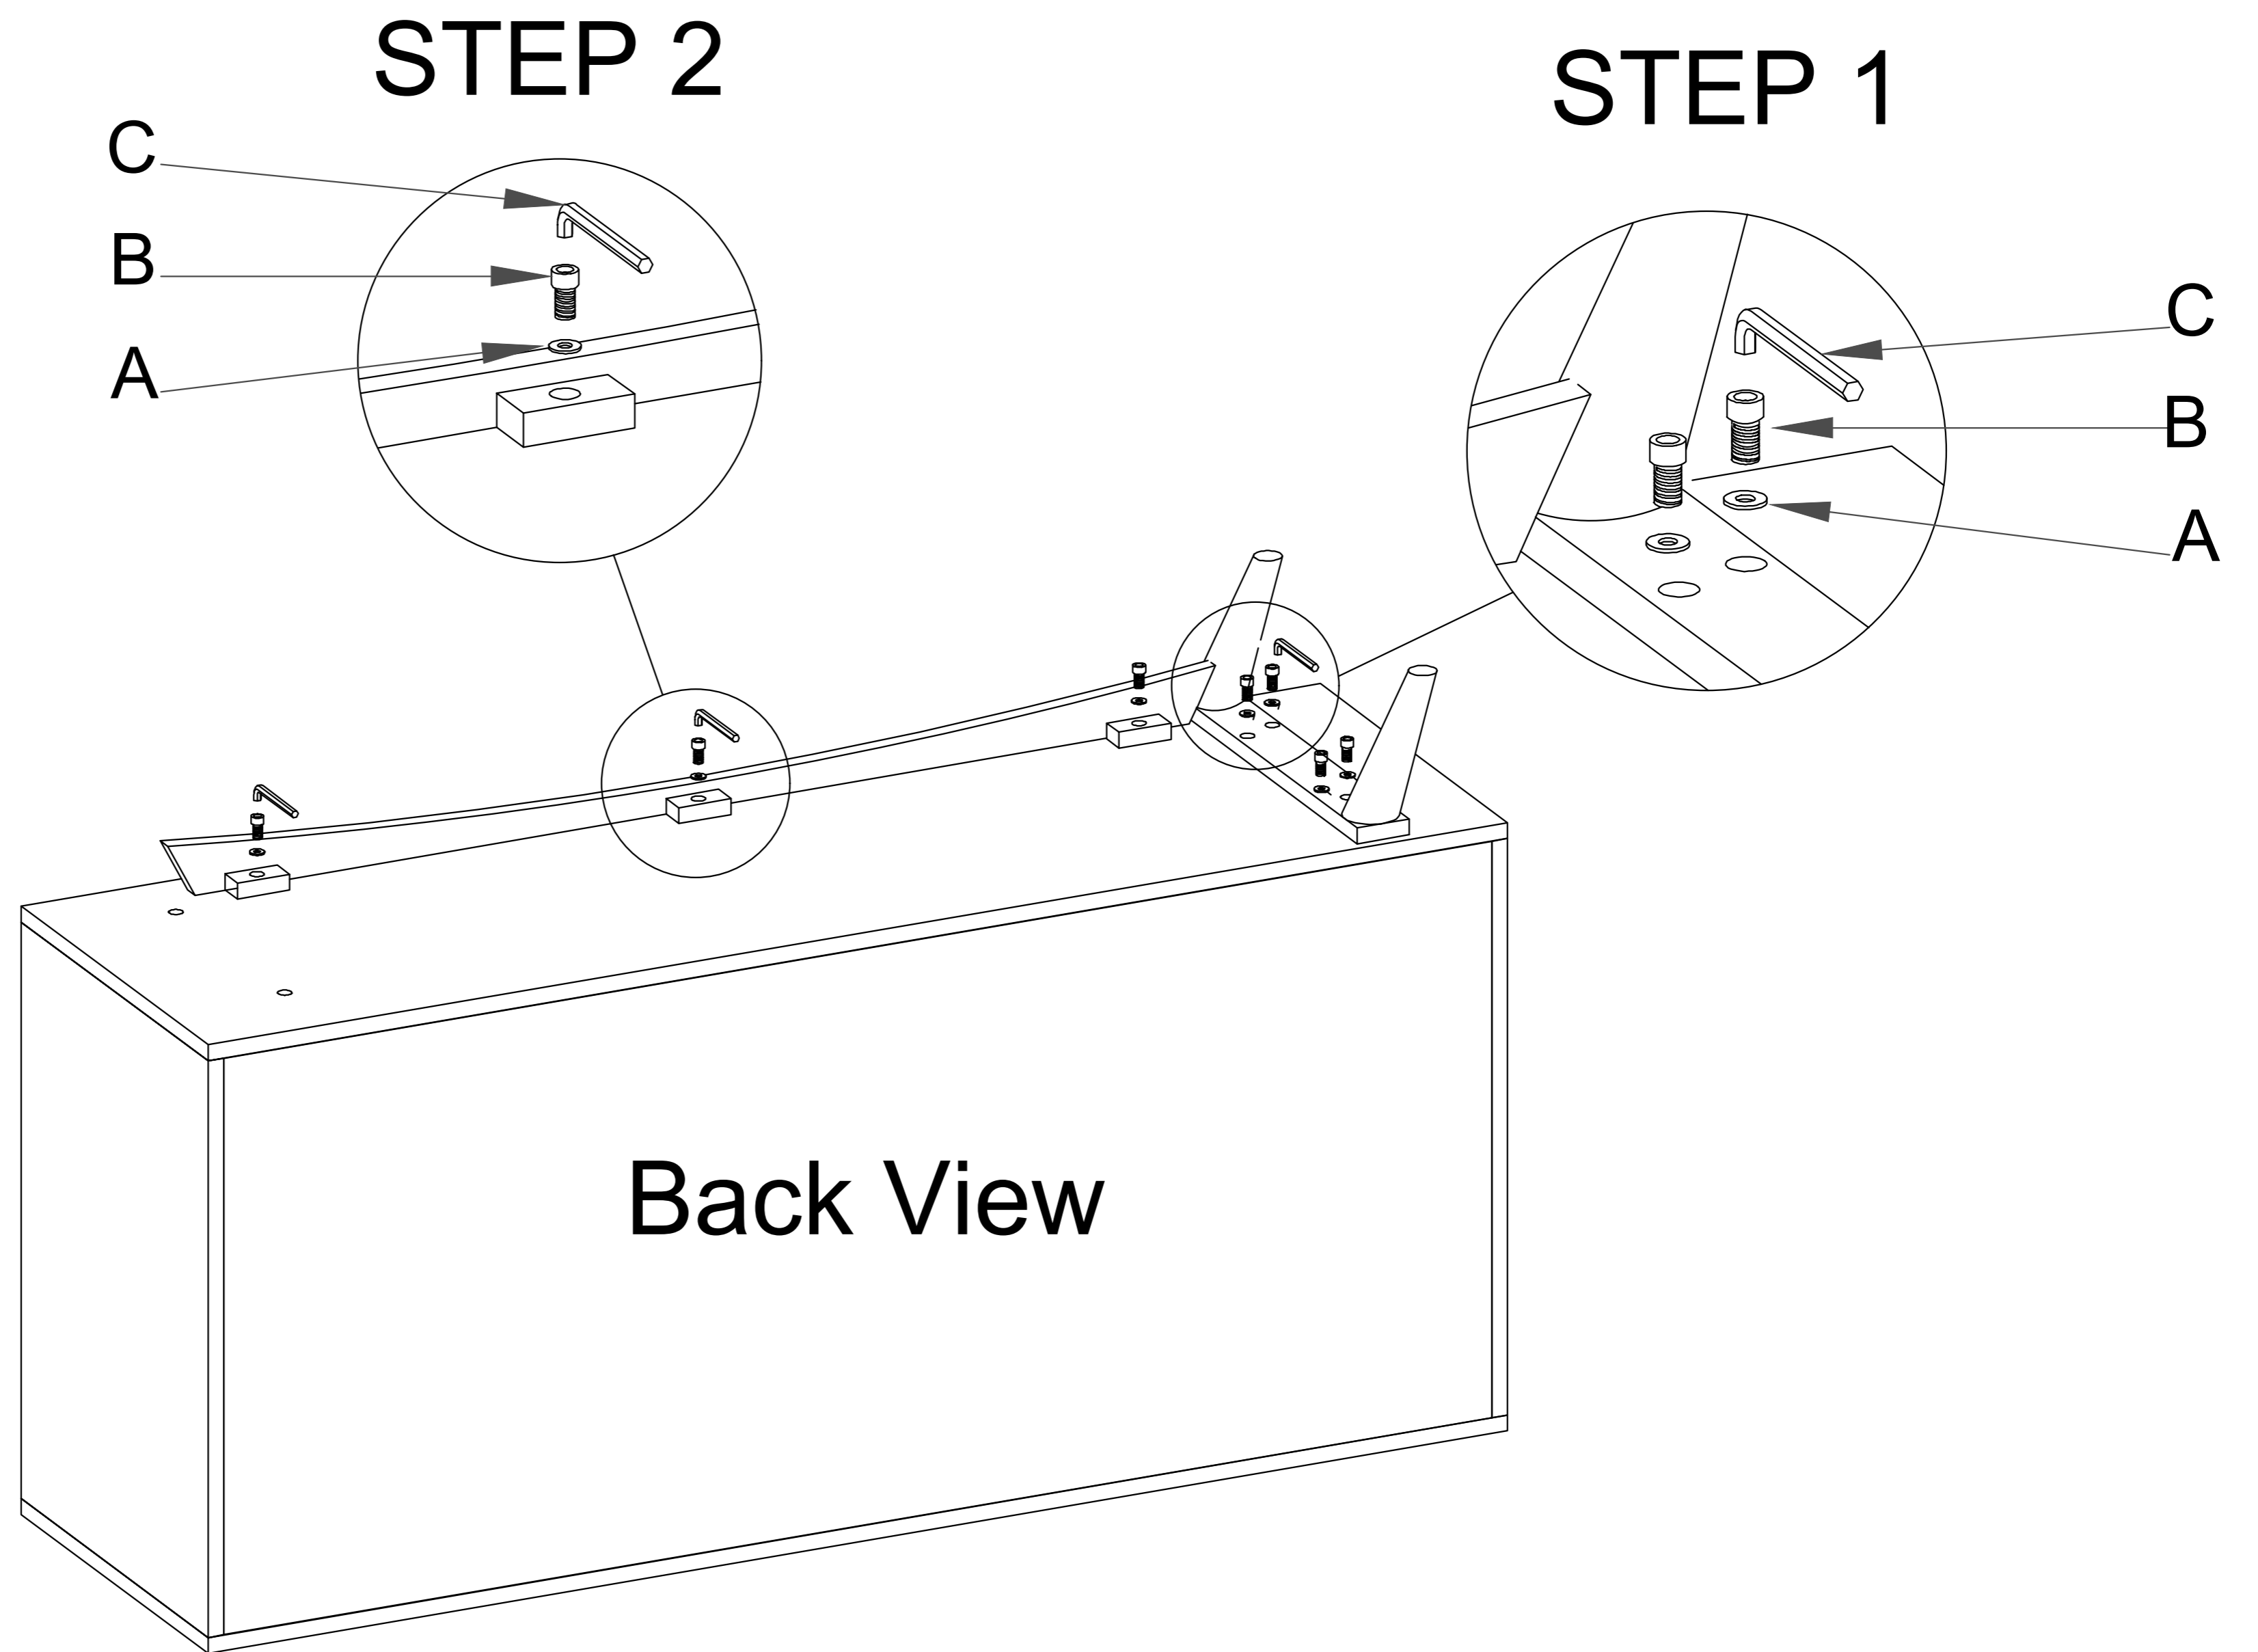

ASSEMBLY INSTRUCTIONS


STEP 4

Front View

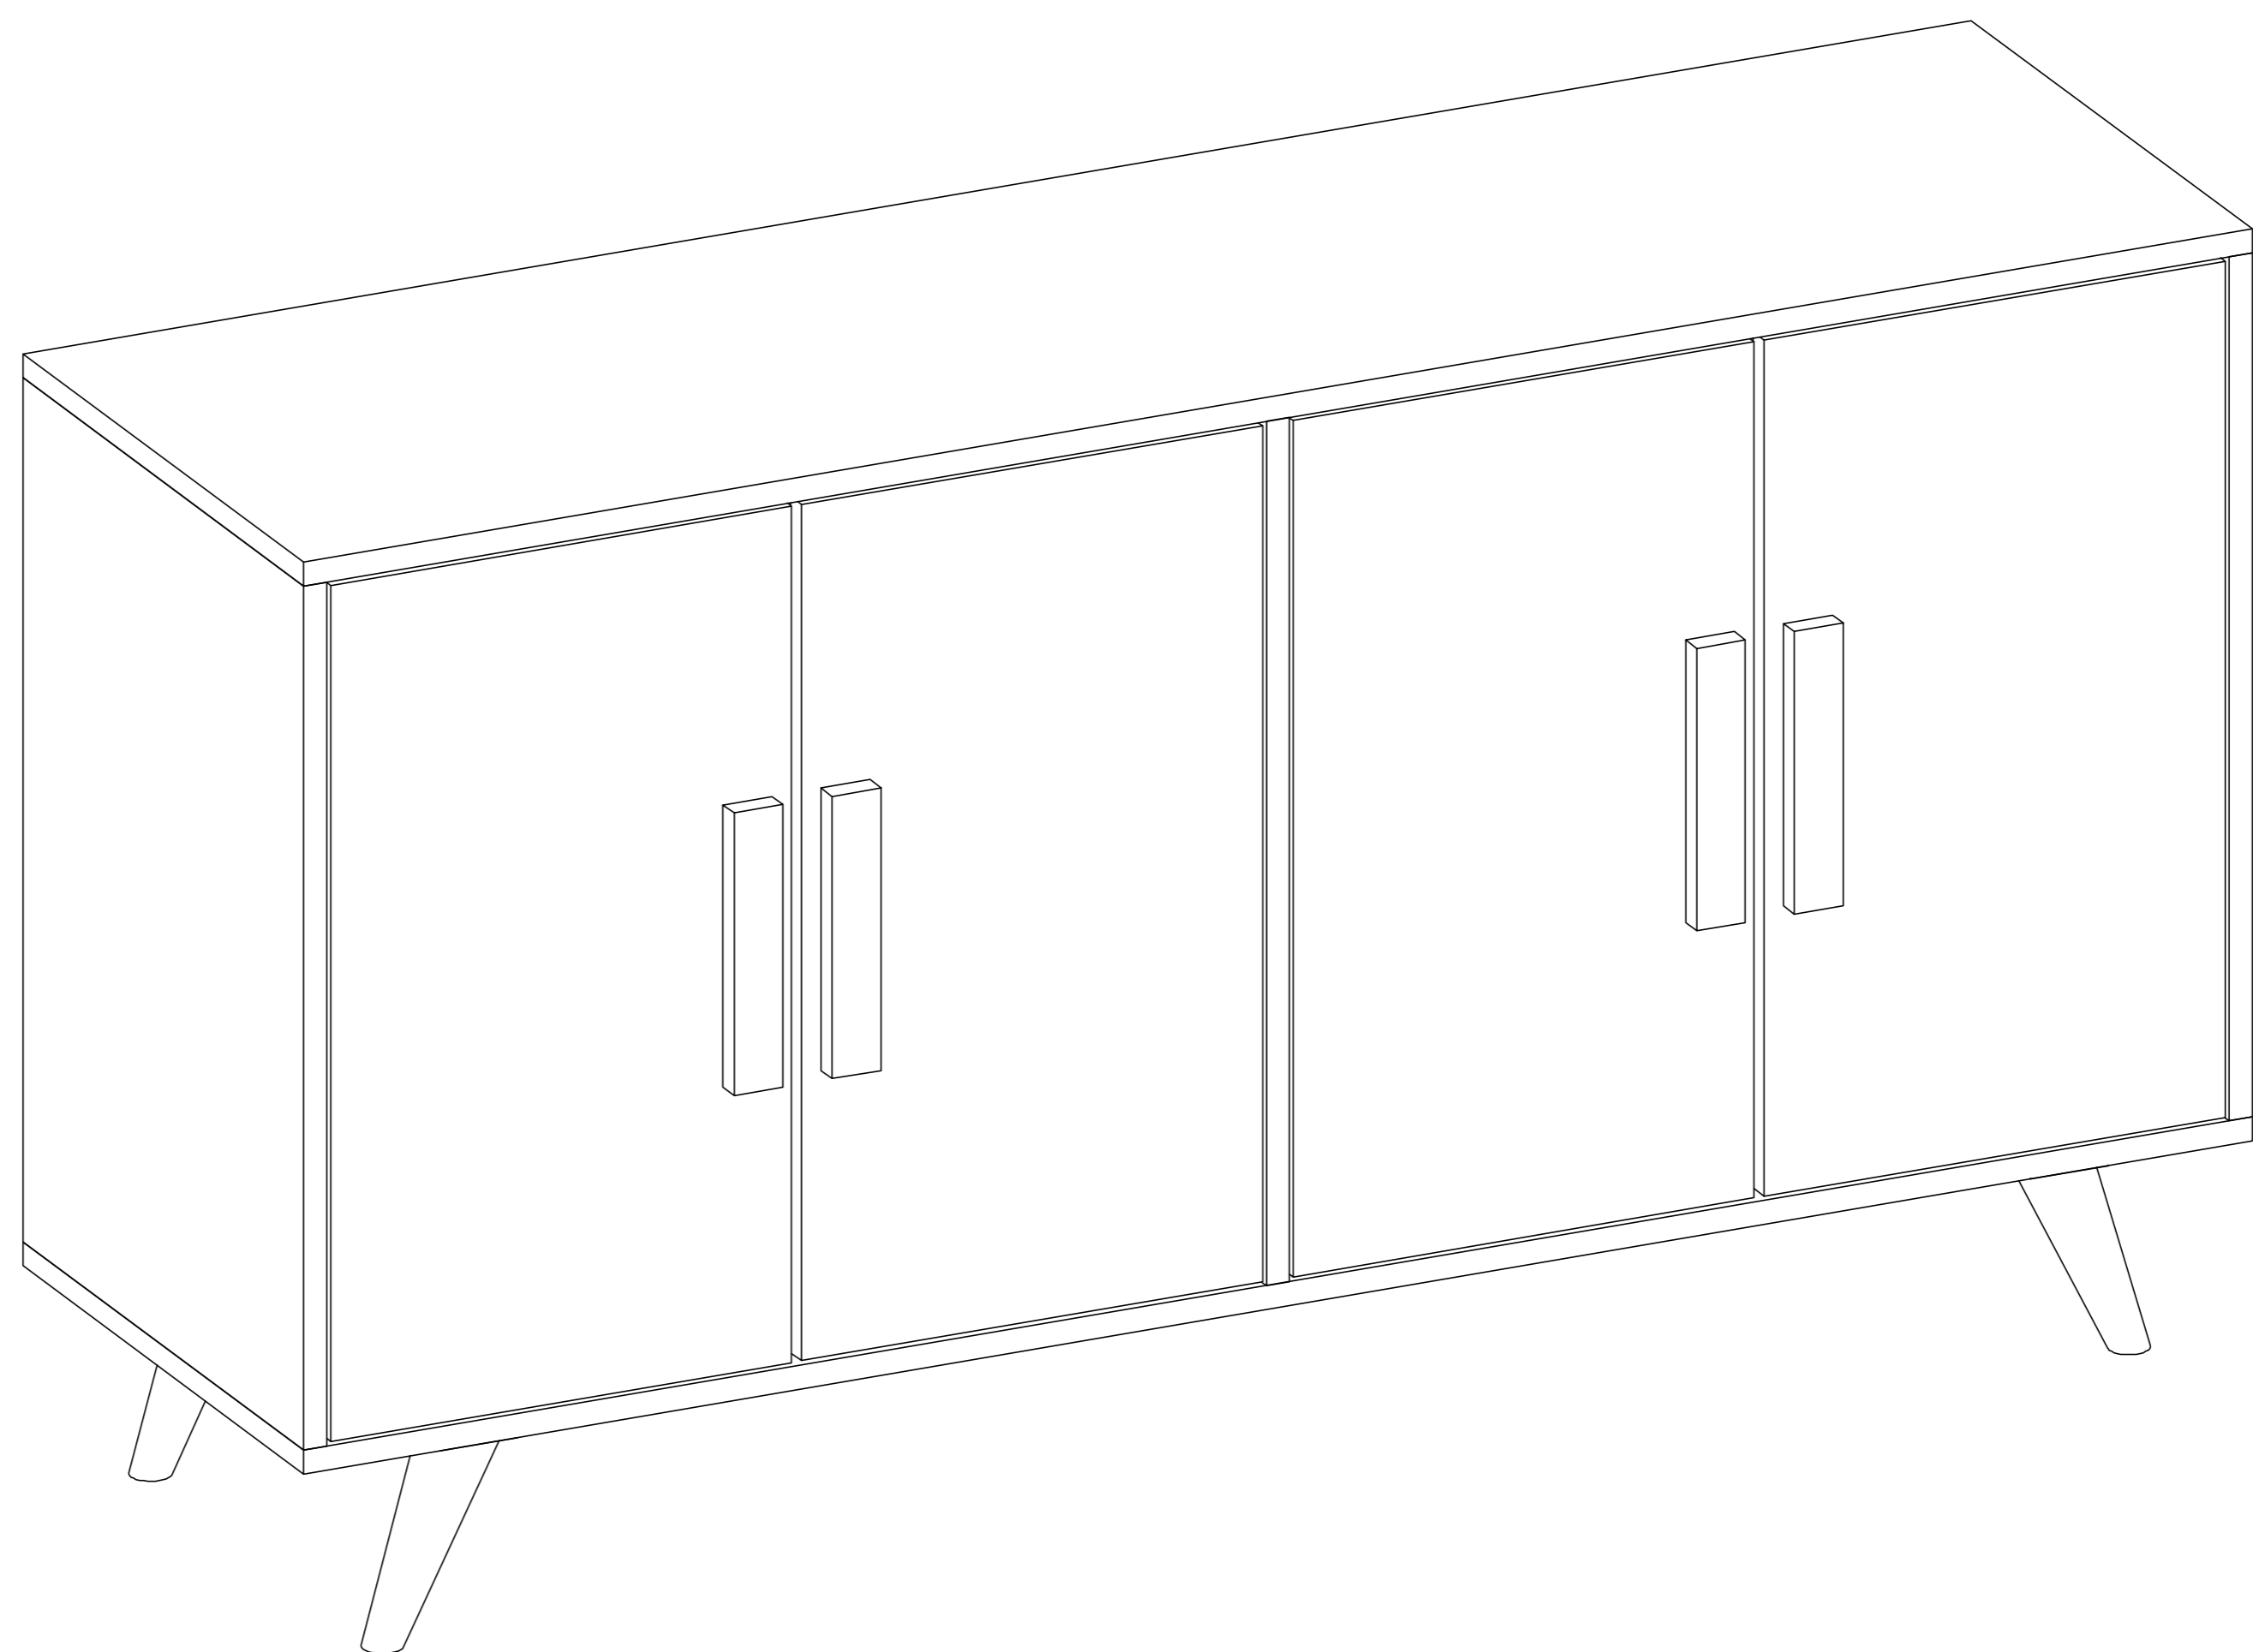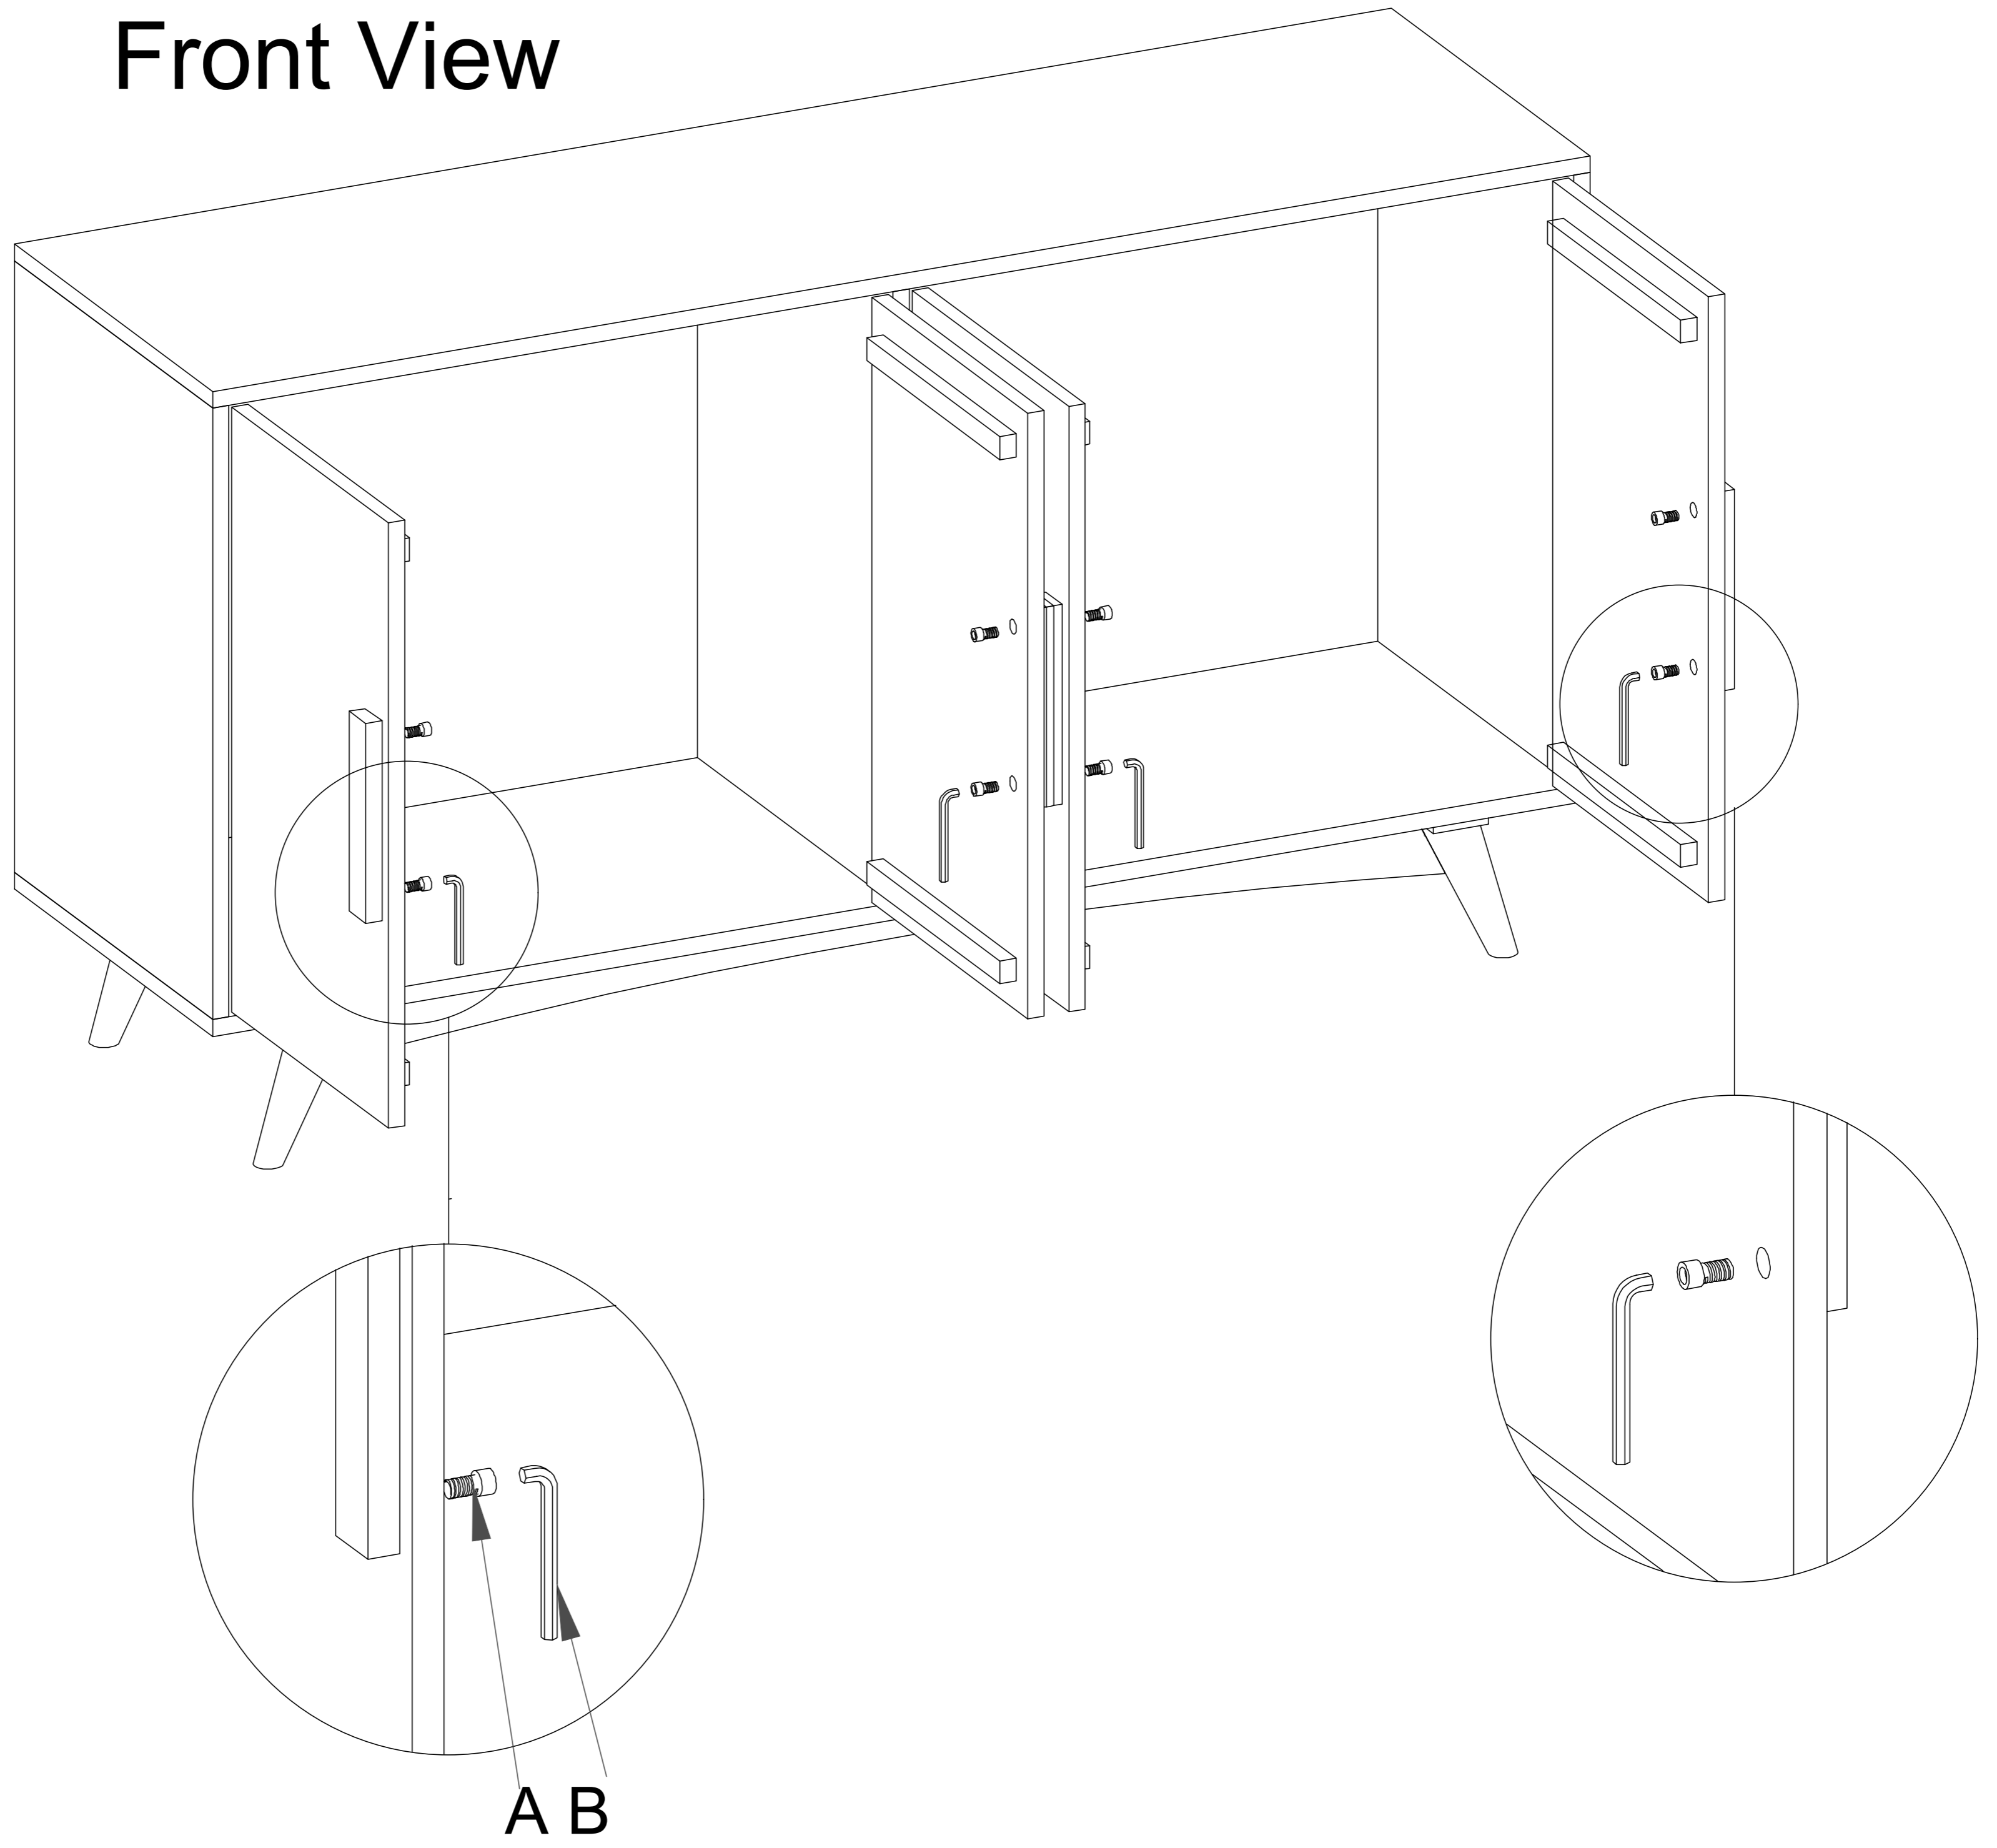


ASSEMBLY INSTRUCTIONS

A X 4

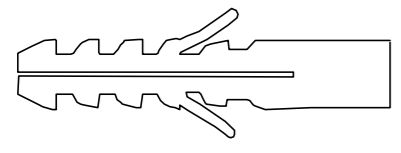


B X 4

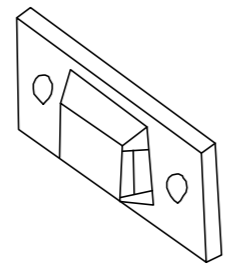


C X 4

wall for
scrow

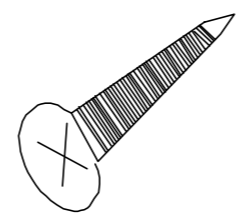


D X 2


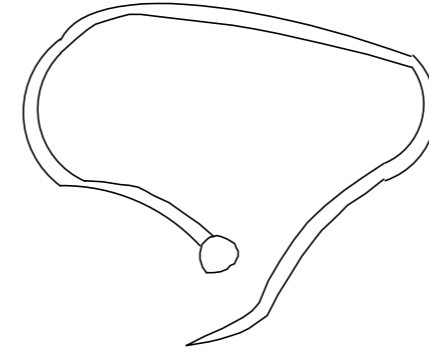


E X 4



cabinet for
scrow

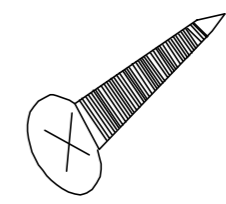

STEP 5

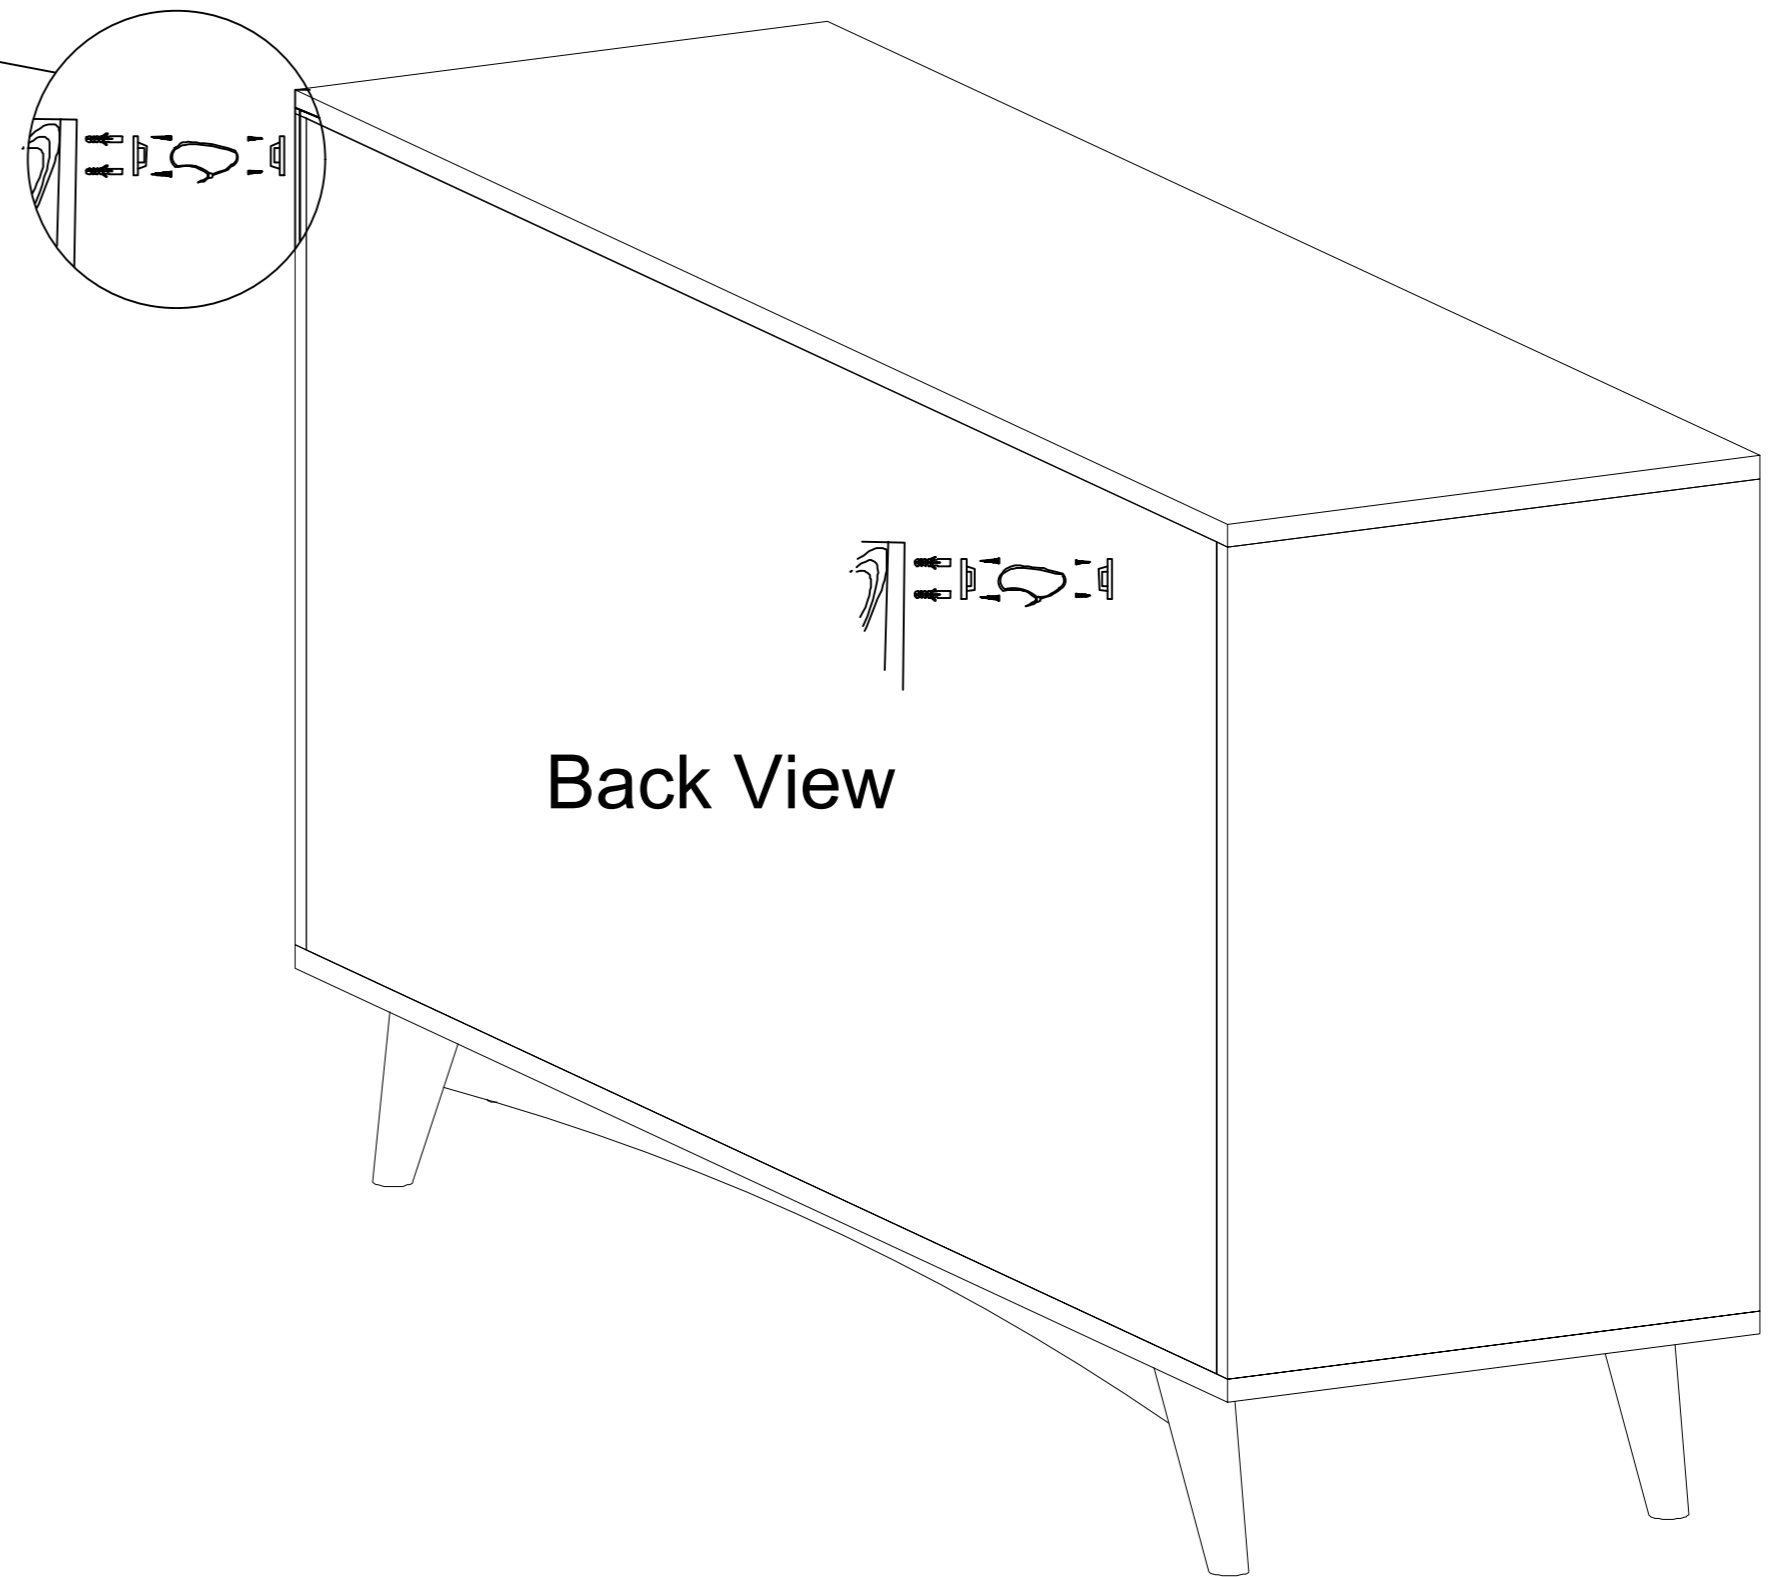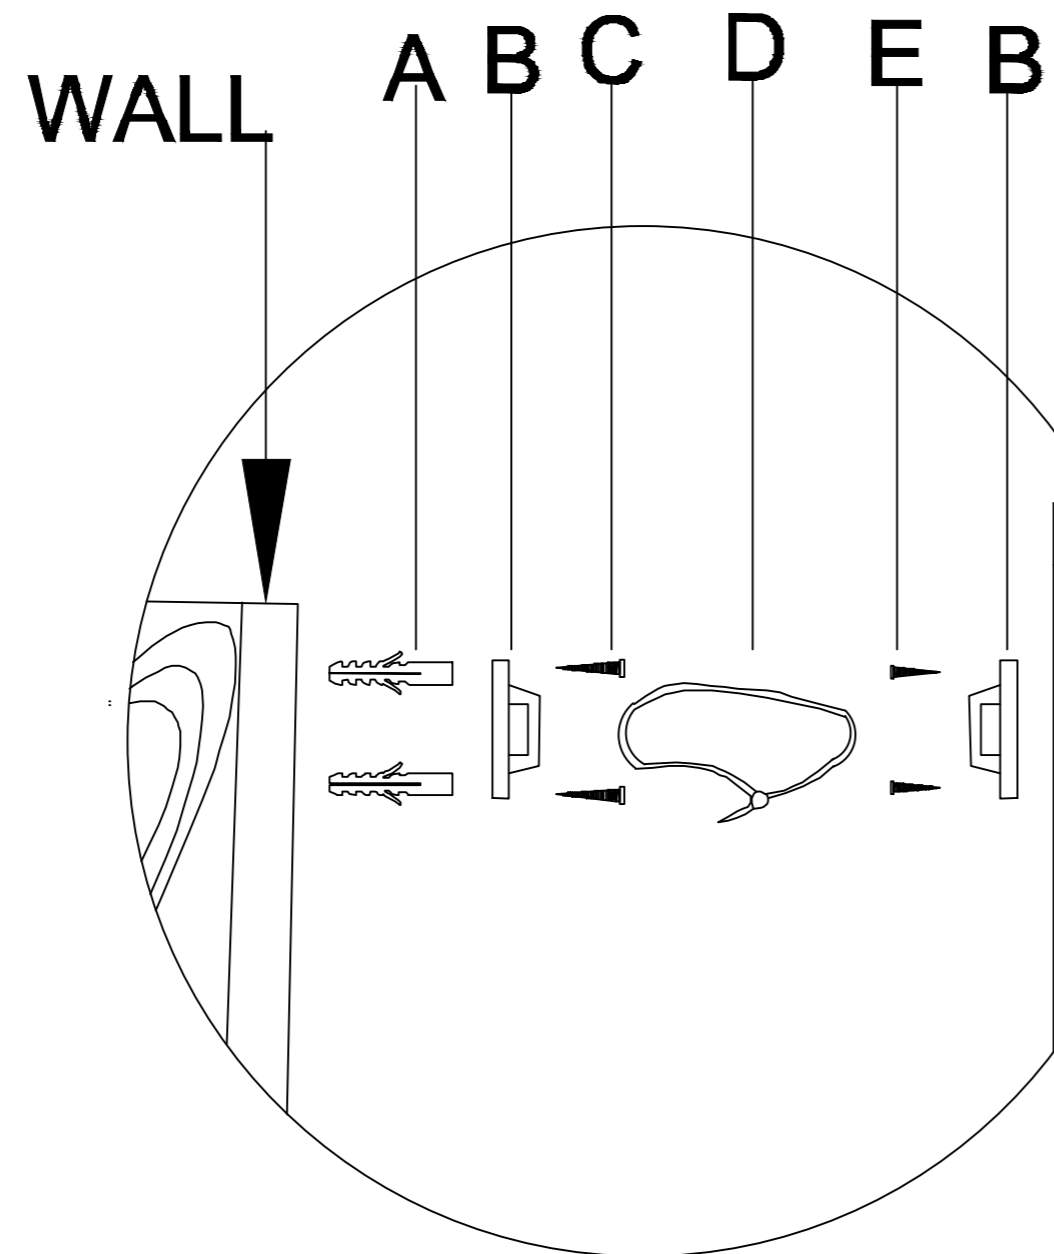

STEP 6

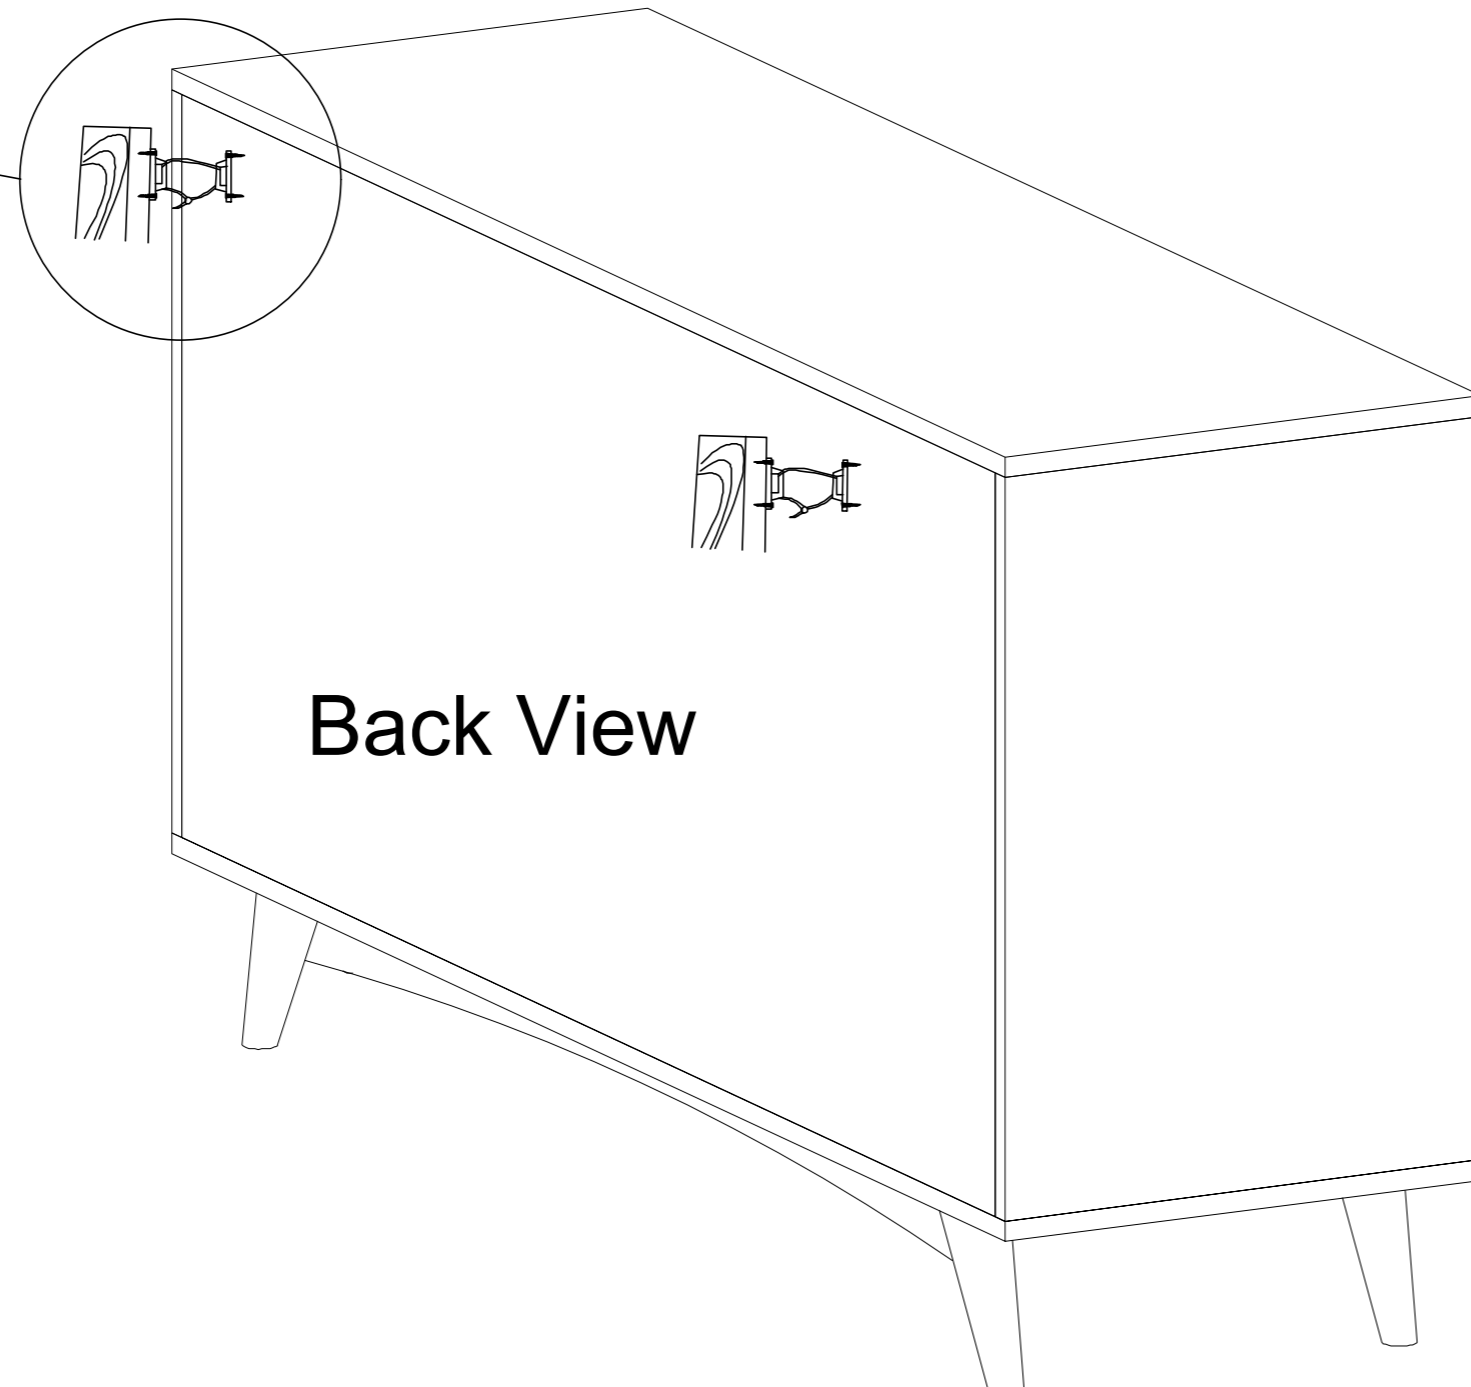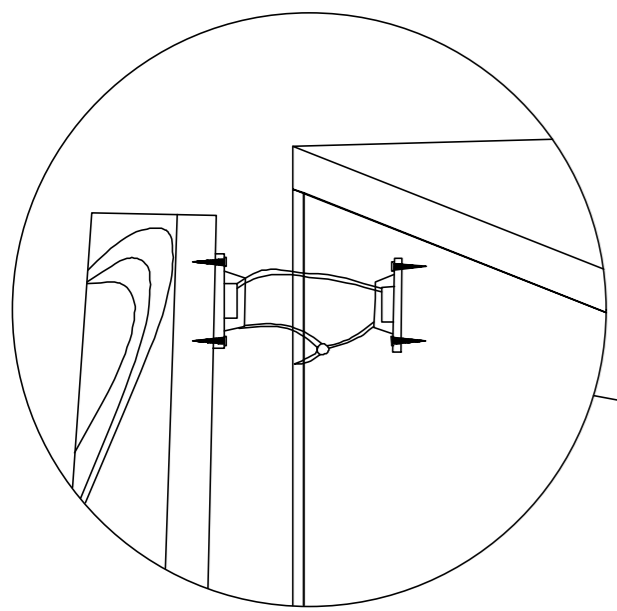

FINAL PRODUCT

