




Installation for Universal Mower Canopy
Part # 3641S




Installation time approximately 20 minutes

Hardware kit for 3641S

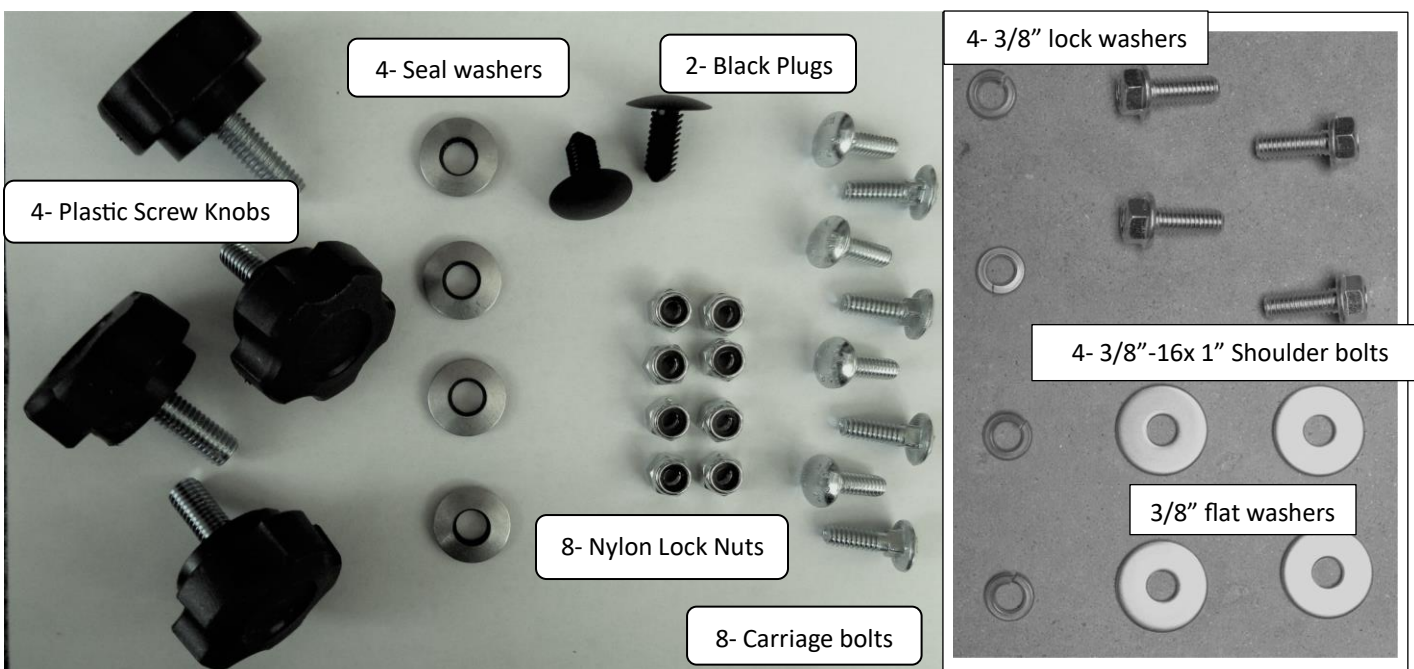


Brackets provided will fit 2"x2", 1.50"x3", 1.75"x3" and 2"x3" ROPS.

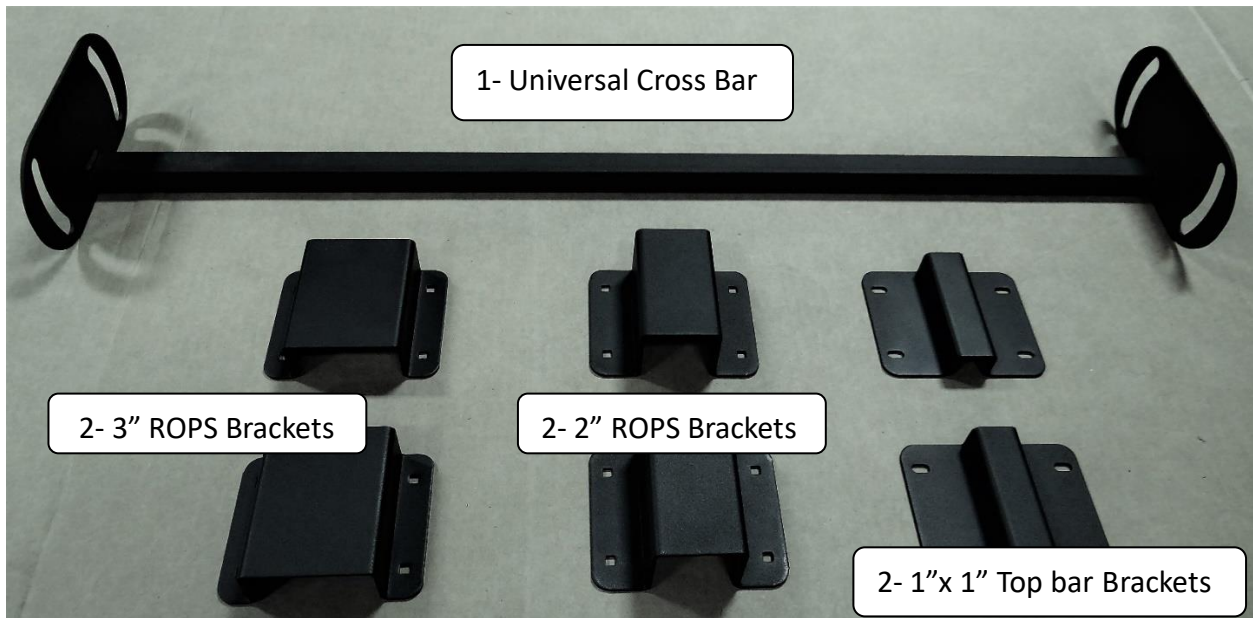

1. Center the universal cross bar on ROPS as pictured.



2. Attach using $\frac{1}{4}$ "-20 carriage bolts, $\frac{1}{4}$ " lock nuts, 2 -1"x 1" top bar brackets and the correct ROPS brackets as shown. Make sure the universal cross bar is centered and the ROPS brackets are evenly spaced. It is important to tighten the bolts evenly without bending brackets to allow for maximum contact to all surfaces.

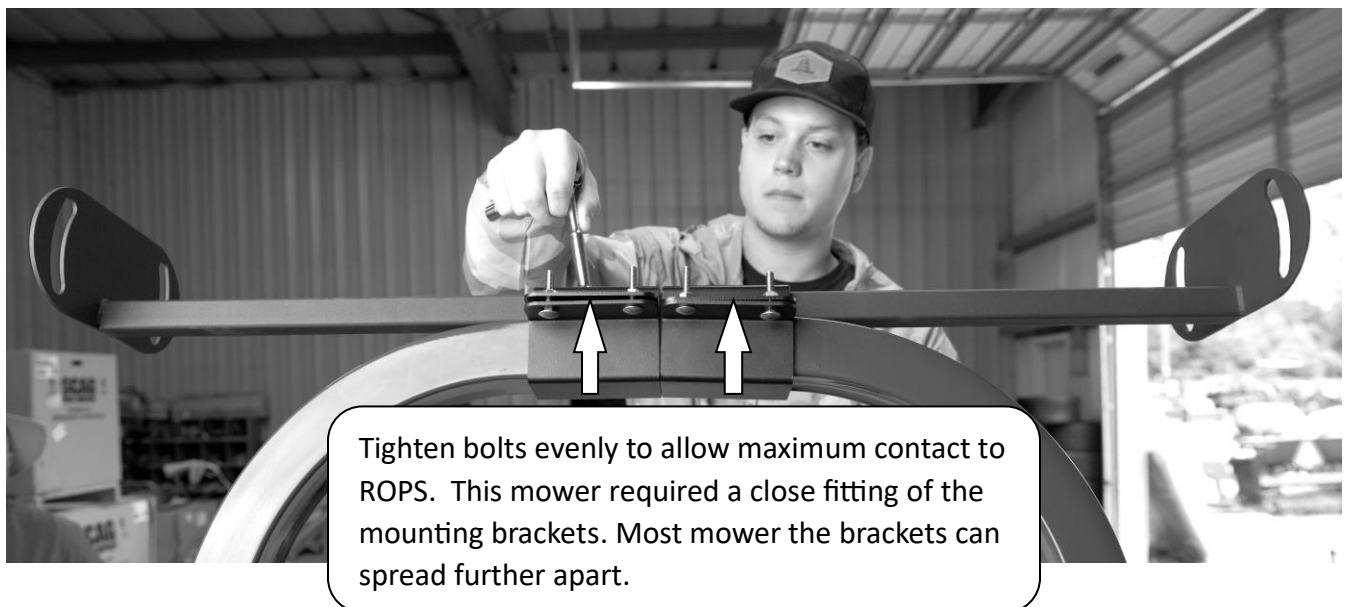

3. Mounting Options




Option 1 For a removable canopy use the Screw Knobs, lock washers and seal washers provided for easily removable canopy.



Option 2 For a permanent hold on Canopy. Use the bolts, lock washers, and flat washers to secure.

The canopy can be adjusted by the user to a forward or aft position for operator's preference. It is important to snug plastic screw knobs securely after adjusting.

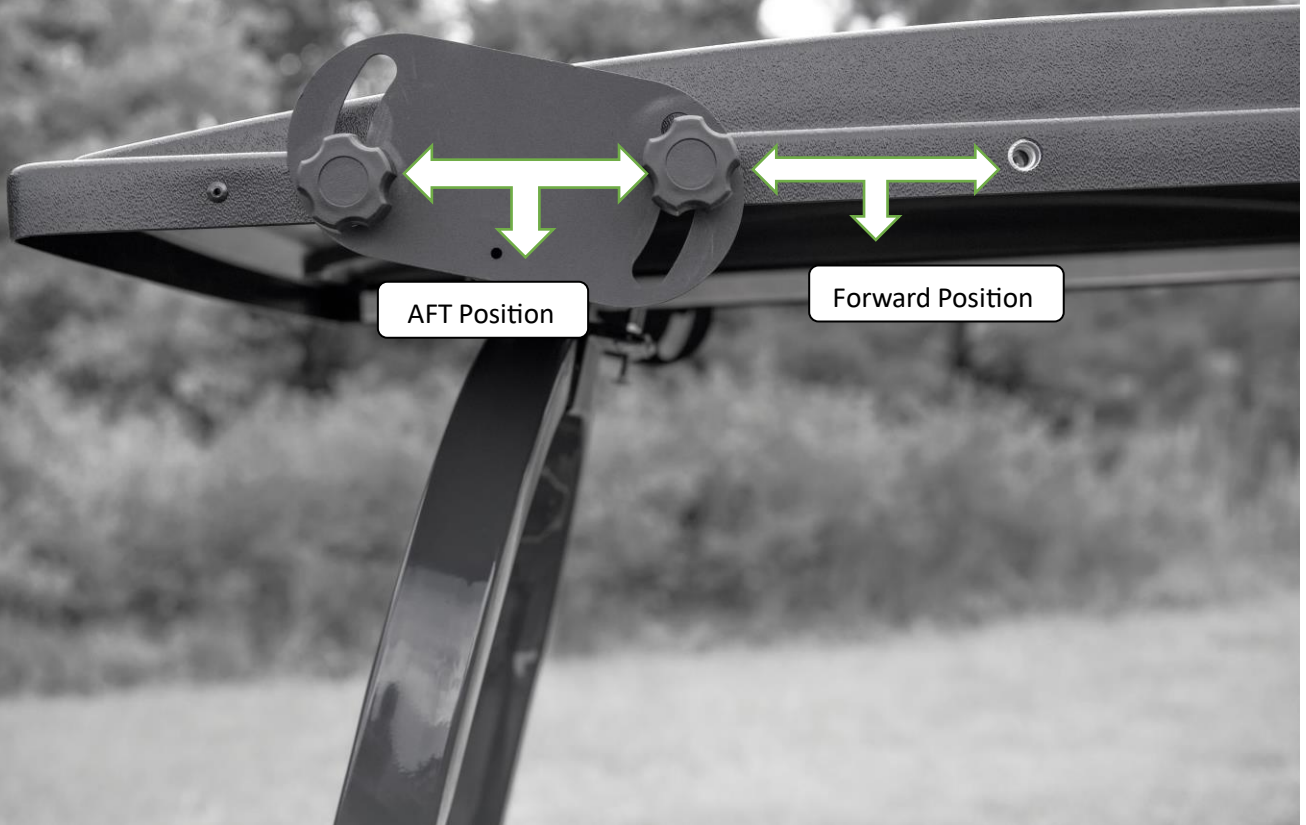

*****Take five minutes and remove the canopy before transporting.*****