




Installation for Universal Mower/Tractor Canopy with ROPS

Part # 4550




Installation time approximately 30 minutes

Hardware Kit for 4550

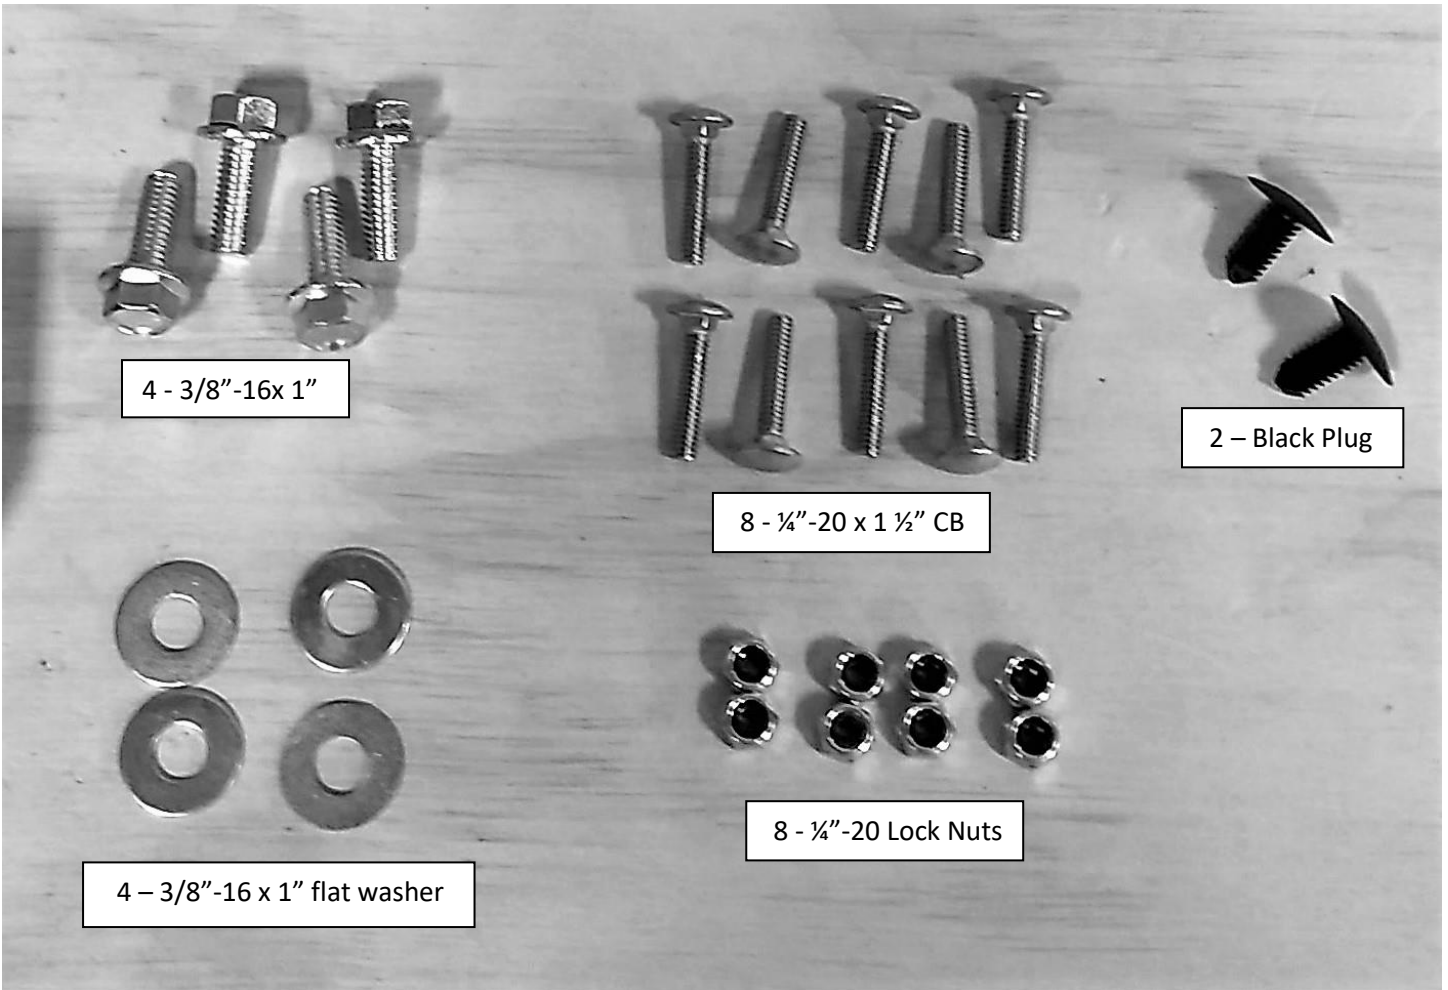


Brackets provided will fit 2"x2", 1.50"x3", 1.75"x3" and 2"x3" ROPS.

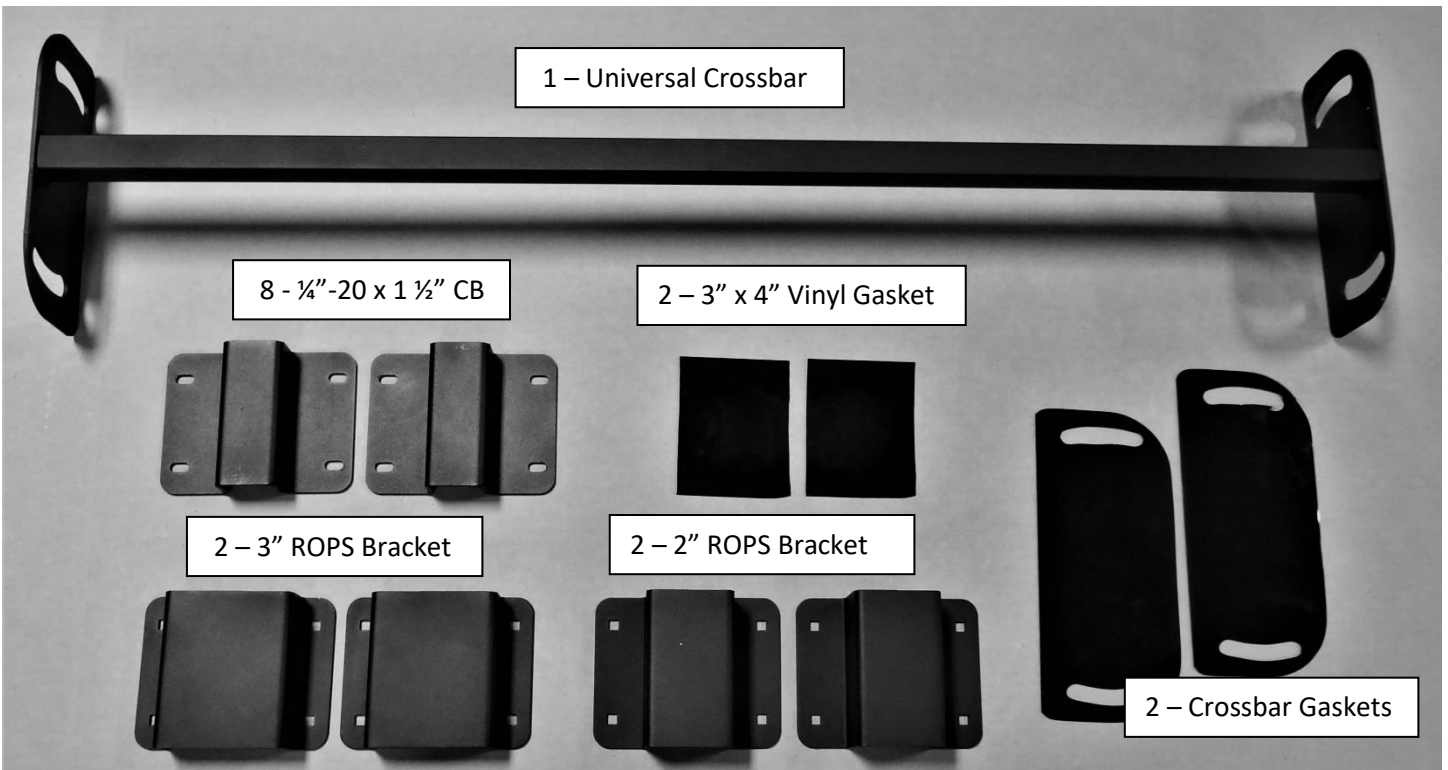

Mounting the universal crossbar bracket.



1.Center the universal cross bar on ROPS as pictured. \*\*Notice slot orientation\*\* Your ROPS may be leaning forward or backward it is important to position slot to level top properly to your ROPS angle.

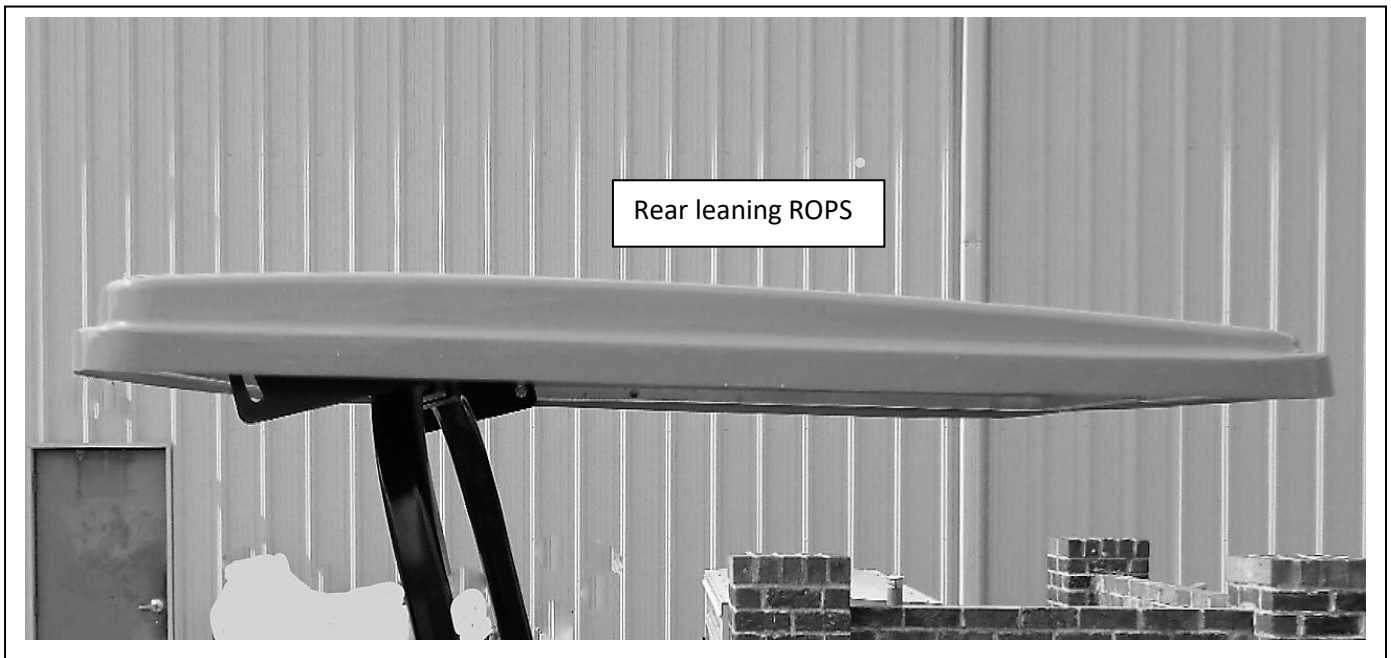




2. Insert the 3" x 4" black vinyl gasket as pictured into the Universal Crossbar Bracket.




### 3. Choose the correct ROPS Bracket

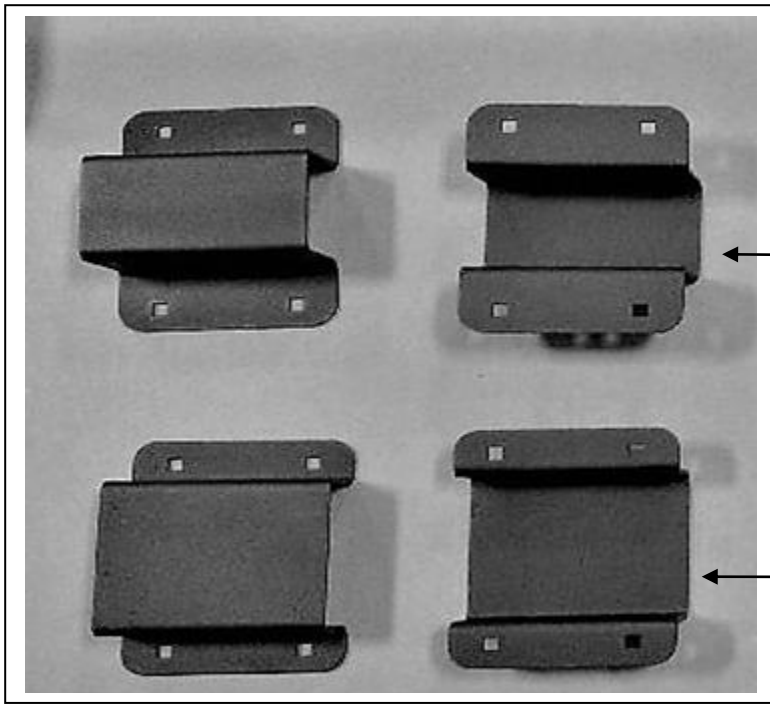

2" Bracket will fit 2"x2" ROPS

3" Bracket will fit 3"x1 1/2", 3 x 1 3/4" and 3"x2" ROPS

Attach Universal Crossbar using 1/4"-20 1 1/2" carriage bolts, 1/4" lock nuts, the Universal Crossbar Bracket and the correct ROPS brackets as shown picture above. Make sure the universal cross bar is centered and the ROPS brackets are evenly spaced. It is important to tighten the bolts evenly using a crossing pattern to allow for maximum contact to all surfaces.

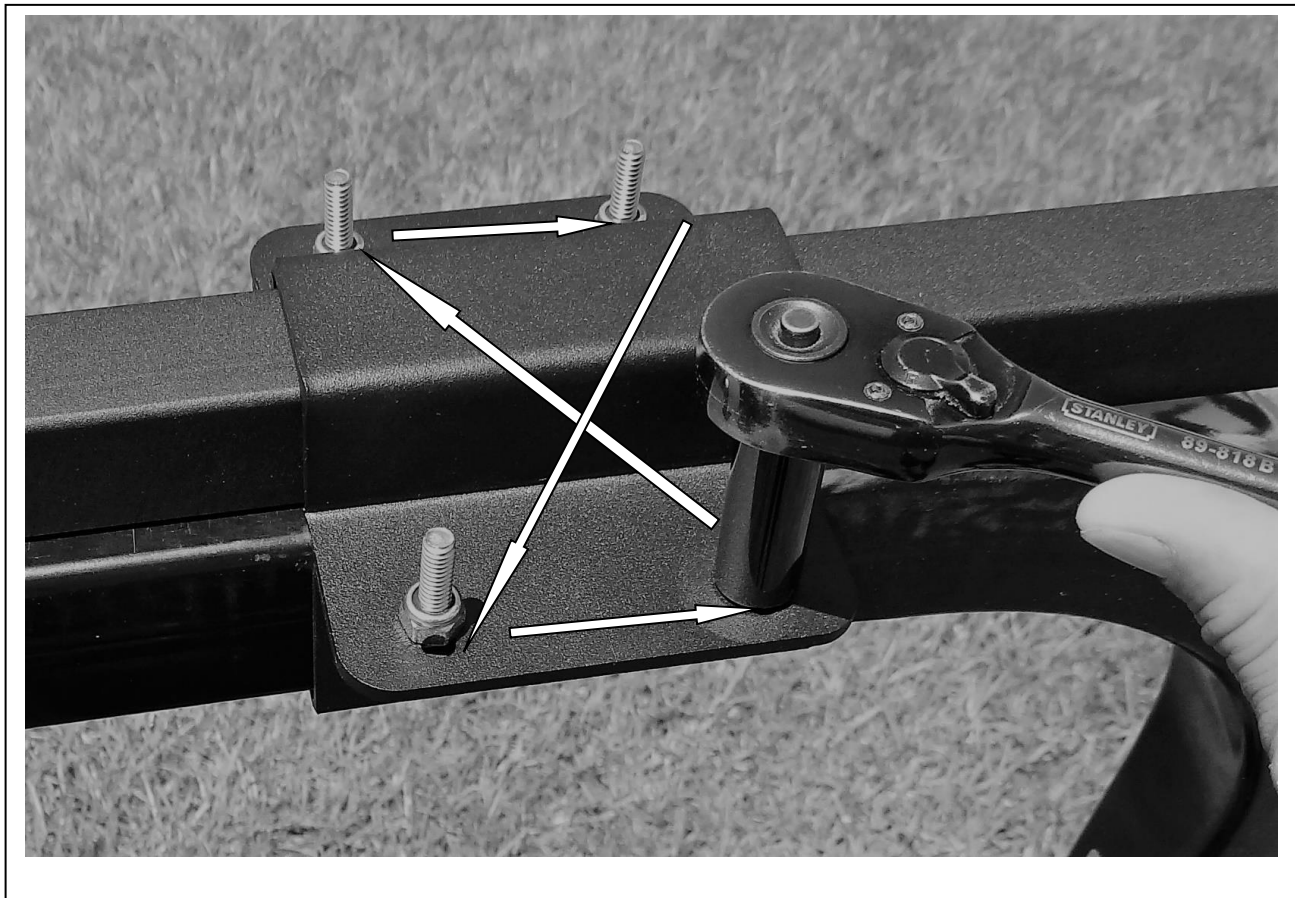




4. Mount canopy to bracket using 4 - 3/8"-16 x 1" flat washer and 4 - 3/8"-16x 1" flange bolts, do not tighten bolts, you'll need to put the Black Vinyl Crossbar Gasket in place as illustrated before tightening bolts.



There is a forward and rear mounting position, adjust to fit your ROPS. Plastic plugs provided for unused insert.

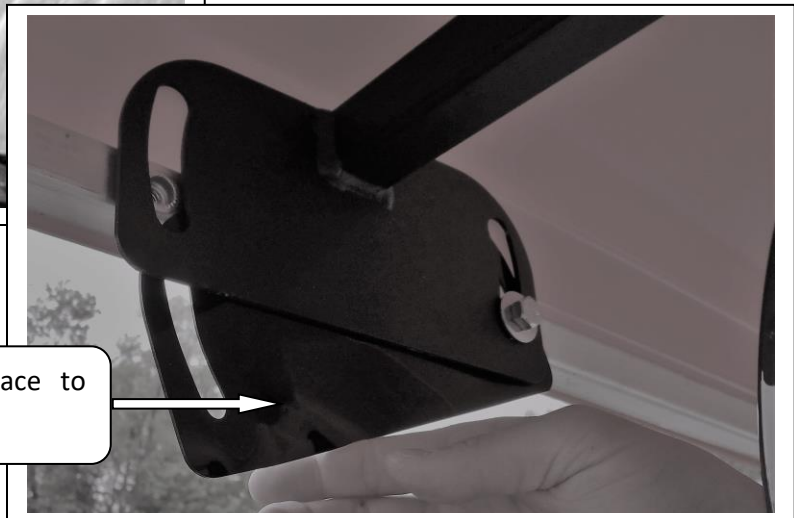

Note: Gasket needs to be in place to provide grip and prevent corrosion.

**Level canopy and tighten bolts ready to roll.**

Before transporting on highway take five minutes and secure canopy with a strap. If needed canopy can be removed easily and ROPS folded with the bracket mounted.

