



# REGENCY

Legacy Corner Credenza • LDSCCL6624, LDSCCL7124, LDSCCR6624  
& LDSCCR7124 • INSTRUCTIONS

Organize your parts. You will need a phillips screwdriver.

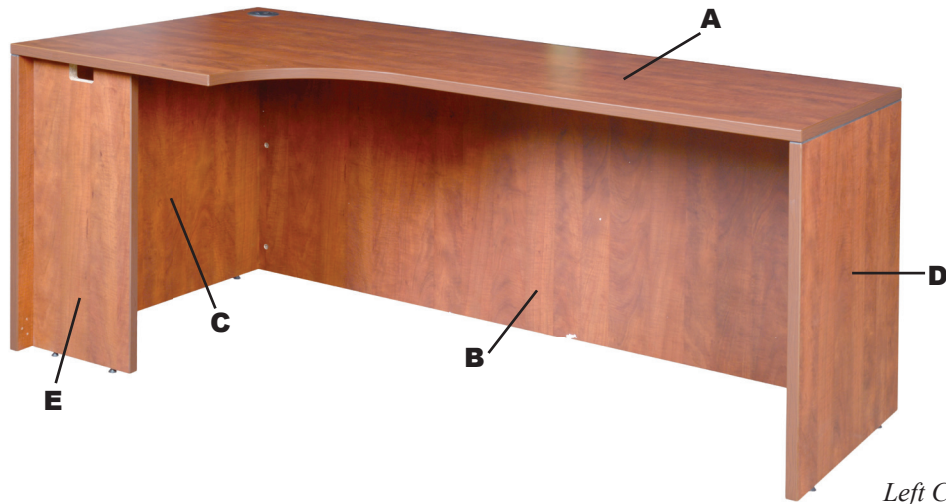

Parts :

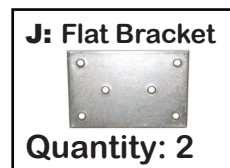

## IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.  
Check to be sure that you have all parts and hardware.  
Remove all wrapping materials, including staples & packing straps before you start to assemble.  
Do not tighten all screws/bolts until completely assembled.  
Keep all hardware parts out of reach of children.

Any problems or questions call Regency Office Furniture at 1-866-816-9822

# REGENCY

Legacy Corner Credenza • LDSCCL6624, LDSCCL7124, LDSCCR6624  
& LDSCCR7124 • INSTRUCTIONS

Organize your parts. You will need a phillips screwdriver.

**STEP 1 :** Place **Cam Pins(F)** into smaller holes on **Desktop(A)**, **Large Leg(C)** and **Small Leg(D)**. (See figure 1.)




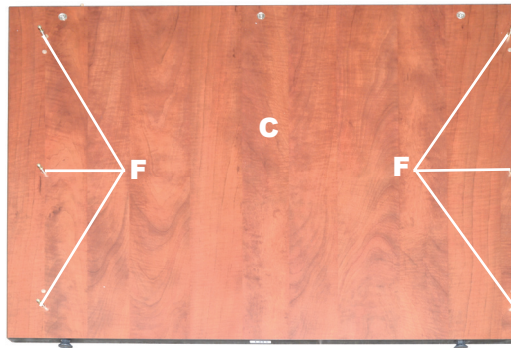


figure 1

**STEP 2 :** Attach **Small Leg(D)** to **Desktop(A)** by lining up **Cam Pins(F)** and dowel rods to coordinating holes.  
*NOTE: Do not yet lock Cam Pins(F) yet.*

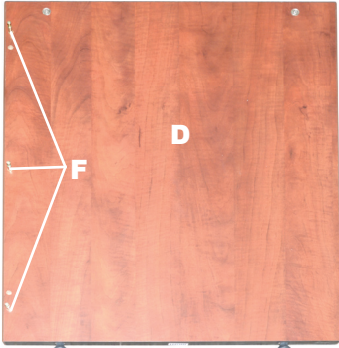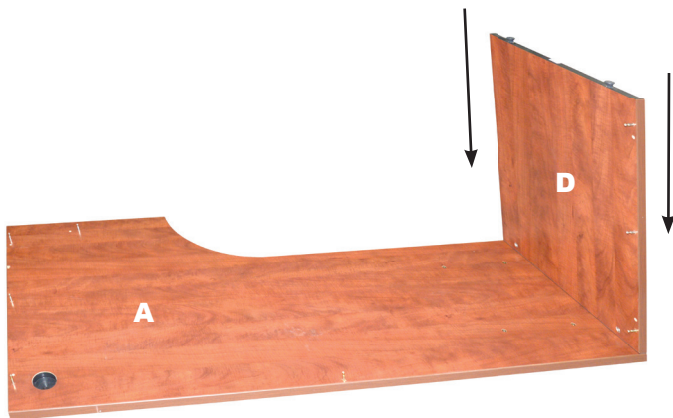

**STEP 3 :** Attach **Modesty(B)** to **Desktop(A)** and **Small Leg(D)** by lining up **Cam Pins(F)** and dowel rods to coordinating holes.

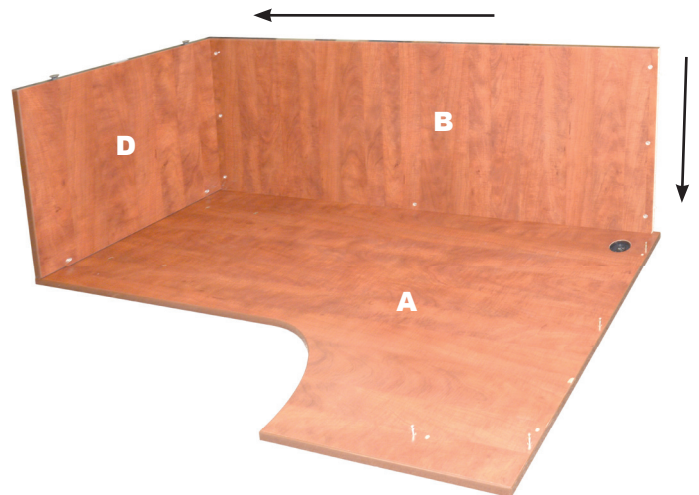


# REGENCY


Legacy Corner Credenza • LDSCCL6624, LDSCCL7124, LDSCCR6624  
& LDSCCR7124 • INSTRUCTIONS

Organize your parts. You will need a phillips screwdriver.

**STEP 4A :** Attach Large Leg(C) to Desktop(A) and Modesty(B) by lining up Cam Pins(F) and dowel rods to coordinating holes.



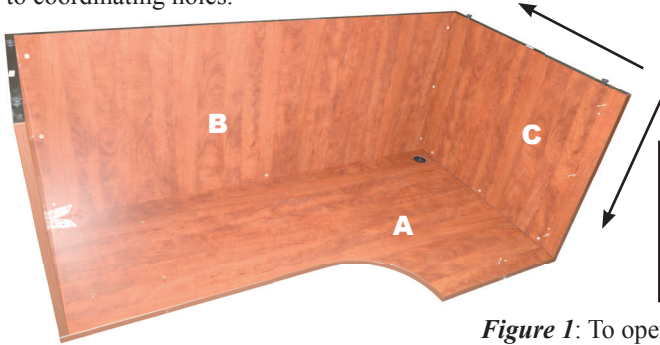


**STEP 4B :** Attach Support Leg(E) to Desktop(A) and Large Leg(C) by lining up Cam Pins(F) and dowel rods to coordinating holes. Then, tighten all cam locks on all desk pieces. (See figure 1)


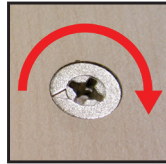


*Figure 1:* To open Cam, point arrow to Cam Pin Hole. To close and lock Cam, turn clockwise

**STEP 5 :** Attach Corner Brackets(I) with Screws(G) to underside of desk where Desktop(A) meets Modesty(B), Large Leg(C), Small Leg(D) and Support Leg(E). *NOTE: Space Corner Brackets(I) evenly amongst desk pieces for optimal stability.*

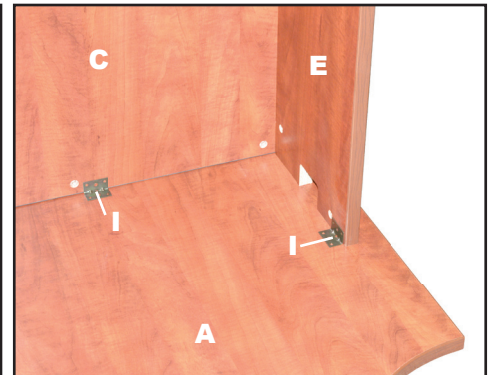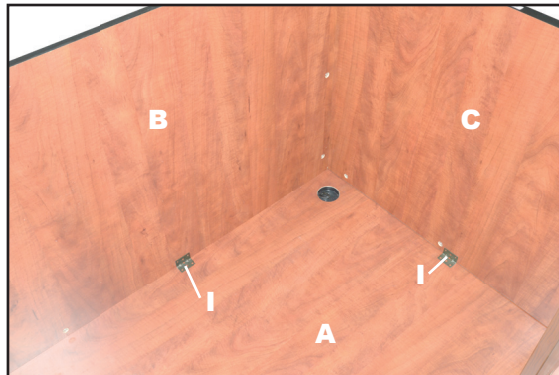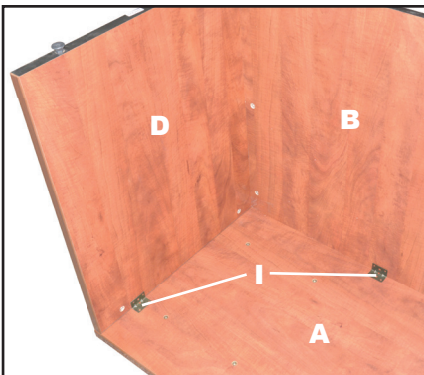

**STEP 6 :** Attach all Flat Brackets(J) with Screws(G) onto edge of Desktop(A) and Modesty(B). *NOTE: Only attach one side to assembled portion, leave half hanging off edge to allow for attachment to return.*

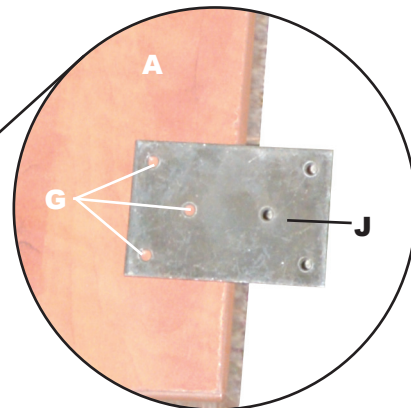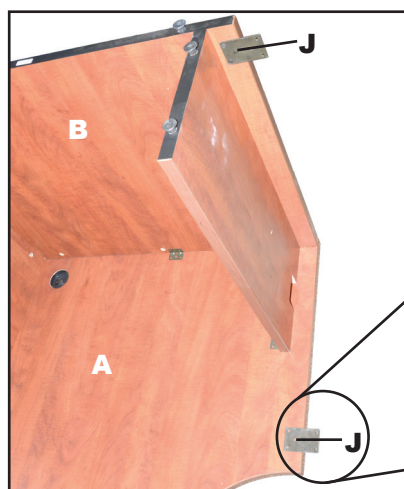

*NOTE: This step and hardware may also be included with Return Assembly, only use one set of hardware.*