



Findyourniche



VERSATILE AND MODERN



ASSEMBLY INSTRUCTIONS

CUBO STORAGE CUBE PC1206

BEFORE YOU ASSEMBLE:

- Place all parts on a clean, smooth surface to avoid scratching the parts
- Check to be sure you have all parts and hardware
- Remove all wrapping materials, including any staples & packing straps
- Keep all hardware, small parts and packaging out of reach of children

IN THE BOX:

A: Top & Bottom Panels (2)




B: Side Panels (2)



C: Back Panel



D: Spring Pins (4)

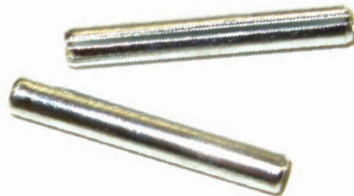



Findyourniche



VERSATILE AND MODERN




ASSEMBLY INSTRUCTIONS

CUBO STORAGE CUBE PC1206

STEP 1


With the **Bottom Panel (A)** laying flat, attach both **Side Panels (B)** by lining up lock dowels and pins with their coordinating holes and pressing down in to place.

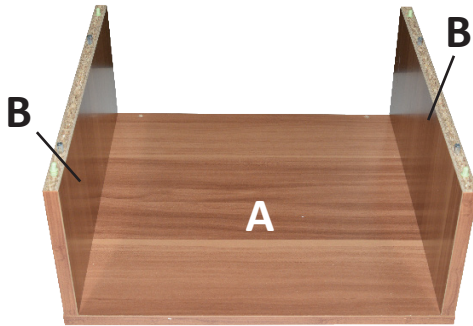

Note: Pieces snap together in numerical order.

STEP 2


Attach **Back Panel (C)** to the **Bottom Panel (A)** by lining up lock dowels and pins with their coordinating holes and pressing down in to place.

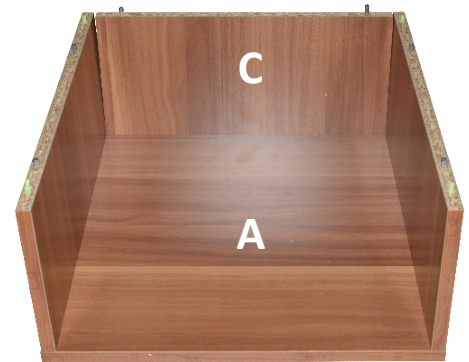

Note: Pieces snap together in numerical order.

STEP 3

Attach **Top Panel (A)** by lining up holes with coordinating lock dowels and pins on the **Back Panel (C)** and **Side Panels (B)** and pressing down in to place.

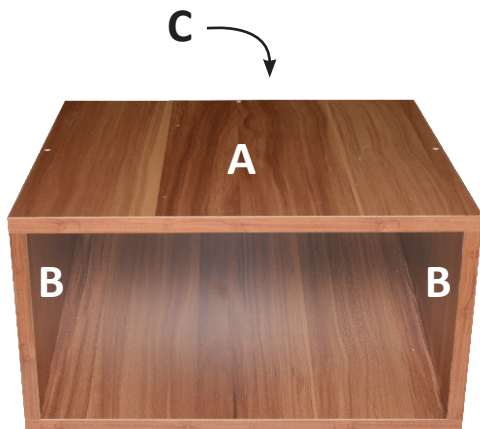

Note: Pieces snap together in numerical order.

OPTIONAL STEP 4

To attach two cubes together, insert **Spring Pins (D)** in to pre-drilled holes on side of Cube of your preference. Next line up holes on second cube with **Spring Pins (D)** and press in to place. **Be Creative!**



Note: You may need to tap in to place with a rubber hammer.