



Find your niche



VERSATILE AND MODERN



ASSEMBLY INSTRUCTIONS

CUBO STORAGE CUBE PC1211

BEFORE YOU ASSEMBLE:

- Place all parts on a clean, smooth surface to avoid scratching the parts
- Check to be sure you have all parts and hardware
- Remove all wrapping materials, including any staples & packing straps
- Keep all hardware, small parts and packaging out of reach of children

IN THE BOX:

A: Top & Bottom Panels (2)





C: Side Panels (2)



B: Back Panel



D: Spring Pins (4)

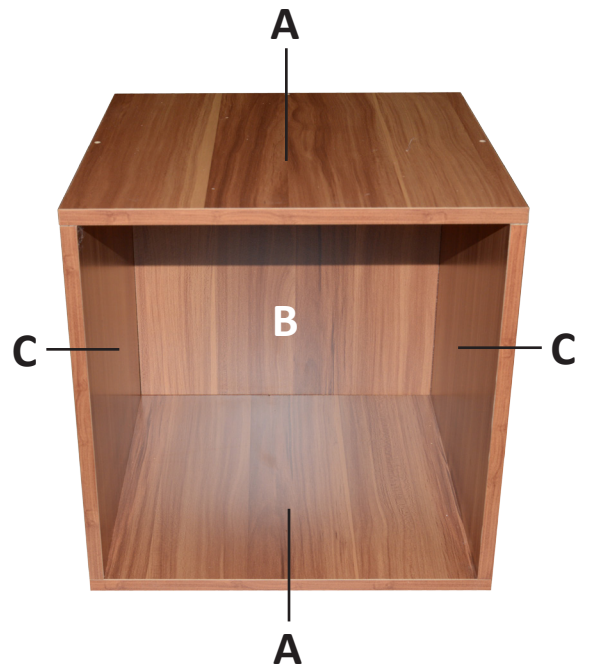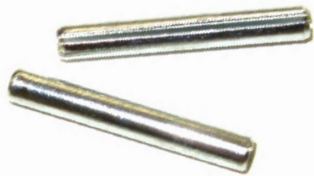

STEP 1

With the **Bottom Panel (A)** laying flat, attach the **Back Panel (B)** by lining up lock dowels and pins with their coordinating holes and pressing down in to place.



Note: Pieces snap together in numerical order.



Find your niche



VERSATILE AND MODERN




ASSEMBLY INSTRUCTIONS

CUBO STORAGE CUBE PC1211

STEP 2


Attach both **Side Panels (C)** to the **Bottom Panel (A)** by lining up lock dowels and pins with their coordinating holes and pressing down in to place.

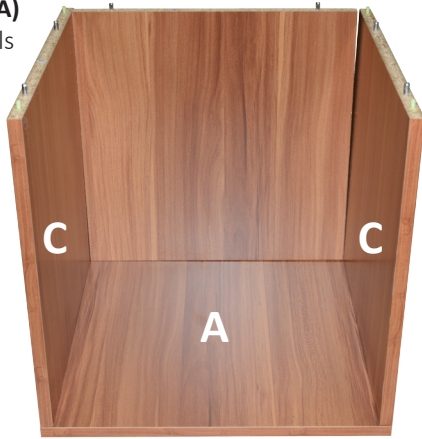

Note: Pieces snap together in numerical order.

STEP 3

Attach **Top Panel (A)** by lining up holes with coordinating lock dowels and pins on the **Back Panel (B)** and **Side Panels (C)** and pressing down in to place.

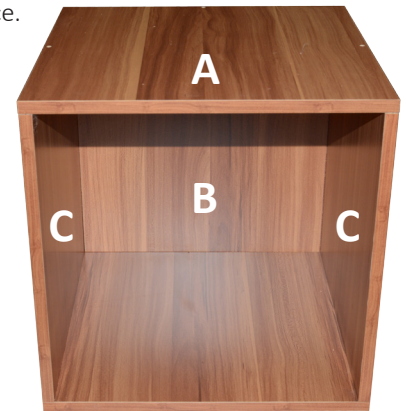

Note: Pieces snap together in numerical order.

OPTIONAL STEP 4: ATTACHING TWO CUBES

To attach two cubes together, insert **Spring Pins (D)** in to pre-drilled holes on side of Cube of your preference. Next line up holes on second cube with **Spring Pins (D)** and press in to place. See Figures 1 & 2 for **Spring Pin (D)** placement. **Be Creative!**

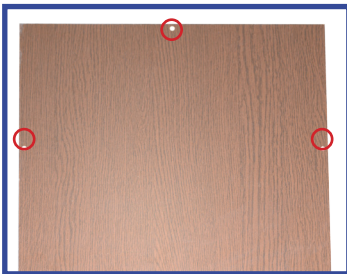


Figure 1: When attaching cubes top to bottom when both cubes are facing forward, insert **Spring Pins (D)** into all three pre-drilled holes. When rotating one of the two cubes like pictured to the right, place **Spring Pins (D)** into only 2 coordinating holes.



Figure 2: When attaching cubes side to side, insert **Spring Pins (D)** into all four pre-drilled holes.



Note: You may need to tap in to place with a rubber mallet.