

contents/description



- **Easy assembly**
- **Houses up to 30 Chickens**
- **Featuring:**
 - 4 Screened Windows
 - 10 Nesting boxes
 - 2 Vents
 - 2 Roosts
- **Size: 146" L x 60" W x 145" H**
- **Sits off the ground**
- **Built by Amish-trained craftsmen**
- **One year warranty**

JUMBO OverEZ

SKU# JOEZCKCP

Chicken Coop

Instruction Manual



happy
with our product?

Please help us spread the word
by leaving a review at:
www.OverEZchickencoop.com

OverEZ

Chicken Coop[®]

Made in the U.S.A.

for more information about all our products visit: www.OverEZchickencoop.com

Please note: Actual product may differ slightly from instructional illustrations.



step one

Place FLOOR in desired location. (Must be level)

Note: Jumbo floor comes in two separate pieces. Start with the piece that has 4 legs. Once you slide them together, drill the two screws in the floor boards in the front and back.

Attach matching leg supports to center legs with additional screws

Find the bag with drill bits, keys, and touch up paint (to repair any marks on pre-painted surfaces).



step two

Place BACK WALL (A1), making sure wall is tight against floor and ends of wall line up.

Drive 4 pre-started screws on the bottom.

Once you have the first wall up, align the second back wall (A2), with the first and drill the screws into the floor and in the middle beams.



step three

Install MAN DOOR GABLE WALL (D). Siding from BACK WALL and will slide into cavities provided. Make sure wall is tight against floor. Drive 3 pre-started screws on corners, then drive 4 pre-started screws into floor.



step four

Place FRONT WALL (C1) and (C2), making sure wall is tight against lower support wall. Slide the FIRST FRONT (C1), wall into the GABLE WALL. Make sure that the bottom of the nesting box lines up with the coop floor. Screw in FIRST WALL (C1) to the bottom of the coop. Slide SECOND FRONT (C2) wall into the FIRST FRONT wall.

Once you have the SECOND FRONT (C2) wall into place, SCREW the TWO FRONT screws into place, on the front of the nesting box. Then, Screw the two pieces together, then screw into the floor.

A clamp is helpful in getting front panels to align



step five

Slide CHICKEN DOOR GABLE WALL (B) into place. Make sure gable wall is tight against front and trim fits properly around front and back walls. Drive 3 pre-started screws on corners, then drive 4 pre-started screws into floor.



step six


Install ROOF PIECE (E1, E2, F1, and F2).

When viewing coop from back, (E1) is placed on left half of roof, (F1 and F2) are in the middle, and (E2) is on the right side.

Once you have E1 and F1 into place, drill them together in the middle beam, inside the coop. Repeat this with F2 and E2.

They will overlap on the top of the roof. Make sure the back of the roof is flush with the paint line.

Drive the 8 pre-started screws that are in the top of the wall into the roof panel.

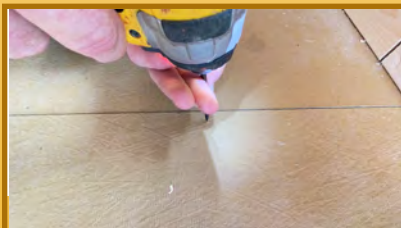

step seven

Once you are finished installing the roof and your coop looks complete, there are still a few more screws to take care of. Take two black screws out of the bag and drill them into the floor board, next to the screws you drilled in Step 1.



step eight

Put black screw in bottom hinge of door.

Put screws on Roost brackets to put together, inside of the coop. Drop ROOST BARS into slots provided on inside of gable walls.

Hook CHICKEN RAMP at bottom of chicken door.

NOTE: To loosen or tighten door latches, use supplied allen wrench. Loosen small screw on inside of latch with allen wrench, moving the latch in or out. Tighten screw and test.

Assembly is **OverEZ!**

Watch our assembly video here

