

*contents/description*

- **Size: 6'6" W. x 7'6" L. x 6'3" H.**
- **Also available in three other configurations**
- **Metal/Wire**
- **Includes all parts needed for assembly plus adapter to fit any of the OverEZ Chicken Coops**

SKU# 676CKRN3

## **Rugged Ranch Chicken Run**

**6'6" W. x 7'6" L. x 6'3" H.**

*Instruction Manual*



*happy*  
**with our product?**

Please help us spread the word  
by leaving a review at:  
[www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

**OverEZ**  
**Chicken Coop®**

*for more information about all our products visit:* [www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

# **RUGGED RANCH**

## **Universal Walk-In Pen Assembly Instructions**



### **Important Notes:**

Lay out all components prior to start of assembly. A flat, level surface is recommended for assembly.

If any components are missing or damaged, do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748



**End Panel**



**Side Panel**



**Coop end/adaptor end panel**



**Roof Panel**



**Two piece clamp**

### Step 1

Lay out front, back and Side panels. The 15' Chicken run works The same way. Lay out All components.

7'6" Run Pictured



### Step 4

The hinges on the roof panels go on the peak. If you have the 15' run, the 2 roof panels that are in the main box go on the end of the run as pictured in step 5, this is so it lines up with the side panels. The 2 panels in the extension kit are for the center of the run

### Step 2

Assemble side and end panel. End panel goes on the outside. Fasten corners with the two piece clamps. (Where the wire is cut out)



### Step 3

Repeat step 2 with the opposite end and side panels. Make sure the end panels are on the outside .



End panel Side panel

### Step 5

Clamp roof panels together wherever the wire is cut out. Keep the roof and run square/even around the edges.



Wire cut out

7'6" Run Pictured



## Rugged Ranch Chicken Run Adapter

### Removing the current panel and replacing with the adapter

This Adapter is for all sizes of OverEZ Chicken Coops and Standard & Mini Chicken Coops with a Rugged Ranch Chicken Run.

You may need a wrench to replace this panel

This is only if you attach this run to an OverEZ Chicken Coop and Standard & Mini Chicken Coops

#### STEP 1:




Remove the four bolts holding the current panel in place, Then remove the panel.

#### STEP 2:




After the panel has been removed, you can keep it, or throw it away. If you plan to use it without an OverEZ Chicken Coop or Standard & Mini Chicken Coop, we recommend you store it some place.

#### STEP 3:

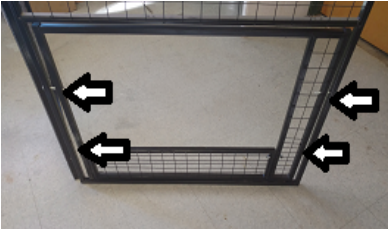

Insert the Rugged Ranch Chicken Run Adapter. Install with the four bolts used on the original panel

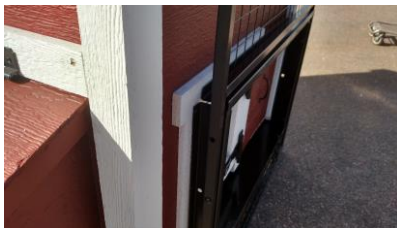

Finished Product.

See Rugged Ranch Chicken Run Instructions for further details.

*for more information about  
all our products visit:*

[www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)



## Rugged Ranch Chicken Run Adapter Instructions

This Adapter is for all sizes of OverEZ Chicken Coops and Standard & Mini Chicken Coops with a Rugged Ranch Chicken Run.

You will need a drill or socket set to assemble this chicken run

### STEP 1:



After the chicken run has been assembled, install the angle iron on the top, bottom and both sides of the insert. The wide one is for the bottom. Install the angle pieces with the angle towards the chicken coop and the lip out (Bottom one is installed the same except the Large OverEZ Chicken Coop and the Standard Chicken Coop, this needs to be flipped with the angle up) Then fasten with 2 self-tapping screws into each panel

### STEP 2:



Push the panel against the chicken coop trim leave approximately 1" away from the latch side of the chicken coop door. (Optional, insert screws through predrilled holes on the angle pieces into the trim. You will need to use an extension bit to do this)

### STEP 3:



(Optional)

This is only if you have the OverEZ Wire Chicken Coop Panels installed around the bottom of the chicken coop. Remove the very bottom panel from the insert by removing the bolts, this is to allow the chickens to walk underneath the chicken coop. Tie the excess wire from the OverEZ Wire Chicken Coop Panels to the run.

*for more information about  
all our products visit:*

[www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

