


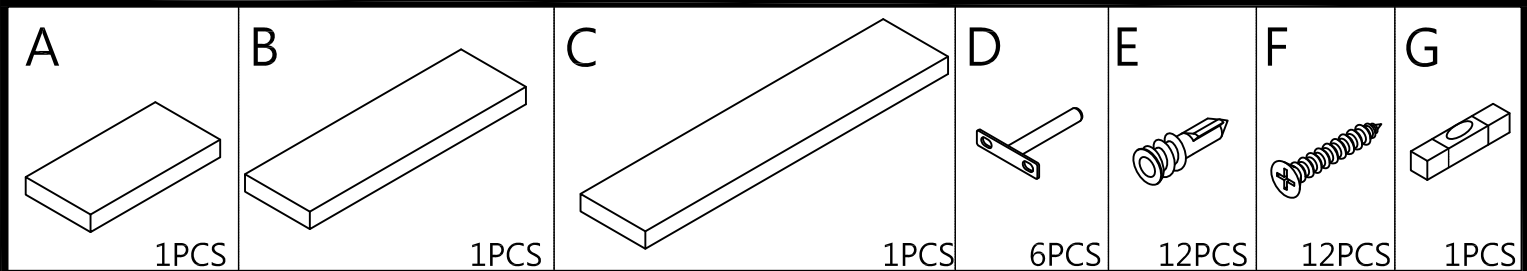

UNDER.STATED



Using the self-drilling anchors:

Tap the pointed tip of the anchor into the wall with a hammer.

It may be necessary to first make a hole through the drywall in order to fully insert the anchor halfway.

Once the tip is in the drywall, screw the anchor in until it's flush to the wall.

The anchors are not to be used if screwing directly into a stud.

