


*contents/description*

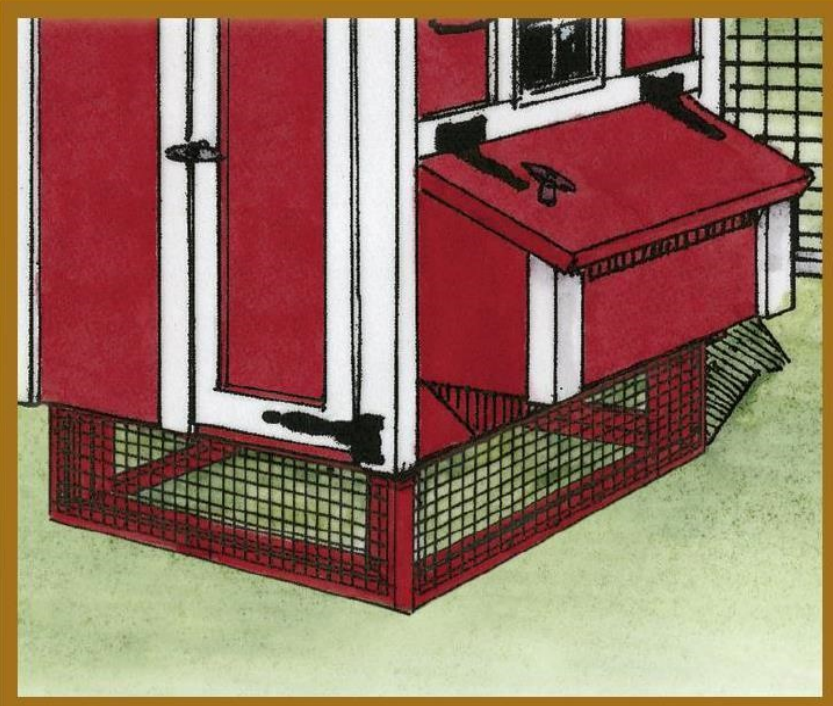

- Made for X-LARGE OverEZ Chicken Coop
- Secure your chicken coop
- Panels that enclose the bottom of the coop with one side open to attach to the Chicken Run
- Includes pre-painted wood frame and wire

SKU# LWCCP

# X-LARGE OverEZ Wire Chicken Coop Panels

*Instruction Manual*



*happy*  
**with our product?**

Please help us spread the word  
by leaving a review at:  
[www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

**OverEZ**  
**Chicken Coop**<sup>®</sup>

*for more information about all our products visit:* [www.OverEZchickencoop.com](http://www.OverEZchickencoop.com)

## SETTING UP YOUR X-LARGE OVEREZ WIRE CHICKEN COOP PANELS

You will need a drill to install these panels (6).

You will notice that each panel is about a half inch less in height than the coop legs. This is to allow for easy installation should there be any obstacles or uneven ground. You may want to fill in the spaces between the panels and the ground with dirt or gravel.

### STEP 1:



Install the front two panels and back two panels first.

Place the first panel against the chicken coop legs/braces on the outside. After you have the first one connected to the coop, add the second front panel. Once finished with the front, do the same to the back. Then fasten the panels into the chicken coop with pre-started screws.




Install the man door gable.

This panel will be even with the outside of the front and back panel, against the legs. **STEP 3:**



Install 2 short panels on the chicken coop door gable. Install these panels even with front and back panels. Insert the 2 pre-started screws into the chicken coop legs Double the excess wire into an L shape. This is to tie into the chicken run.

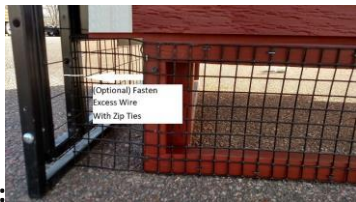

### STEP 4:

(Optional) If you attach a chicken run to the chicken coop, remove the bottom panel of the chicken run to open it to the underside of the chicken coop. After chicken run is placed, wire tie the excess wire to the chicken run.