



Assembly Instructions: Plastic Restraining Cones (Shown in white for instructional purposes)




1 Roll cone sheet into cone shape with the decal side facing outward.



2 For large cone, tuck tabs into first row of slots and then weave them through and back out the next row of slots. For small cone, tuck tabs into middle row of slots and then weave them back out of the third row.



3 Line up screw holes at the bottom of the cone. Thread included cable tie through the 'cable tie slot' into the cone from the outside to the inside, and then back out through the adjacent cable tie slot. Tighten the cable tie. Repeat this step for the upper portion of the cone.

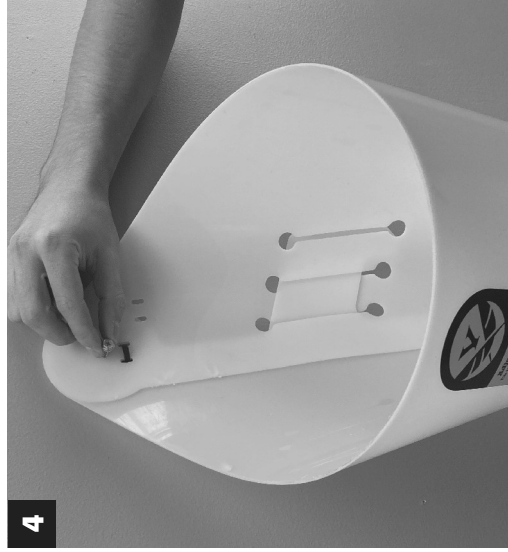

4 To mount the cone to a wooden post, use the included screws. It is recommended to mount cone using both upper and lower screw holes.

Note: To maximize life of product, store out of direct sunlight when not in use.