
INSTRUCTION MANUAL

AIR37

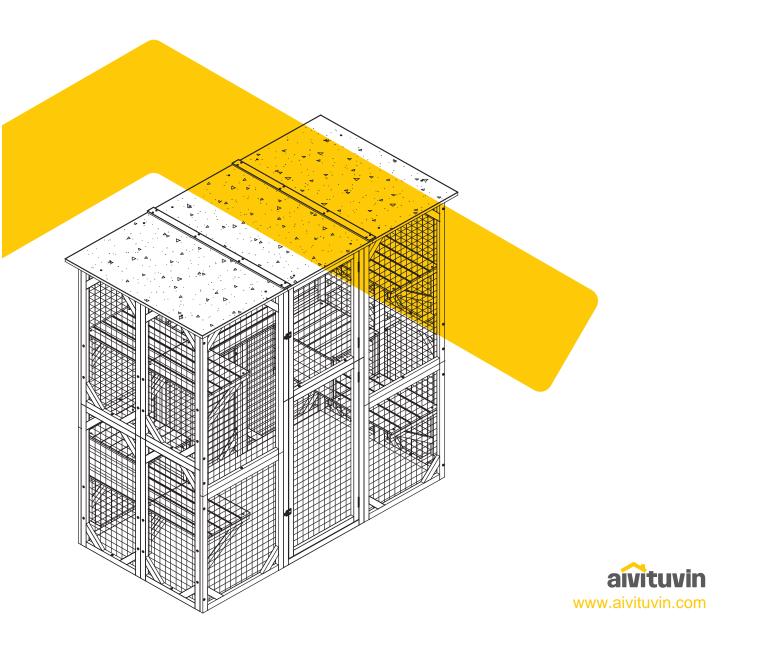



- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED










PHILLIPS SCREWDRIVER DRILL (RECOMMENDED)

2PERSON ASSEMBLY APPROXIMATELY 60MIN. ASSEMBLY

HARDWARE



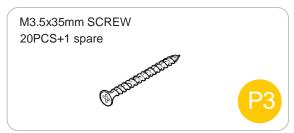







PARTS


CARTON 1/2




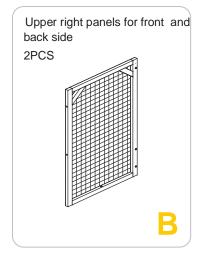



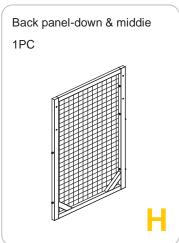


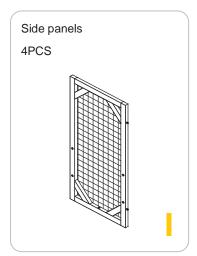

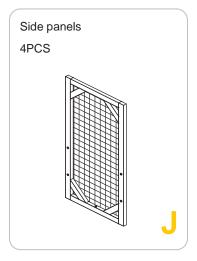







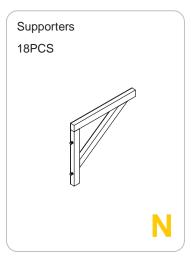


PARTS

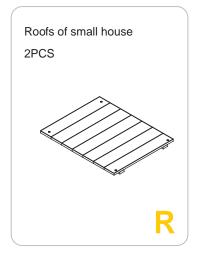


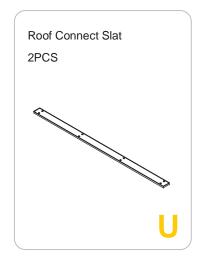





CARTON 2/2

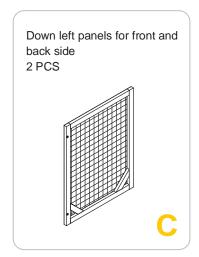


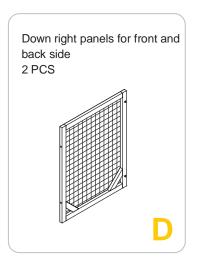




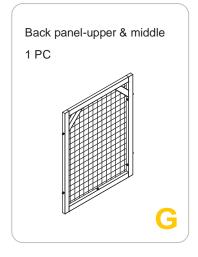


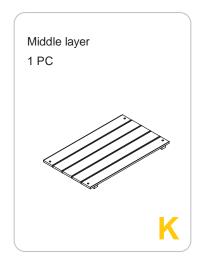

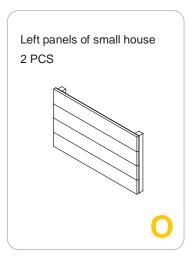


PARTS

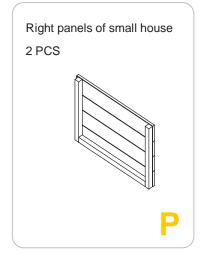

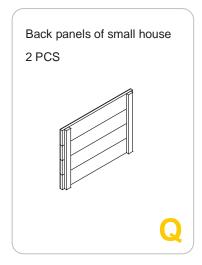




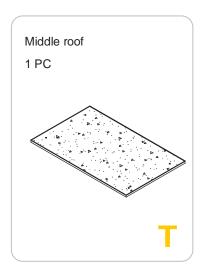


Connect the front panel Part A,B,C,D,E,F by 14XP1. Notice:

- 1. The corner with the bar of Part A & B is facing up.
- 2. The corner with the bar of Part C & D is facing down.
- 3. The pre-drilled hole of Part A & C is on the left side.
- 4. The pre-drilled hole of Part B & D is on the right side.

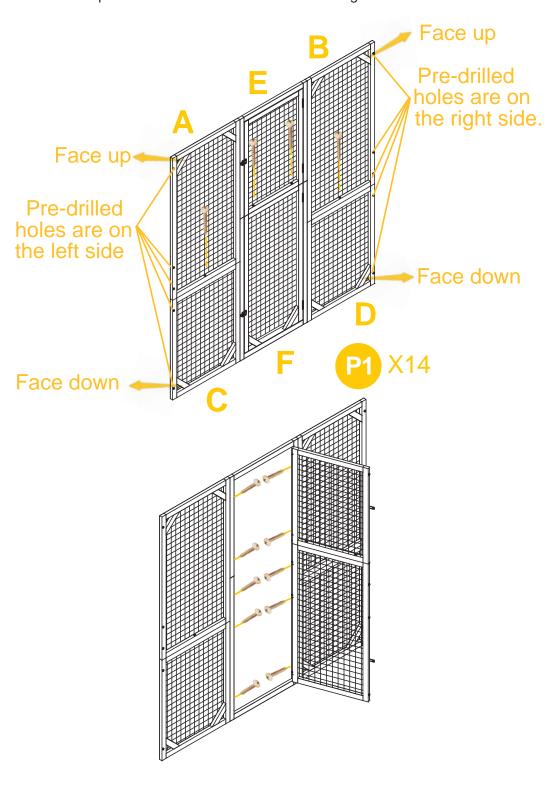

Connect the back panel Part A,B,C,D,G,H by 13XP1. Notice:

- 1. The corner with the bar of Part A & B is facing up.
- 2. The corner with the bar of Part C & D is facing.
- 3. The pre-drilled hole of part A & C is on the left side.
- 4. The pre-drilled hole of part B & D is on the right side.

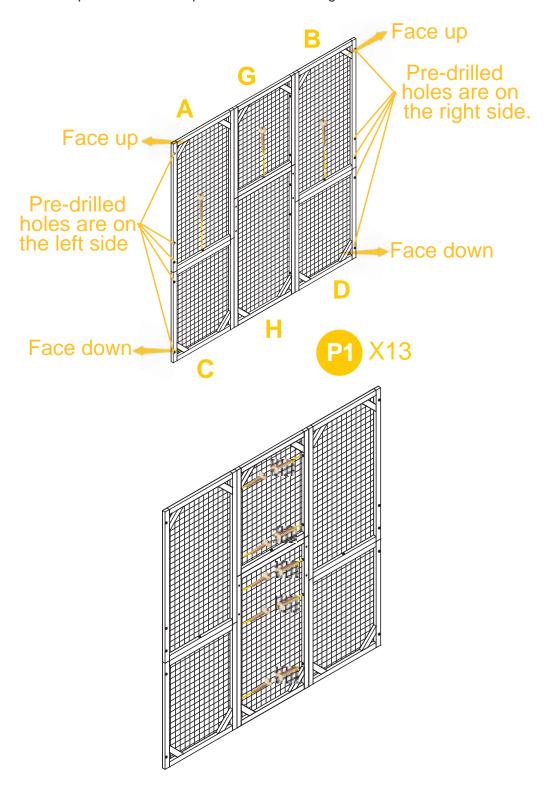


① Connect the side panel Part I & J by 6XP1.

② Repeat the same way for the other side. Notice:

1.Part I is with wooden dowel.

2.Connecting hole is facing down.

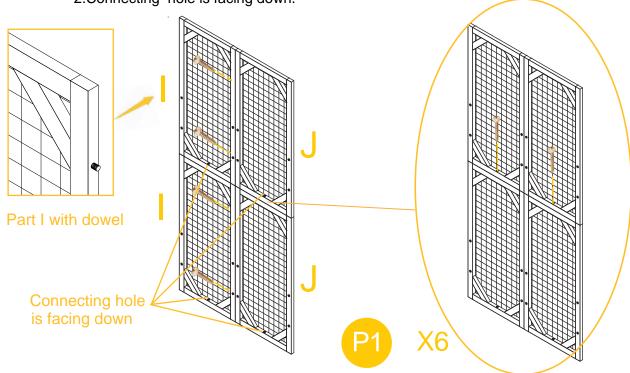


Attach the back panel to the two side panels by 10XP2. Notice:
Pre-drilled holes faces outward.


Pre-drilled holes faces outward

P2 X10

Attach the supporters Part N to the left side by 16XP2.

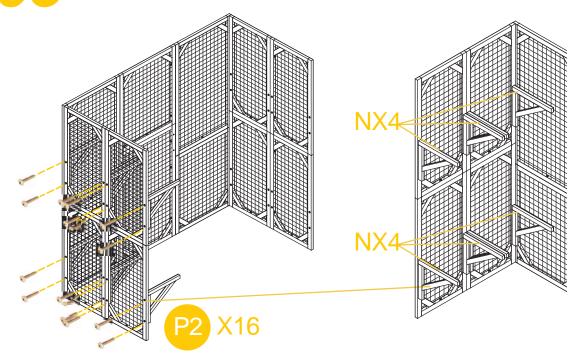


Attach the layer Part L & M to the supporter by 16XP4.

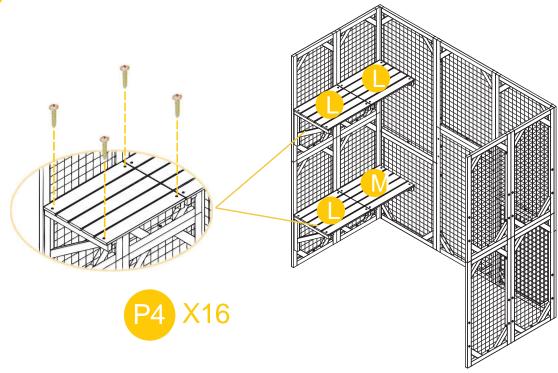


1 Attach the back panel Part Q to the side panel Part P & O by 4XP3.


- ② Attach the roof Part R by 4XP4.
- 3 Repeat the same way for the second house.

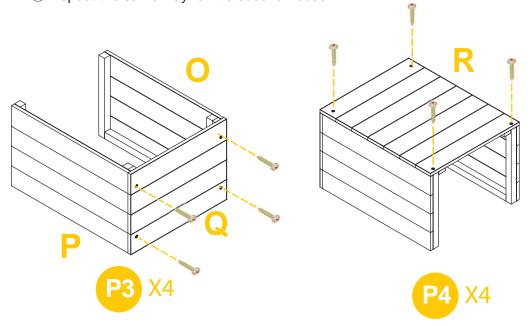


Screw the small house to the bottom layer by 4XP4.

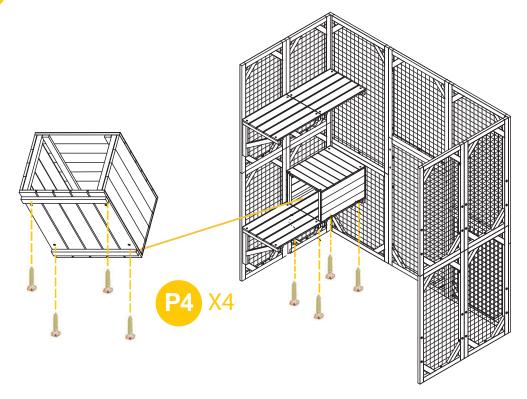


Attach the middle supporters Part N to the back side by 4XP2.

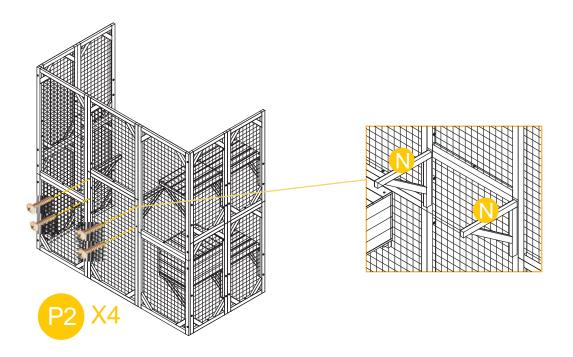


Attach the layer Part K to the supporter by 4XP4.

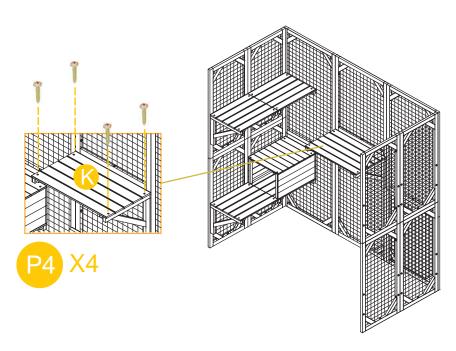


Attach the supporters Part N to the right side by 16XP2.

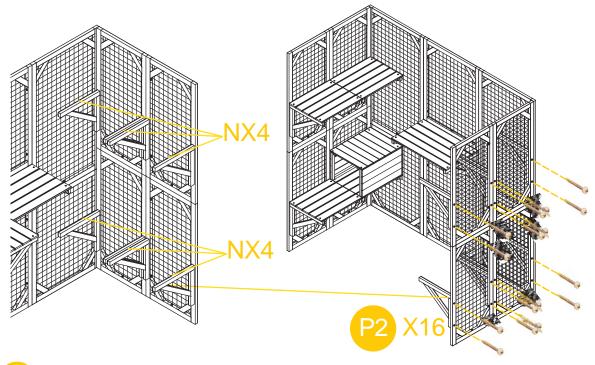


Attach the layer Part L & M to the supporter by 16XP4.

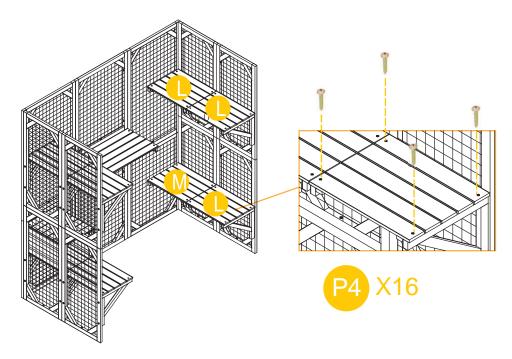


Screw the another small house to the bottom layer by 4XP4.

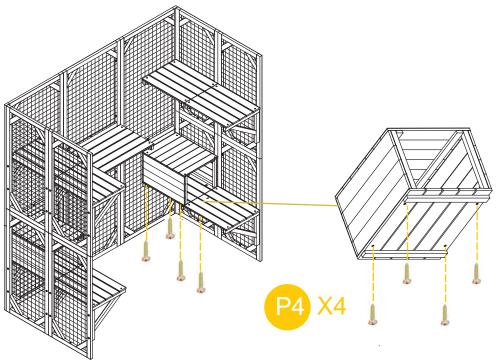


Attach the front panel to the side by 10XP2.

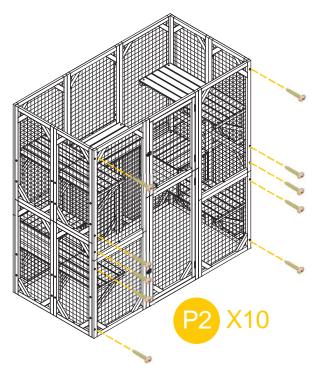

Attach roof Part S & T by 12XP3.

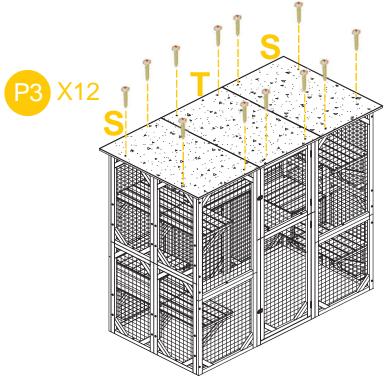

Attach the roof slats Part U to the roof by 16xP4.

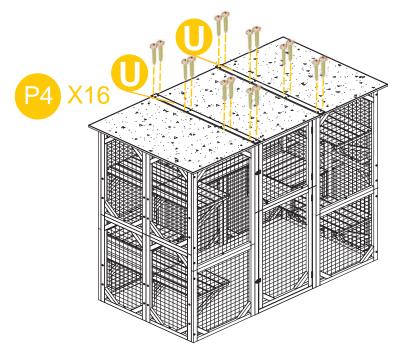



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury,property damage or loss,whether direct,indirect,or incidental,resulting from the incorrect attachment,improper use,inadequate miantenance,or neglect of this