



# ATTACHING FLOAT TO BASE

## STEP 1

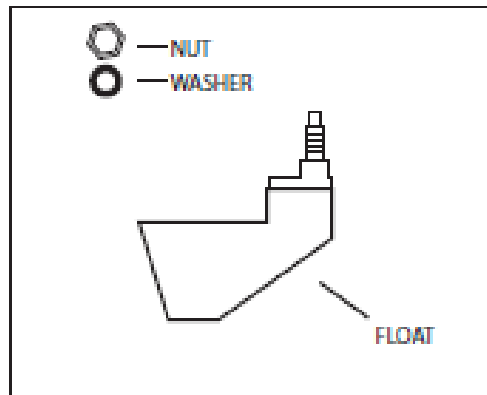


Remove rubber washer and plastic nut from threaded top of float.

## STEP 2

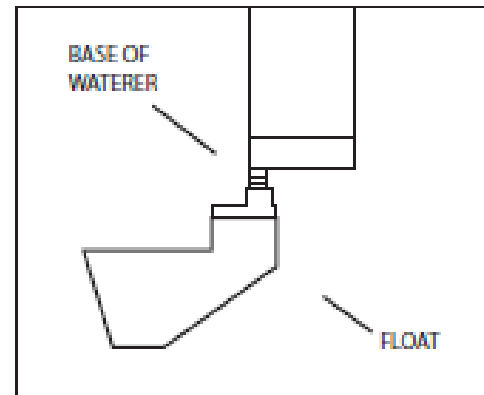


Begin to screw threaded top of float into hole at the base of the waterer.

## STEP 3

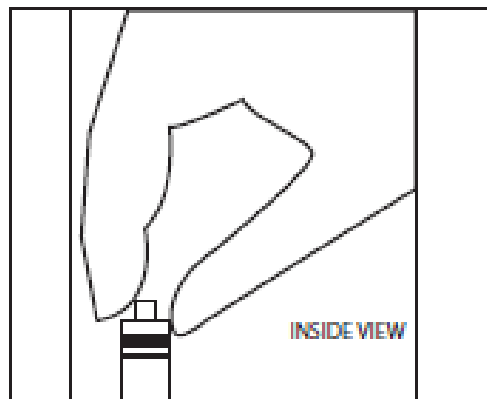

Slide arm in tube and place rubber washer then plastic nut onto threaded float and begin screwing the float into the rubber washer and plastic nut.

## STEP 4

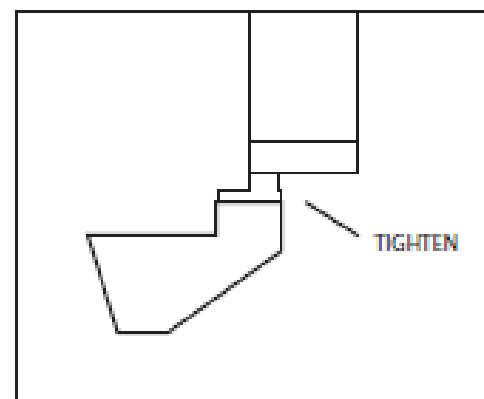

**DO NOT OVERTIGHTEN.** Turn the float until it is nice and tight and facing away from the center of the tube.