

EASY 3 STEP PROJECT

UltraShield
ThermaSEAL™ TECHNOLOGY
Cures in Temps down to 40°F


1 PREP

A clean surface will give you best results. Sweep off loose debris. Power-wash or hose off driveway if needed.



2 PATCH

Repair all damaged areas including cracks, depressions or potholes. Allow to fully cure prior to Step #3.

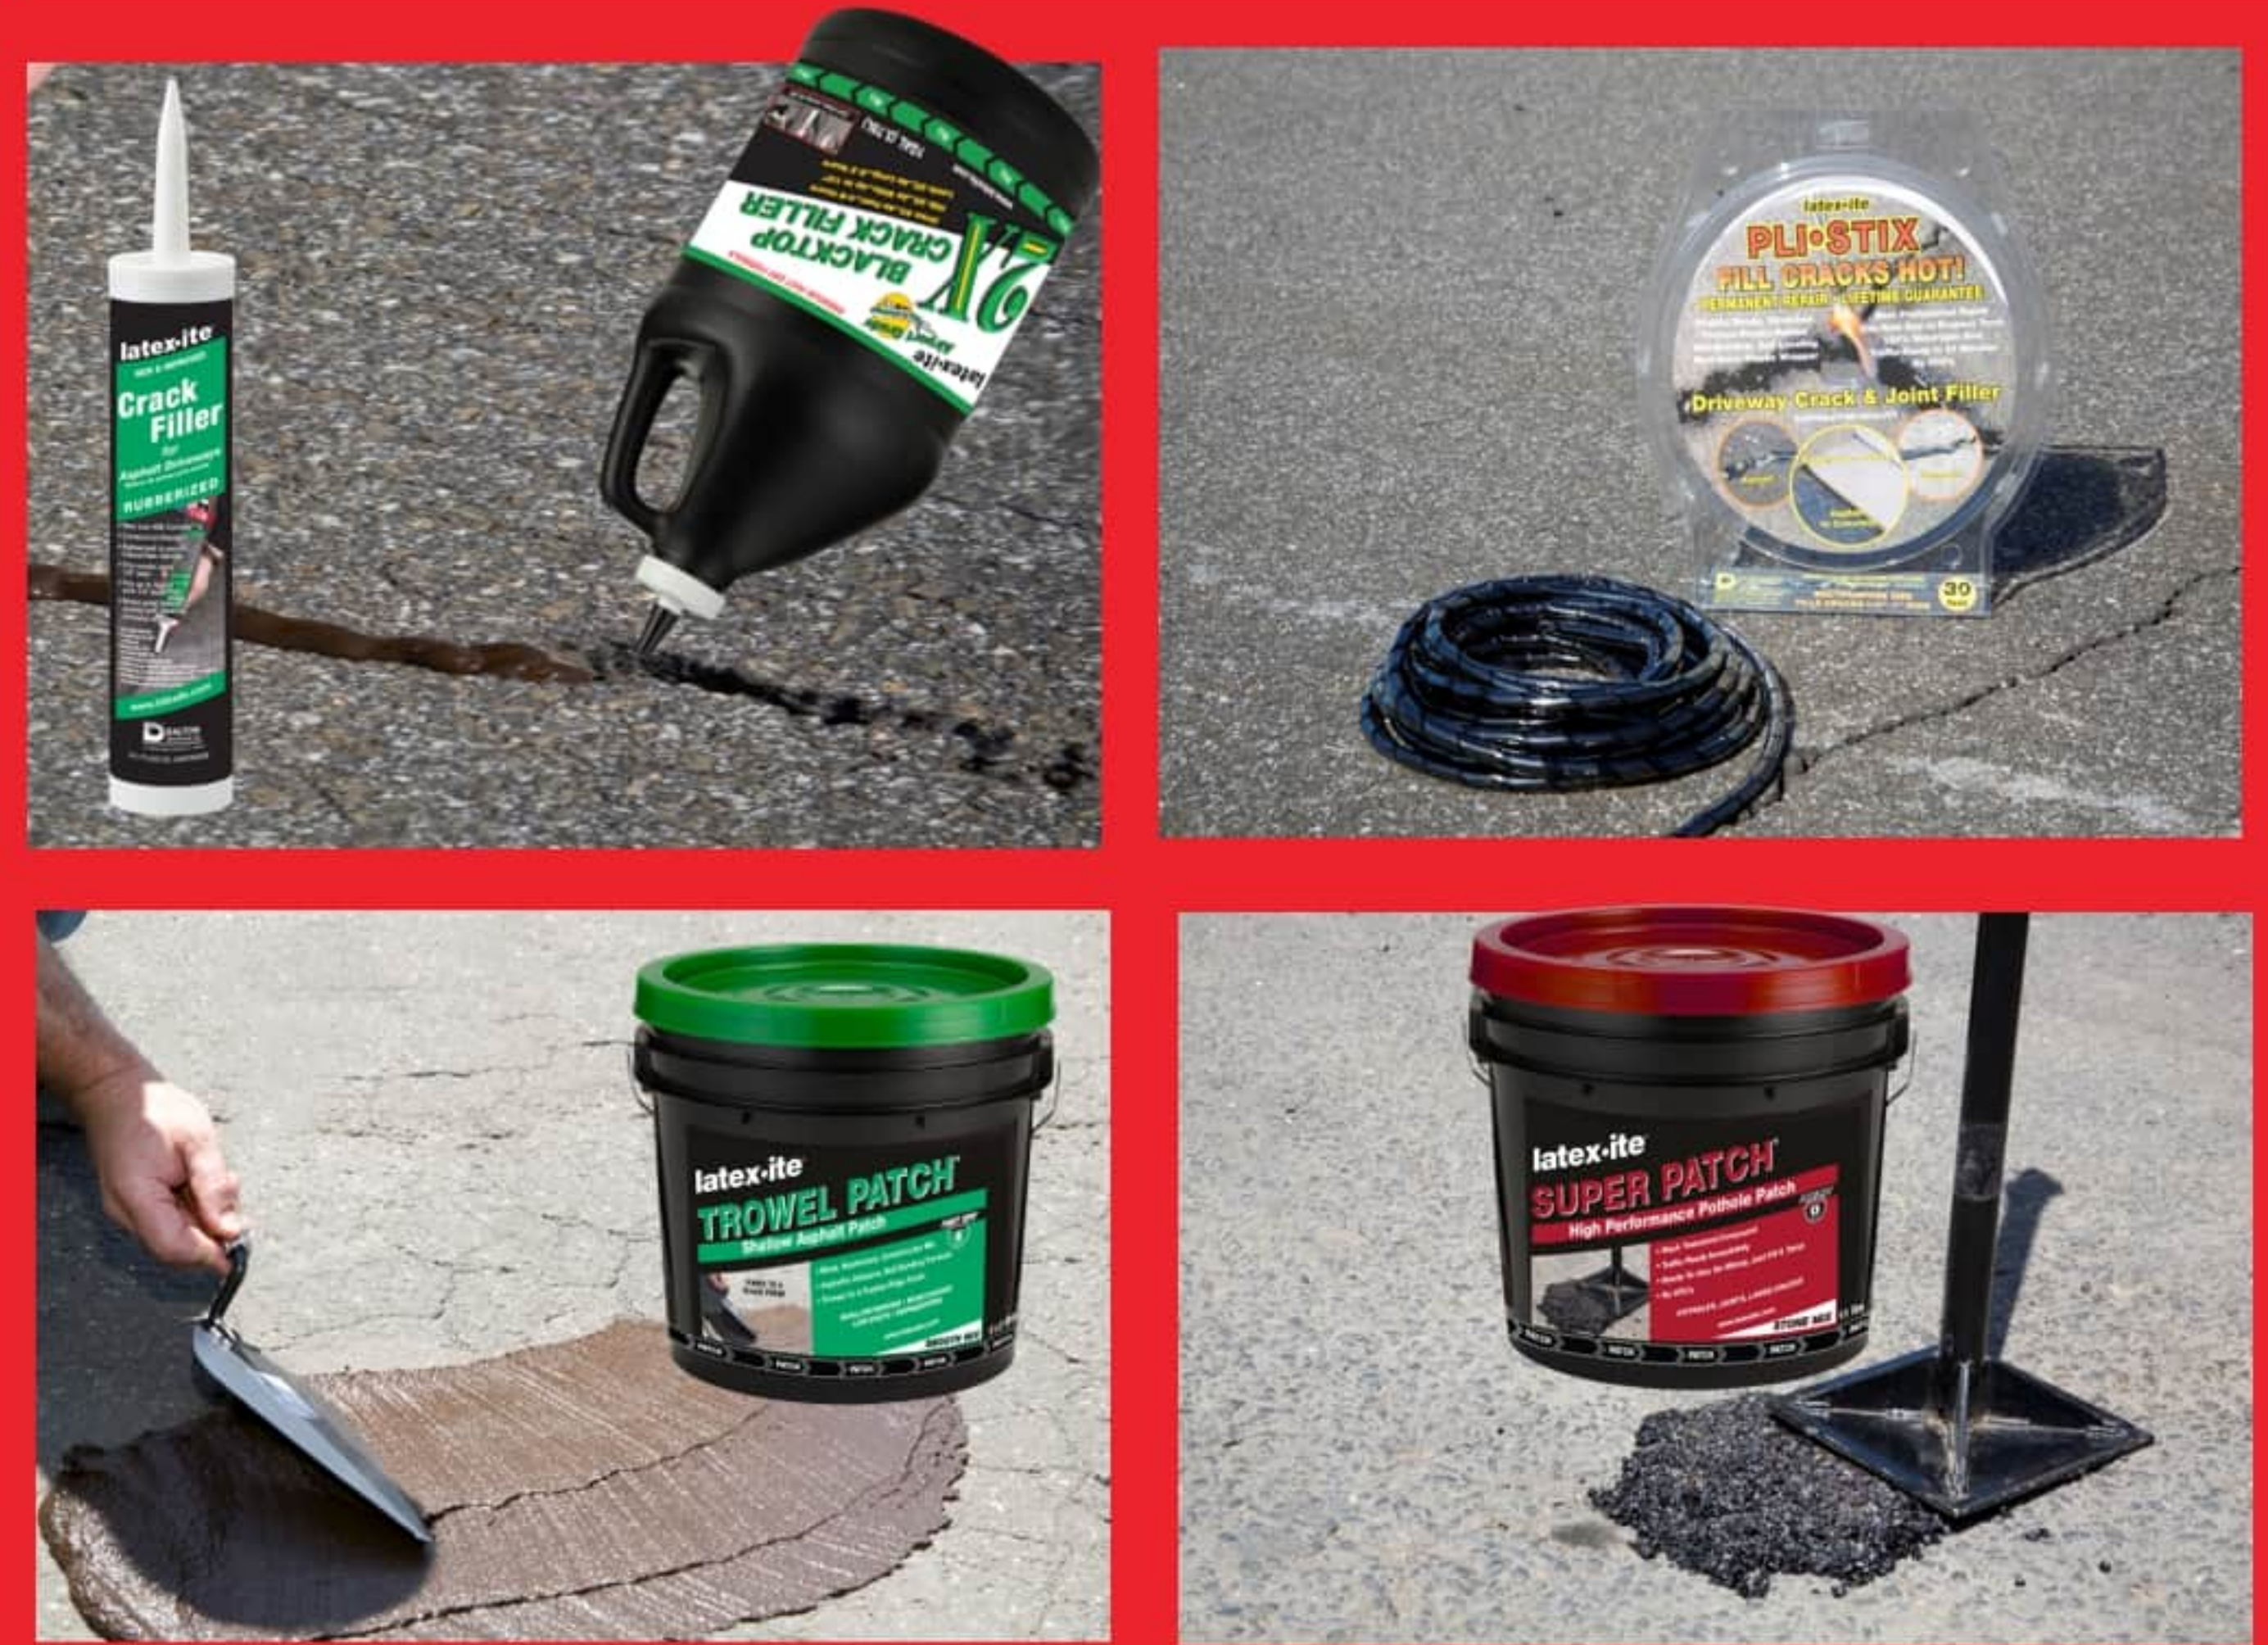

3

PROTECT

Use our Seal Right Squeegee and start at the high end of your driveway or lot. Work side to side leaving a thin coat. Apply 2 coats (allowing first to dry prior to applying second). Allow 1 hour for foot traffic and 24 hours for car traffic. See label for more details.

