


U-CLAMP ASSEMBLY INSTRUCTIONS

1. Hook the closed end of the U-Clamp over the receiver flange.
2. Slide Cross Bar over the U-Clamp Threads and position Cross Bar on Ball receiver box.

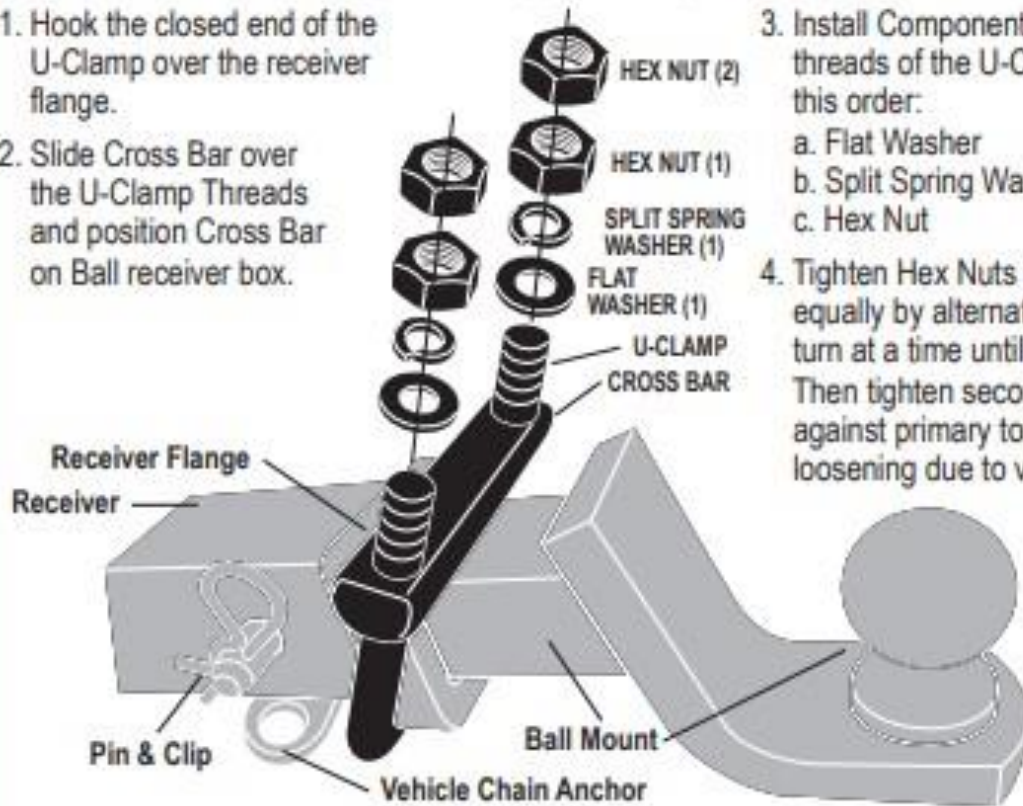

3. Install Components onto threads of the U-Clamp in this order:
 - a. Flat Washer
 - b. Split Spring Washer
 - c. Hex Nut
4. Tighten Hex Nuts onto U-Clamp equally by alternating sides 1 turn at a time until secured tightly. Then tighten secondary hex nuts against primary to guard against loosening due to vibration.