


WRAP MOUNTING
PLATES WITH FOAM
AND SECURE TO
MAIN WELDMENT

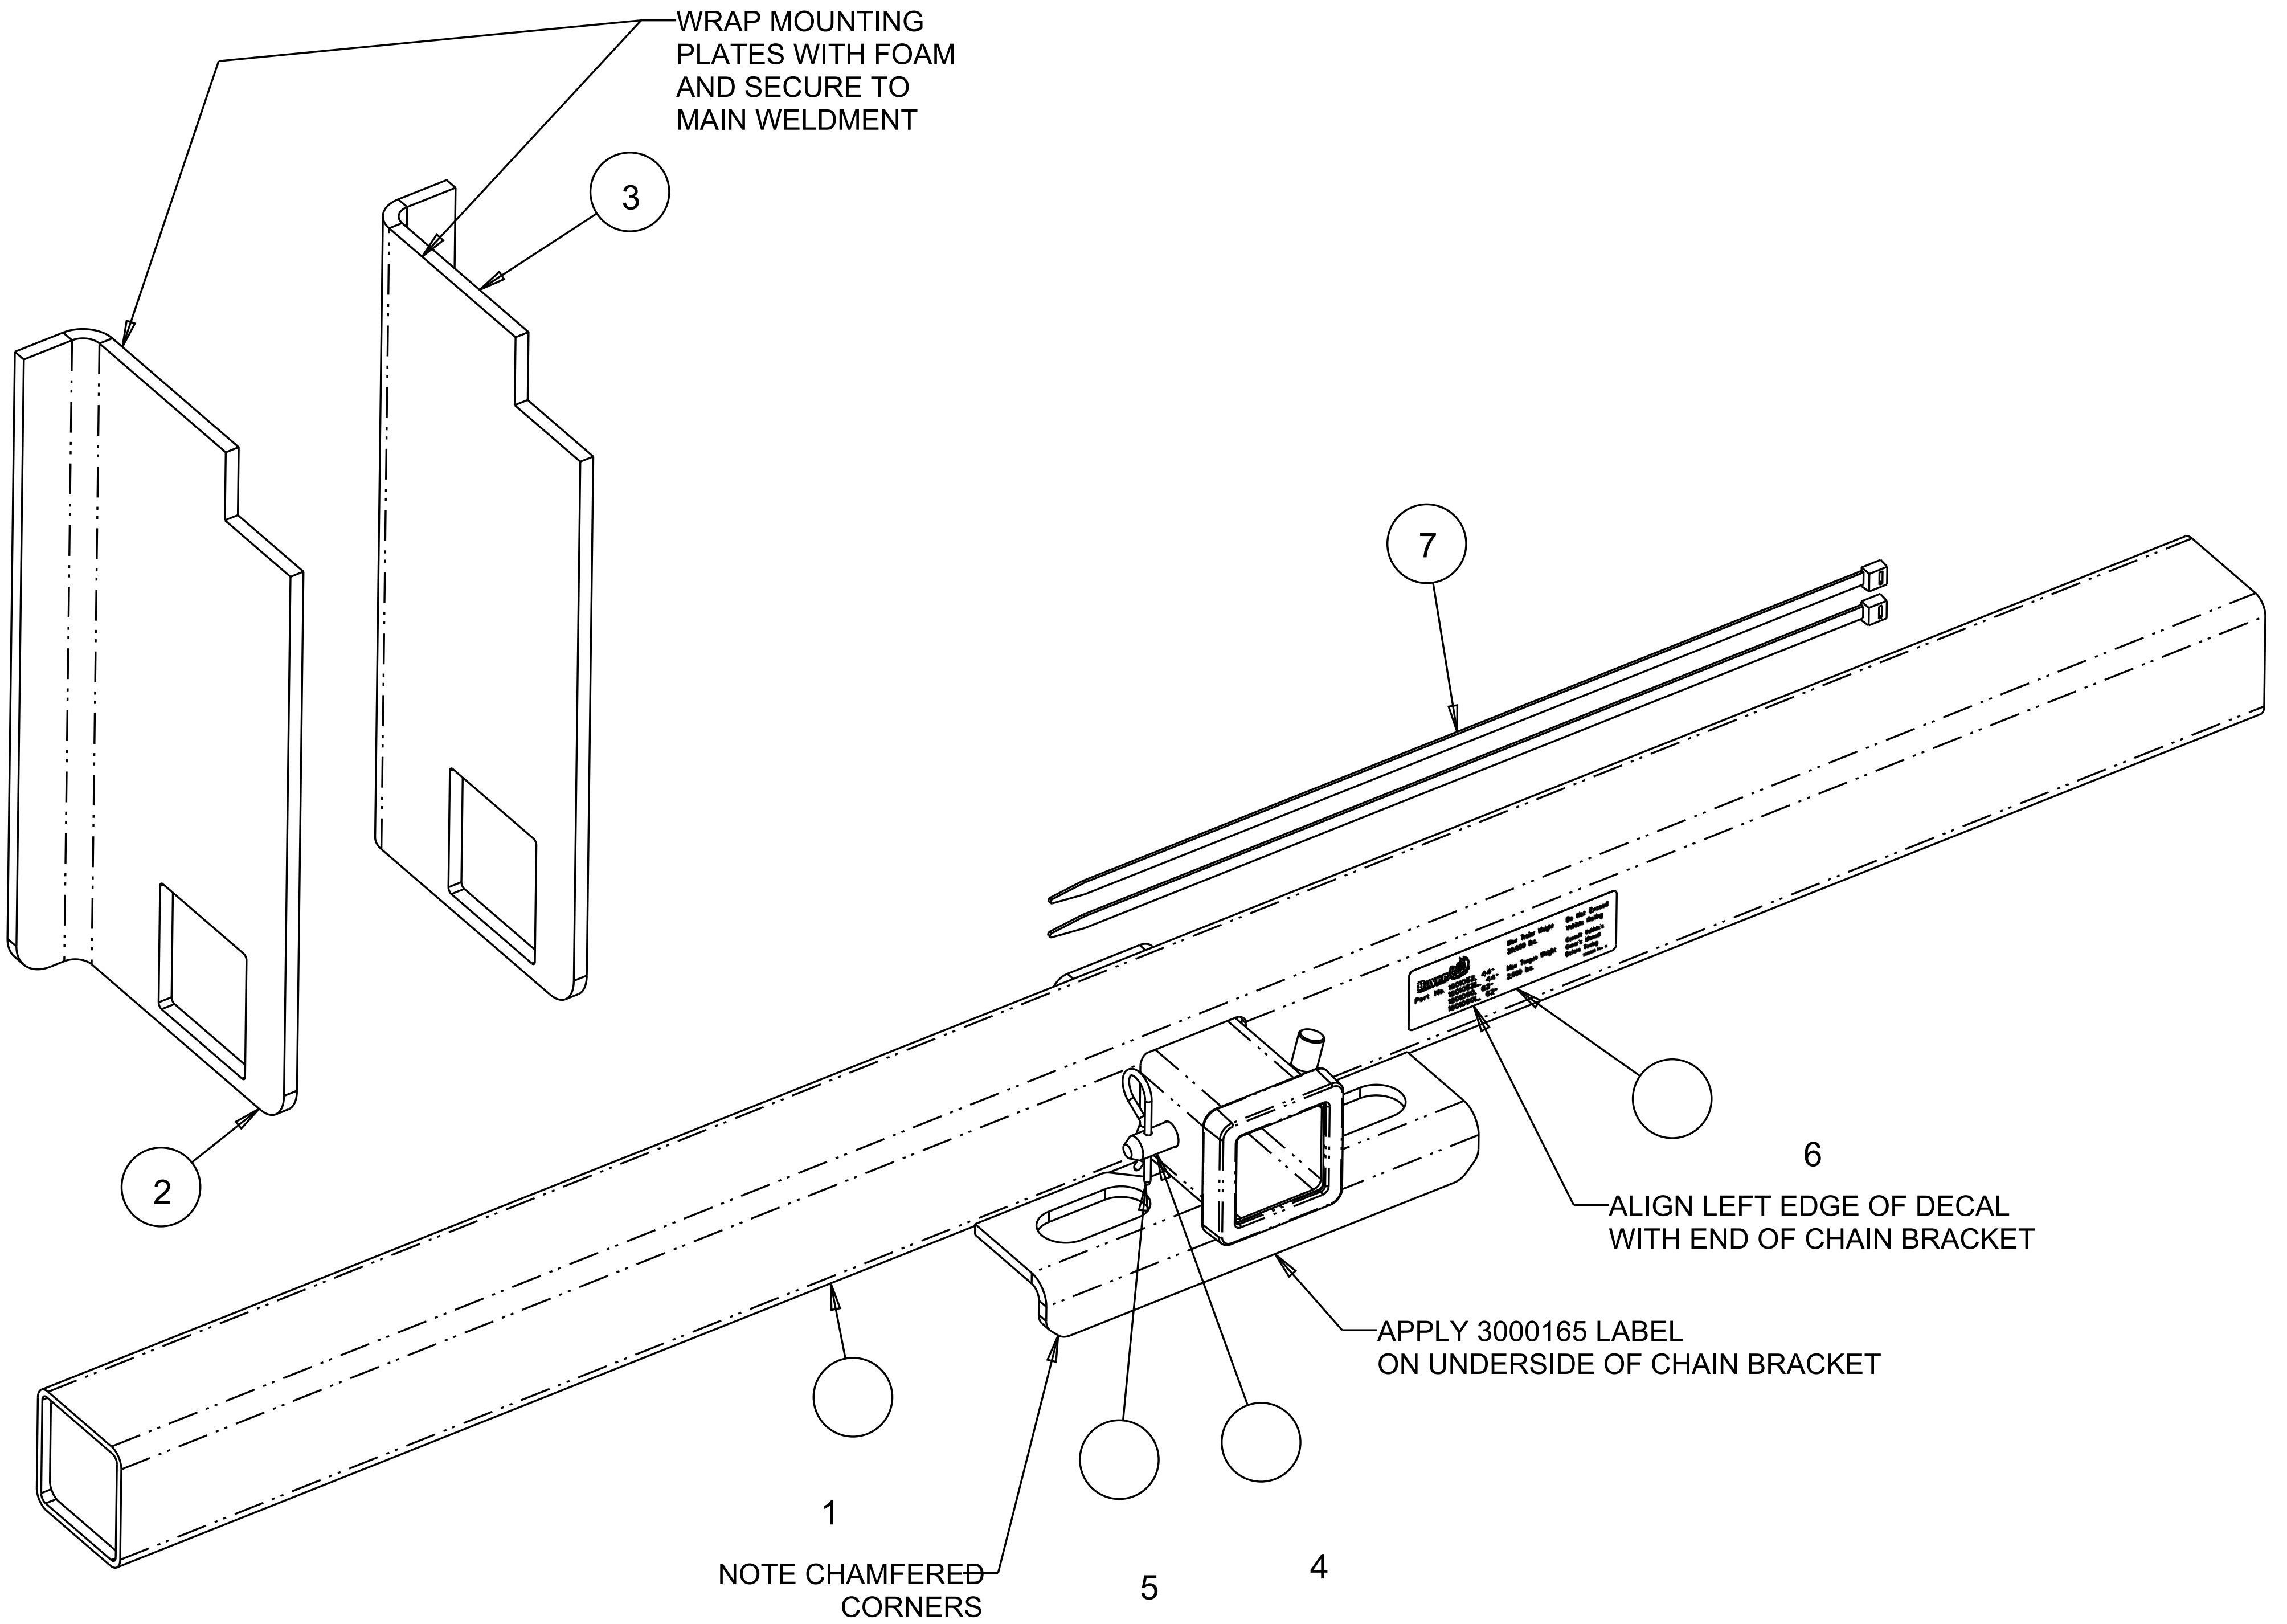

2

3

7

6

6

ALIGN LEFT EDGE OF DECAL
WITH END OF CHAIN BRACKET

APPLY 3000165 LABEL
ON UNDERSIDE OF CHAIN BRACKET

1

NOTE CHAMFERED
CORNERS

5

4

5

4